



Operation/Reference Guide

NXD-430/435/435P

4.3" Modero® Wall/Flush Mount Touch Panels



AMX Limited Warranty and Disclaimer

This Limited Warranty and Disclaimer extends only to products purchased directly from AMX or an AMX Authorized Partner which include AMX Dealers, Distributors, VIP's or other AMX authorized entity.

AMX warrants its products to be free of defects in material and workmanship under normal use for three (3) years from the date of purchase, with the following exceptions:

- Electroluminescent and LCD Control Panels are warranted for three (3) years, except for the display and touch overlay components are warranted for a period of one (1) year.
- Disk drive mechanisms, pan/tilt heads, power supplies, and MX Series products are warranted for a period of one (1) year.
- AMX lighting products are guaranteed to switch on and off any load that is properly connected to our lighting products, as long as the AMX lighting products are under warranty. AMX also guarantees the control of dimmable loads that are properly connected to our lighting products. The dimming performance or quality there of is not guaranteed, impart due to the random combinations of dimmers, lamps and ballasts or transformers.
- AMX software is warranted for a period of ninety (90) days.
- Batteries and incandescent lamps are not covered under the warranty.
- AMX AutoPatch Epica, Modula, Modula Series4, Modula CatPro Series and 8Y-3000 product models will be free of defects in materials and manufacture at the time of sale and will remain in good working order for a period of three (3) years following the date of the original sales invoice from AMX. The three-year warranty period will be extended to the life of the product (Limited Lifetime Warranty) if the warranty card is filled out by the dealer and/or end user and returned to AMX so that AMX receives it within thirty (30) days of the installation of equipment but no later than six (6) months from original AMX sales invoice date. The life of the product extends until five (5) years after AMX ceases manufacturing the product model. The Limited Lifetime Warranty applies to products in their original installation only. If a product is moved to a different installation, the Limited Lifetime Warranty will no longer apply, and the product warranty will instead be the three (3) year Limited Warranty.

All products returned to AMX require a Return Material Authorization (RMA) number. The RMA number is obtained from the AMX RMA Department. The RMA number must be clearly marked on the outside of each box. The RMA is valid for a 30-day period. After the 30-day period the RMA will be cancelled. Any shipments received not consistent with the RMA, or after the RMA is cancelled, will be refused. AMX is not responsible for products returned without a valid RMA number.

AMX is not liable for any damages caused by its products or for the failure of its products to perform. This includes any lost profits, lost savings, incidental damages, or consequential damages. AMX is not liable for any claim made by a third party or by an AMX Authorized Partner for a third party.

This Limited Warranty does not apply to (a) any AMX product that has been modified, altered or repaired by an unauthorized agent or improperly transported, stored, installed, used, or maintained; (b) damage caused by acts of nature, including flood, erosion, or earthquake; (c) damage caused by a sustained low or high voltage situation or by a low or high voltage disturbance, including brownouts, sags, spikes, or power outages; or (d) damage caused by war, vandalism, theft, depletion, or obsolescence.

This limitation of liability applies whether damages are sought, or a claim is made, under this warranty or as a tort claim (including negligence and strict product liability), a contract claim, or any other claim. This limitation of liability cannot be waived or amended by any person. This limitation of liability will be effective even if AMX or an authorized representative of AMX has been advised of the possibility of any such damages. This limitation of liability, however, will not apply to claims for personal injury.

Some states do not allow a limitation of how long an implied warranty last. Some states do not allow the limitation or exclusion of incidental or consequential damages for consumer products. In such states, the limitation or exclusion of the Limited Warranty may not apply. This Limited Warranty gives the owner specific legal rights. The owner may also have other rights that vary from state to state. The owner is advised to consult applicable state laws for full determination of rights.

EXCEPT AS EXPRESSLY SET FORTH IN THIS WARRANTY, AMX MAKES NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. AMX EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED TO THE TERMS OF THIS LIMITED WARRANTY. EXCEPT AS OTHERWISE LIMITED BY APPLICABLE LAW, AMX RESERVES THE RIGHT TO MODIFY OR DISCONTINUE DESIGNS, SPECIFICATIONS, WARRANTIES, PRICES, AND POLICIES WITHOUT NOTICE.

AMX Software License and Warranty Agreement

- **LICENSE GRANT.** AMX grants to Licensee the non-exclusive right to use the AMX Software in the manner described in this License. The AMX Software is licensed, not sold. This license does not grant Licensee the right to create derivative works of the AMX Software. The AMX Software consists of generally available programming and development software, product documentation, sample applications, tools and utilities, and miscellaneous technical information. Please refer to the README.TXT file on the compact disc or download for further information regarding the components of the AMX Software. The AMX Software is subject to restrictions on distribution described in this License Agreement. AMX Dealer, Distributor, VIP or other AMX authorized entity shall not, and shall not permit any other person to, disclose, display, loan, publish, transfer (whether by sale, assignment, exchange, gift, operation of law or otherwise), license, sublicense, copy, or otherwise disseminate the AMX Software. Licensee may not reverse engineer, decompile, or disassemble the AMX Software.
- **ACKNOWLEDGEMENT.** You hereby acknowledge that you are an authorized AMX dealer, distributor, VIP or other AMX authorized entity in good standing and have the right to enter into and be bound by the terms of this Agreement.
- **INTELLECTUAL PROPERTY.** The AMX Software is owned by AMX and is protected by United States copyright laws, patent laws, international treaty provisions, and/or state of Texas trade secret laws. Licensee may make copies of the AMX Software solely for backup or archival purposes. Licensee may not copy the written materials accompanying the AMX Software.
- **TERMINATION.** AMX RESERVES THE RIGHT, IN ITS SOLE DISCRETION, TO TERMINATE THIS LICENSE FOR ANY REASON UPON WRITTEN NOTICE TO LICENSEE. In the event that AMX terminates this License, the Licensee shall return or destroy all originals and copies of the AMX Software to AMX and certify in writing that all originals and copies have been returned or destroyed.
- **PRE-RELEASE CODE.** Portions of the AMX Software may, from time to time, as identified in the AMX Software, include PRE-RELEASE CODE and such code may not be at the level of performance, compatibility and functionality of the GA code. The PRE-RELEASE CODE may not operate correctly and may be substantially modified prior to final release or certain features may not be generally released. AMX is not obligated to make or support any PRE-RELEASE CODE. ALL PRE-RELEASE CODE IS PROVIDED "AS IS" WITH NO WARRANTIES.
- **LIMITED WARRANTY.** AMX warrants that the AMX Software (other than pre-release code) will perform substantially in accordance with the accompanying written materials for a period of ninety (90) days from the date of receipt. AMX DISCLAIMS ALL OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WITH REGARD TO THE AMX SOFTWARE. THIS LIMITED WARRANTY GIVES LICENSEE SPECIFIC LEGAL RIGHTS. Any supplements or updates to the AMX SOFTWARE, including without limitation, any (if any) service packs or hot fixes provided to Licensee after the expiration of the ninety (90) day Limited Warranty period are not covered by any warranty or condition, express, implied or statutory.
- **LICENSEE REMEDIES.** AMX's entire liability and Licensee's exclusive remedy shall be repair or replacement of the AMX Software that does not meet AMX's Limited Warranty and which is returned to AMX in accordance with AMX's current return policy. This Limited Warranty is void if failure of the AMX Software has resulted from accident, abuse, or misapplication. Any replacement AMX Software will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer. Outside the United States, these remedies may not be available. NO LIABILITY FOR CONSEQUENTIAL DAMAGES. IN NO EVENT SHALL AMX BE LIABLE FOR ANY DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR ANY OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OF OR INABILITY TO USE THIS AMX SOFTWARE, EVEN IF AMX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES/COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO LICENSEE.
- **U.S. GOVERNMENT RESTRICTED RIGHTS.** The AMX Software is provided with RESTRICTED RIGHTS. Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph ©(1)(ii) of The Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 or subparagraphs ©(1) and (2) of the Commercial Computer Software Restricted Rights at 48 CFR 52.227-19, as applicable.
- **SOFTWARE AND OTHER MATERIALS FROM AMX.COM MAY BE SUBJECT TO EXPORT CONTROL.** The United States Export Control laws prohibit the export of certain technical data and software to certain territories. No software from this Site may be downloaded or exported (i) into (or to a national or resident of) Cuba, Iraq, Libya, North Korea, Iran, Syria, or any other country to which the United States has embargoed goods; or (ii) anyone on the United States Treasury Department's list of Specially Designated Nationals or the U.S. Commerce Department's Table of Deny Orders. AMX does not authorize the downloading or exporting of any software or technical data from this site to any jurisdiction prohibited by the United States Export Laws.

This Agreement replaces and supersedes all previous AMX Software License Agreements and is governed by the laws of the State of Texas, and all disputes will be resolved in the courts in Collin County, Texas, USA. For any questions concerning this Agreement, or to contact AMX for any reason, please write: AMX License and Warranty Department, 3000 Research Drive, Richardson, TX 75082.

Table of Contents

Introduction	1
NXD-430 Modero Wall/Flush Mount Touch Panel	1
Common Application.....	1
Features	1
Product Specifications	2
NXD-435 Modero Wall/Flush Mount Touch Panel	4
Common Application.....	4
Features	4
NXD-435 Specifications	5
NXD-435P 4.3" Portrait Wall/Flush Mount Touch Panel	7
Side Connectors.....	8
Ethernet and Mini-USB Ports.....	8
Capacitive Touch Buttons	8
Front Setup Access Button.....	8
Installation	9
Overview	9
Removing the Faceplate	9
Installation of an NXD-430 or NXD-435 Touch Panel	10
Pre-Wall Installation of the Rough-In Box.....	10
Installing the NXD-430 panel within a Rough-In Box.....	12
Installing the NXD-430 and NXD-435 into Drywall	13
Installing the NXD-430 and NXD-435 into a Flat Surface using #4 screws.....	15
Installing an NXD-430 or NXD-435 into a Rack Mount Kit (NXA-RK5)	17
Wiring Guidelines for the NXD-430 and NXD-435 Panels	18
Ethernet/RJ-45 Port: Connections and Wiring	18
NXD-430/435 Touch Panel Accessories	19
Overview	19
PS-POE-AF PoE Injector.....	19
Panel Calibration	21
Overview	21
Calibrating the Modero Panel.....	21
Configuring Communication	23
Overview	23
Modero Setup and System Connection	23
Configuring and Using USB with a Virtual Master	25
Step 1: Set up the Panel and PC for USB Communication	25

Step 2: Confirm the Installation of the USB Driver on the PC	25
Step 3: Confirm and View the Current AMX USB Device Connections.....	27
Step 4: Use USB to Configure a Virtual Master (using NetLinx Studio)	29
Step 5: Confirm and View the Current AMX USB Device Connections.....	30
Configuring a Wired Ethernet Connection.....	31
Step 1: Configure the Panel's Wired IP Settings.....	31
IP Settings section - Configuring a DHCP Address over Ethernet	31
IP Settings section - Configuring a Static IP Address over Ethernet.....	33
Step 2: Choose a Master Connection Mode Setting	33
Step 3: Configure an Ethernet Connection Type	34
Master Tab - Virtual Master Communication Over Ethernet	34
Master Connection Tab - NetLinx Master Ethernet IP Address - URL Mode	37
Master Connection Tab - NetLinx Master Ethernet IP Address - Listen Mode	37
Master Connection Tab - NetLinx Master Ethernet IP Address - Auto Mode	38
Using the NetLinx Master to Control the Panel	38
Upgrading Modero Firmware	41
Overview	41
Upgrading the Firmware via the USB port.....	41
Step 1: Configure the panel for a USB Connection Type	41
Step 2: Prepare NetLinx Studio For Communication Via the USB port	43
Step 3: Confirm and Upgrade the Firmware Via the USB port.....	44
Setup Pages and Descriptions	47
Overview	47
Setup	47
Connection Status Icon.....	48
Display	48
Audio	49
Panel Information.....	50
Panel Information - Info Tab	50
Panel Information Page - Config Tab	51
Panel Information Page - File Tab.....	52
File Information Page - Project Tab	53
Protected Setup.....	53
Date/Time Page	54
Protected Setup Page.....	56
Protected Settings Page Icons	56
Security Settings	59
System Settings Page.....	60
System Settings Page - IP Tab.....	60

System Settings - Master Tab.....	62
System Settings - USB Tab	63
Calibrate Page.....	64
G4 Web Control Page	65
Password Page	67
Panel Statistics Page	68
Panel Statistics - ICSP Tab	68
Panel Statistics - Blinks Tab	69
Panel Statistics - Wired Tab.....	70
Checking the Panel Statistics	70
Refreshing the Panel Statistics	70
Clearing the Panel Statistics.....	70
Connection Utility	71
Using the Connection Utility	71
Programming	73
Overview	73
Button Assignments	73
Page Commands	73
@APG	73
@CPG	73
@DPG	74
@PDR.....	74
@PHE.....	74
@PHP	74
@PHT	74
@PPA	75
@PPF	75
@PPG.....	75
@PPK.....	75
@PPM	76
@PPN.....	76
@PPT	76
@PPX.....	76
@PSE	77
@PSP	77
@PST	77
PAGE.....	77
PPOF	78
PPOG.....	78
PPON	78
Programming Numbers for Colors, Fonts, and Borders.....	79
RGB Triplets and Names For Basic 88 Colors	79
Font Styles and ID Numbers	80
Border Styles and Programming Numbers.....	80

TPD4 Border Styles by Name	81
"^" Button Commands	82
^ANI	82
^APF	83
^BAT	83
^BAU	83
^BCB	84
^BCF	84
^BCT	84
^BDO	85
^BFB	85
^BIM	85
^BMC	86
^BMF	87
^BMI	89
^BML	89
^BMP	90
^BNC	90
^BNN	90
^BNT	90
^BOP	91
^BOR	91
^BPP	91
^BRD	92
^BSF	92
^BSM	92
^BSP	92
^BVL	93
^BVN	93
^BVP	93
^BVT	93
^BWW	93
^CPF	94
^DPF	94
^ENA	94
^FON	94
^GDI	95
^GIV	95
^GLH	95
^GLL	95
^GRD	96
^GRU	96
^GSC	96
^GSN	97
^ICO	97
^JSB	98
^JSI	98
^JST	99
^MBT	99

^MDC.....	99
^SHO.....	99
^TEC.....	100
^TEF.....	100
^TOP.....	100
^TXT.....	100
Text Effect Names	101
^UNI.....	101
Button Query Commands	102
?BCB.....	103
?BCF.....	103
?BCT.....	104
?BMP.....	104
?BOP.....	105
?BRD.....	105
?BWW.....	106
?FON.....	106
?ICO.....	107
?JSB.....	107
?JSI.....	108
?JST.....	108
?TEC.....	109
?TEF.....	109
?TXT.....	110
Panel Runtime Operations	111
ABEEP.....	111
ADBEEP.....	111
@AKB.....	111
AKEYB.....	111
AKEYP.....	111
AKEYR.....	111
@AKP.....	112
@AKR.....	112
BEEP.....	112
BRIT.....	112
@BRT.....	112
DBEEP.....	112
@EKP.....	113
PKEYP.....	113
@PKP.....	113
SETUP.....	113
SLEEP.....	113
@TKP.....	114
TPAGEON.....	114
TPAGEOFF.....	114
@VKB.....	114
WAKE.....	114
Input Commands.....	115

^CAL.....	115
^KPS.....	115
^VKS.....	115
Embedded Codes	116
Panel Setup Commands	117
^MUT.....	117
@PWD.....	117
^PWD.....	117
@RPP.....	117
^VOL.....	117
Dynamic Image Commands.....	118
^BBR.....	118
^RAF.....	118
^RFR.....	118
^RAF, ^RMF - Embedded Codes	119
^RMF	119
^RSR	119
Escape Sequences	120
\$DV.....	120
\$SY.....	120
\$IP.....	120
\$HN	120
\$MC.....	120
\$ID.....	120
\$PX.....	120
\$PY	120
\$ST.....	120
\$AC.....	120
\$AP.....	120
\$CC.....	120
\$CP.....	120
\$LC.....	120
\$LP.....	120
\$BX.....	120
\$BY	120
\$BN.....	120
Troubleshooting	121
Appendix A - Text Formatting	125
Text Formatting Codes for Bargraphs/Joysticks.....	125
Text Area Input Masking.....	126
Input Mask Character Types.....	126
Input Mask Ranges	127
Input Mask Next Field Characters	127
Input Mask Operations.....	127
Input Mask Literals	127

Input mask output examples	128
URL Resources	128
Special Escape Sequences.....	129
Appendix B - Complex Script Support	131
Overview	131

Introduction

NXD-430 Modero Wall/Flush Mount Touch Panel

With a screen size measuring just 4.3 inches across, the NXD-430 is the ideal solution for a wide range of applications in the home or office. Engineered for style, value, efficiency and functionality; its bright touch screen, sleek form factor, ultra-thin, two-inch mounting depth, Power over Ethernet (PoE) capability, and value oriented price make the NXD-430 the perfect entry point to home or building automation. The NXD-430 also includes a capacitive-touch external button for executing a quick function or device.



FIG. 1 NXD-430 Modero Wall/Flush Mount Touch Panel

Common Application

The NXD-430 is perfect for wall/flush mount control in a variety of cost-sensitive applications where touch panel control offers many more control/automation possibilities than a similarly priced keypad or remote: locations such as entry ways, bedrooms, bathrooms, kitchens, podiums and other surface mount locations.

Features

- Compact 4.3" size
- 16x9 WQVGA color display
- Screen resolution (HV): 480 x 272 pixels
- Available in a high-gloss and textured matte combination finish in your choice of black or white
- Power over Ethernet (PoE)
- 128 MB Standard memory / 256 MB Flash memory
- 1 capacitive-touch external button
- Ultra-thin 2" depth for versatile installation options
- Locking tabs for quick and easy installation
- Translucent back box
- Supports AMX Resource Management Suite®

The NXD-430 comes in black (NXD-430-BL, **FG2262-01**) and white (NXD-430-WH, **FG2262-02**).

This panel includes a mini-USB port for programming and one main NetLinx-programmable button. The button utilizes capacitive touch, where the button reacts with the electrical conductivity of the user's skin. For more information, please refer to the *Capacitive Touch Buttons* section on page 8.

Key features include:

- Support of AMX's 4th generation (G4) graphics which provide higher brightness, richer colors, and deeper contrast. The G4 graphics technology is supported by the TPDesign4 Touch Panel Design application, available for download from www.amx.com.
- Display of images on a large 16:9 image format, while providing a wide 80/80/60/80 viewing angle.
- Upgradable firmware that can be uploaded via the mini-USB port in the back of the device.

Product Specifications

The specifications for the NXD-430 4.3" Modero Touch Panel (**FG2262-01/02**) include:

NXD-430 (FG2262-01/02) Specifications	
Dimensions (HWD):	<ul style="list-style-type: none"> • NXD-430 (with faceplate): 4.13" x 5.5" x 2.13" (10.48 cm x 13.97 cm x 5.40 cm) • CB-TP5i Rough-In/Wallbox (<i>optional</i>): 4.27" x 5.14" x 3.40" (10.86 cm x 13.06 cm x 8.64 cm)
Weight:	<ul style="list-style-type: none"> • 0.65 lbs (0.29 kg)
Power Requirements:	<ul style="list-style-type: none"> • PoE Powered - No local Power Supply supported. • Max power draw: 5.5W.
Memory (factory default):	<ul style="list-style-type: none"> • 128 MB SDRAM • 256 MB integrated Flash Memory (not upgradeable - factory programmed)
Panel LCD Parameters:	<ul style="list-style-type: none"> • Aspect ratio: 16 x 9 • Maximum brightness (luminance): 280 cd/m² • Channel transparency: 8-bit Alpha blending • Contrast ratio: 250:1 • Display colors: 256 thousand colors (18-bit color depth) • Dot/pixel pitch: 0.14 mm • Panel type: WQVGA • Screen resolution: 480 x 262 pixels (HV) @ 60 Hz frame frequency • Viewing dimensions: 2 3/16" x 3 13/16" (5.56 cm x 9.68 cm)
Active Screen Area:	2 1/8" x 3 3/4" (5.40 cm x 9.53 cm)
Viewing Angles:	Left/Right/Up/Down: 80/80/60/80
Front Panel Components:	
Front Setup Access button:	Capacitive touch button provides both access to the <i>Setup</i> and <i>Calibration</i> page and toggles the panel between a "sleep" or "wake" state. "Sleep" status means the backlight is Off. This button is also user-programmable.
Side Panel Connectors:	
Ethernet 10/100 port:	<ul style="list-style-type: none"> • RJ-45 port for 10/100 Mbps communication. The Ethernet port automatically negotiates the connection speed (10 Mbps or 100 Mbps), and whether to use half duplex or full duplex mode. Power is supplied through Power Over Internet (PoE) • NXD-430 panels communicate with the NetLinx Master using the ICSP protocol over Ethernet. • LEDs show communication activity, connections, speed, and mode information: <i>L/A-link/activity</i> - yellow LED lights On when the Ethernet cables are connected and terminated correctly and then blinks when receiving Ethernet data packets. <i>SPD-speed</i> - Green LED lights On when the connection speed is 100 Mbps and turns Off when the speed is 10 Mbps.

NXD-430 Specifications (FG2262-01/02) (Cont.)	
Mini-USB connector:	<ul style="list-style-type: none"> 5-pin Mini-USB connector used for programming, firmware update, and touch panel file transfer between the PC and the target panel. <p>Note: When connecting the panel to PC using a CC-USB (or compatible) cable, be sure to power the panel On before attempting to connect the USB cable from the PC to the mini-USB port on the panel. Refer to the Configuring and Using USB with a Virtual Master section on page 25 for more information.</p>
Button Assignments:	<p>Button assignments can only be adjusted in TPD4 and not on the panel.</p> <ul style="list-style-type: none"> Button channel range: 1 - 4000 button push and feedback (per address port) Button variable text range: 1 - 4000 (per address port) Button states range: 1 - 256 (General Button; 1 = Off State, 2 = On State) Level range: 1 - 600 (default level value 0-255, can be set up to 1-65535) Address port range: 1 - 100
Certifications:	<ul style="list-style-type: none"> FCC Part 15 Class B CE IEC 60950 RoHS
Operating / Storage Environment:	<ul style="list-style-type: none"> Operating Temperature: 0° C (32° F) to 40° C (104° F) Operating Humidity: 5% - 85% relative humidity (non-condensing) Storage Temperature: -20° C (-4° F) to 60° C (140° F) Storage Humidity: 5% - 85% RH
Included Accessories:	<ul style="list-style-type: none"> NXD-430 Installation Guide (93-2262-01)
Other AMX Equipment:	<ul style="list-style-type: none"> CB-TP5i Rough-In/Wallbox (FG038-11) Back Cover for CB-TP5i Rough-In/Wallbox (FG038-12) NXA-BE2P-430 Portrait Bezel Kit (FG2262-10/11) NXA-SMT43X Surface Mount Box, White (FG2262-16) NXA-TTS43X Table Top Stand (FG2262-40) PS-POE-AF PoE Injector (FG423-80) CC-USB Type-A to Mini-B 5-wire programming cable (FG10-5965) NXA-RK5 Rack Mount Kit for 5" Wall Mount panels (FG2904-55): <ul style="list-style-type: none"> 5" Rackmount Four Screws, #10-32 x.625, PH Truss, BLK Four Washers, #10, Black Nylon Three Screws, #4-40 x.250, PPH, BLK

NXD-435 Modero Wall/Flush Mount Touch Panel

With a screen size measuring just 4.3 inches across, the NXD-435 is the ideal solution for a wide range of applications in the home or office. Engineered for style, value, efficiency and functionality; its bright touch screen, sleek form factor, ultra-thin, two-inch mounting depth, Power over Ethernet (PoE) capability, and value oriented price make the NXD-435 the perfect entry point to home or building automation. It also includes five capacitive-touch external buttons for executing quick functions or devices.

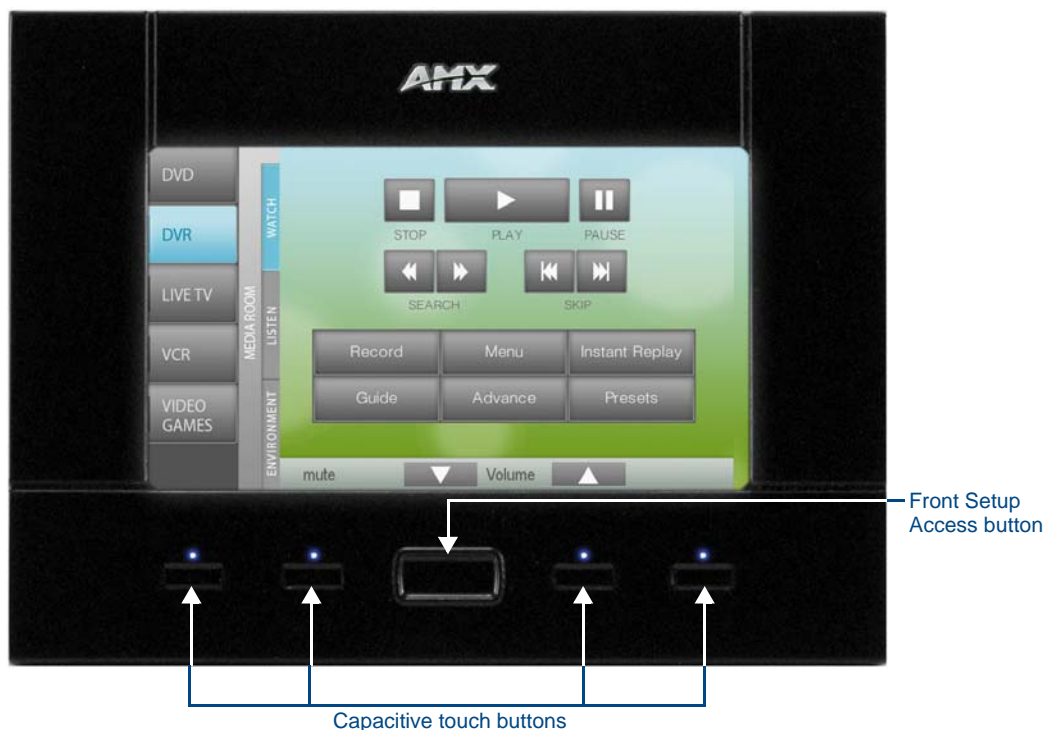


FIG. 2 NXD-435 Wall/Flush Mount Touch Panel

Common Application

The NXD-435 is perfect for wall/flush mount control in a variety of cost-sensitive applications where touch panel control offers many more control/automation possibilities than a similarly priced keypad or remote: locations such as entry ways, bedrooms, bathrooms, kitchens, podiums and other surface mount locations.

Features

- Compact 4.3" size
- 16x9 WQVGA color display
- Screen resolution (HV): 480 x 272 pixels
- Available in a high-gloss and textured matte combination finish in your choice of black or white
- Power over Ethernet (PoE)
- 128 MB Standard memory / 256 MB Flash memory
- 5 capacitive-touch external buttons
- Ultra-thin 2" depth for versatile installation options
- Locking tabs for quick and easy installation
- Translucent back box
- Supports AMX Resource Management Suite®



The NXD-435 4.3" Modero Wall/Flush Mount Touch Panel (FIG. 2) offers the same functionality as the NXD-430, but it includes four additional capacitive touch buttons, two on either side of the main button.

The NXD-435 comes in black (NXD-435-BL, **FG2262-03**) and white (NXD-435-WH, **FG2262-04**).

This panel includes a mini-USB port for programming, one main NetLinX-programmable button, and four smaller buttons. All five buttons utilize capacitive touch, where the button reacts with the electrical conductivity of the user's skin.

For more information, please refer to the *Capacitive Touch Buttons* section on page 8.

Key features include:

- Support of AMX's 4th generation (G4) graphics which provide higher brightness, richer colors, and deeper contrast. The G4 graphics technology is supported by the TPDesign4 Touch Panel Design application, available for download from www.amx.com.
- Display of images on a large 16:9 image format, while providing a wide 80/80/60/80 viewing angle.
- Upgradable firmware that can be uploaded via the mini-USB port in the back of the device.

NXD-435 Specifications

The specifications for the NXD-435 4.3" Modero Touch Panel (**FG2262-03/04**) include:

NXD-435 (FG2262-03/04) Specifications	
Dimensions (HWD):	<ul style="list-style-type: none"> • NXD-435 (with faceplate): 4.13" x 5.5" x 2.13" (10.48 cm x 13.97 cm x 5.40 cm) • CB-TP5i Rough-In/Wallbox (<i>optional</i>): 4.27" x 5.14" x 3.40" (10.86 cm x 13.06 cm x 8.64 cm)
Weight:	0.65 lbs (0.29 kg)
Power Requirements:	<ul style="list-style-type: none"> • PoE Powered - No local Power Supply supported. • Max power draw: 5.5W.
Memory (factory default):	<ul style="list-style-type: none"> • 128 MB SDRAM • 256 MB integrated Flash Memory (not upgradeable - factory programmed)
Panel LCD Parameters:	<ul style="list-style-type: none"> • Aspect ratio: 16 x 9 • Maximum brightness (luminance): 200 cd/m² • Channel transparency: 8-bit Alpha blending • Contrast ratio: 250:1 • Display colors: 256 thousand colors (18-bit color depth) • Dot/pixel pitch: 0.14 mm • Panel type: WQVGA • Screen resolution: 480 x 262 pixels (HV) @ 60 Hz frame frequency • Viewing dimensions: 2 3/16" x 3 13/16" (5.56 cm x 9.68 cm)
Active Screen Area:	2 1/8" x 3 3/4" (5.40 cm x 9.53 cm)
Viewing Angles:	Left/Right/Up/Down: 80/80/60/80
Front Panel Components:	
Front Setup Access Button:	<ul style="list-style-type: none"> • Provides both access to the <i>Setup</i> and <i>Calibration</i> page and toggles the panel between a "sleep" or "wake" state. "Sleep" status means the backlight is Off.
Capacitive touch buttons:	<ul style="list-style-type: none"> • Allow NetLinX-programmable actions when pressed.
Ethernet 10/100 port:	<ul style="list-style-type: none"> • RJ-45 port for 10/100 Mbps communication. The Ethernet port automatically negotiates the connection speed (10 Mbps or 100 Mbps), and whether to use half duplex or full duplex mode. Power is supplied through Power Over Internet (PoE) • NXD-435 panels communicate with the NetLinX Master using the ICSP protocol over Ethernet. • LEDs show communication activity, connections, speed, and mode information: <i>L/A-link/activity</i> - yellow LED lights On when the Ethernet cables are connected and terminated correctly and then blinks when receiving Ethernet data packets. <i>SPD-speed</i> - Green LED lights On when the connection speed is 100 Mbps and turns Off when the speed is 10 Mbps.

NXD-435 (FG2262-03/04) Specifications (Cont.)	
Mini-USB connector:	<p>5-pin Mini-USB connector used for programming, firmware update, and touch panel file transfer between the PC and the target panel.</p> <p>Note: When connecting the panel to PC using a CC-USB (or compatible) cable, be sure to power the panel On before attempting to connect the USB cable from the PC to the mini-USB port on the panel. Refer to the Configuring and Using USB with a Virtual Master section on page 25 for more information.</p>
Button Assignments:	<p>Button assignments can only be adjusted in TPD4 and not on the panel.</p> <ul style="list-style-type: none"> • Button channel range: 1 - 4000 button push and feedback (per address port) • Button variable text range: 1 - 4000 (per address port) • Button states range: 1 - 256 (General Button; 1 = Off State, 2 = On State) • Level range: 1 - 600 (default level value 0-255, can be set up to 1-65535) • Address port range: 1 - 100
Certifications:	<ul style="list-style-type: none"> • FCC Part 15 Class B • CE • IEC 60950 • RoHS
Operating / Storage Environment:	<ul style="list-style-type: none"> • Operating Temperature: 0° C (32° F) to 40° C (104° F) • Operating Humidity: 5% - 85% relative humidity (non-condensing) • Storage Temperature: -20° C (-4° F) to 60° C (140° F) • Storage Humidity: 5% - 85% RH
Included Accessories:	<ul style="list-style-type: none"> • NXD-435 Installation Guide (93-2262-01)
Other AMX Equipment:	<ul style="list-style-type: none"> • CB-TP5i Rough-In/Wallbox (FG038-11) • Back Cover for CB-TP5i Rough-In/Wallbox (FG038-12) • NXA-BE2P-430 Portrait Bezel Kit for the NXD-430 (FG2262-10/11) • NXA-SMT43X Surface Mount Box, White (FG2262-16) • NXA-TTS43X Table Top Stand(FG2262-40) • PS-POE-AF PoE Injector (FG423-80) • CC-USB Type-A to Mini-B 5-wire programming cable (FG10-5965) • NXA-RK5 Rack Mount Kit for 5" Wall Mount panels (FG2904-55): <ul style="list-style-type: none"> - 5" Rackmount - Four Screws, #10-32 x.625, PH Truss, BLK - Four Washers, #10, Black Nylon - Three Screws, #4-40 x.250, PPH, BLK

NXD-435P 4.3" Portrait Wall/Flush Mount Touch Panel

The NXD-435P portrait configuration touch panel allows for Modero Touch Panel functionality in a vertical form factor, perfect for keypad replacement in a room or schedule display outside of a room (FIG. 3).

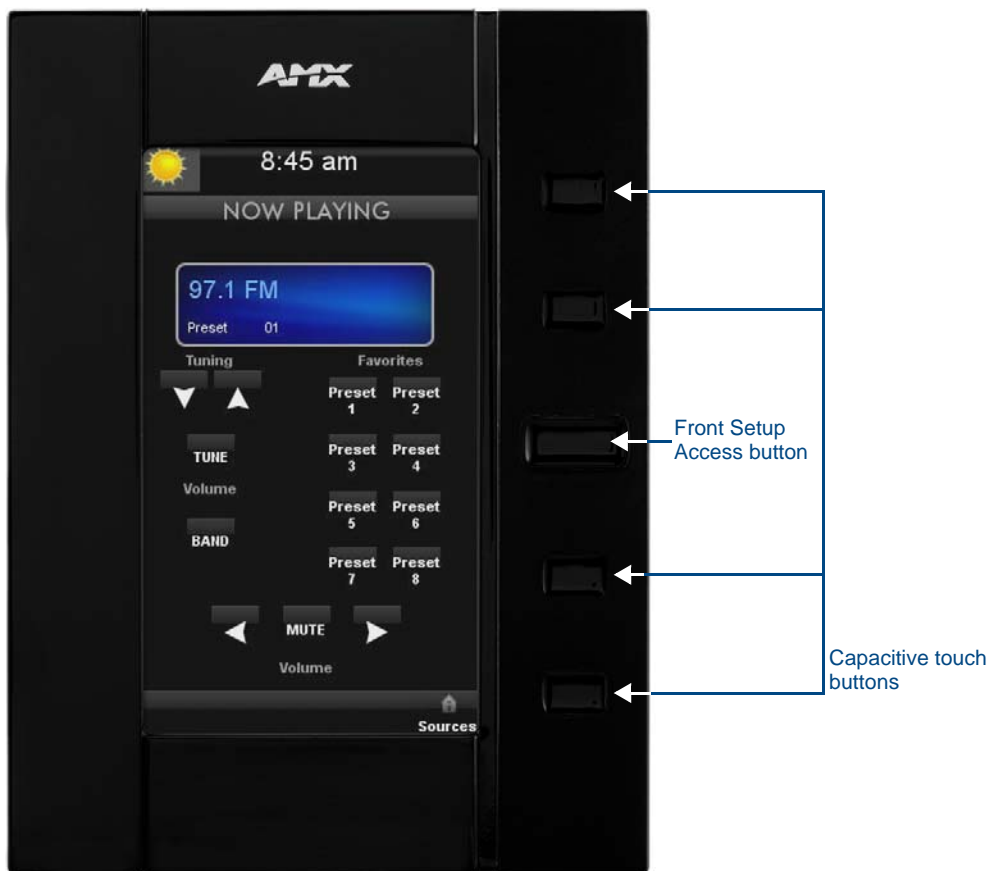


FIG. 3 NXD-435P 4.3" Portrait Wall/Flush Mount Touch Panel

Users can quickly execute a function or command using the stylish capacitive touch buttons along the side of the Touch Panel.

Aside from portrait-configured setup pages, the installation and configuration of the NXD-435P is identical to that of the NXD-435.

The NXD-435P is available in black (NXD-435P-BL: **FG2262-14**) and white (NXD-435P-WH: **FG2262-15**).

Side Connectors

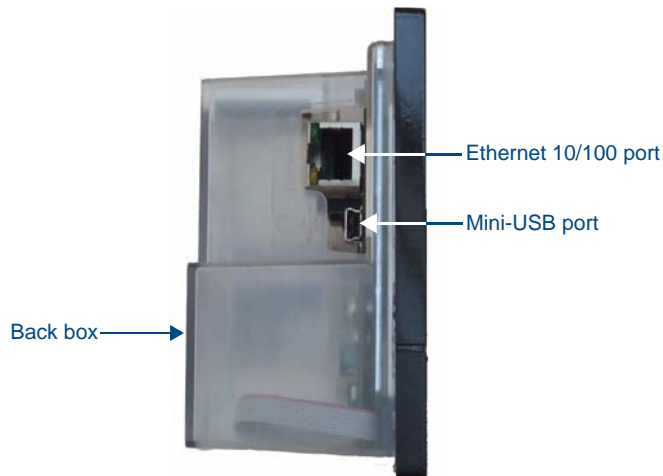


FIG. 4 Connector layout on the NXD-435

Ethernet and Mini-USB Ports

The NXD-430 and NXD-435 have no power input port. Instead, all power is supplied via the Power over Ethernet (PoE) protocol. With PoE, the power is supplied directly through the Ethernet port through the PS-POE-AF PoE Injector, available from AMX.

- For more information, refer to the *PS-POE-AF PoE Injector* section on page 19.
- The mini-USB port is used solely for programming the touch panel. For more information on software upgrading, refer to the *Upgrading the Firmware via the USB port* section on page 41.

Capacitive Touch Buttons

The NXD-430 and NXD-435 utilize capacitive touch buttons, where the button reacts with the electrical conductivity of the user's skin.

- This allows the touch panel to be used in situations where excessive humidity might affect the function of standard touch panel buttons.
- This also allows the button to resist wear and dirt, as this button does not have any actual physical button to depress.
- Each button has one green LED above it, which lights when the button makes contact.



Because of the behavior of capacitive touch, the buttons do not require hard pressing to get a response. A touch that includes as much skin surface area as possible, such as the whole of the thumb, works better than hard pressing.

The NXD-430 has one large capacitive touch button and the NXD-435 has one large button and four smaller buttons, all on the front of the device.

Front Setup Access Button

The main large button, known as the **Front Setup Access** button, has several uses:

- Press the button once to start a previously programmed function, or to turn off the display if not previously programmed.
- Press and hold the button for 6 seconds to put the device into *Setup Mode* (please see the *Setup* section on page 47 for more information).
- Press and hold the button for 9 seconds to enter *Calibration Mode* (please see the *Panel Calibration* section on page 21 for more information).
- Press and hold the button for 20 seconds to reboot the panel.

The additional buttons on the NXD-435 may be programmed for individual functions. These buttons must be programmed for functionality through TPDesign 4, and cannot be programmed through the touch panel.

Installation

Overview

While the NXD-430 and NXD-435 are designed to fit into pre-existing NXD-CV5 touch panel sites, the actual installation differs from that of the NXD-CV5 in several significant ways. The NXD-430 can be installed either directly into the (optional) CB-TP5i Rough-In Box or into another solid surface environment, using either solid surface screws or the included locking tabs for different mounting options.

The NXD-430 is contained within a clear outer housing known as the back box (FIG. 5). This back box is removed when installing the device into a wall or into a Rough-In Box. Because of the backbox, the device may be installed into either a pre-wall surface using a CB-TP5i Rough-In/wallbox, or into a solid surface using the included locking tabs or either solid surface or drywall screws.

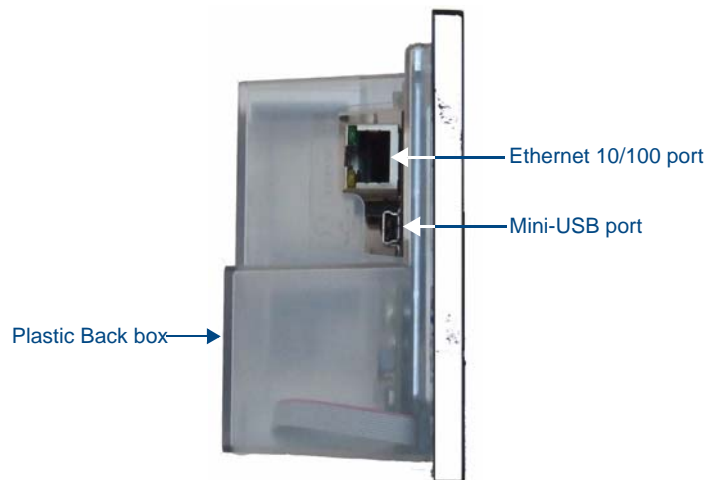


FIG. 5 NXD-430 - Side view



Make sure to remove the protective plastic cover from the LCD. If the cover is not removed, the panel may not respond properly to touch points on the LCD or allow proper screen calibration.

Removing the Faceplate

The faceplate on the NXD-430 and NXD-435 may be removed and replaced with another faceplate at any time. Replacement faceplates come in black (NXD-430: **60-2262-01**; NXD-435: **60-2262-03**) and white (NXD-430: **60-2262-02**; NXD-435: **60-2262-04**).

Because the device is installed against a wall, the faceplate must be removed carefully to prevent the two top prongs on the underside of the faceplate from being broken, and to protect the connector joining the capacitive touch buttons to the device. To remove the faceplate:

1. Gently lift up on the faceplate from the bottom. Do NOT pull up from the sides or the top.
2. Let the faceplate fall forward from the top of the device and let it pivot from the bottom.
3. Carefully detach the capacitive touch 10-pin female connector from the faceplate. Facing you, the connector is on the bottom left corner of the device and on the bottom right corner of the faceplate (FIG. 6).

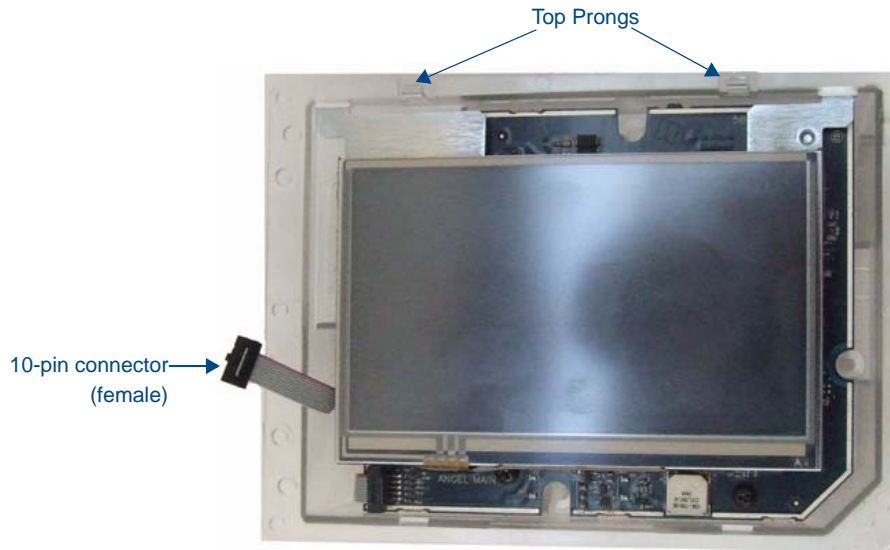


FIG. 6 View of NXD-435 with faceplate removed

4. To install a new faceplate, rejoin the capacitive touch connector to the male 10-pin connector on the new faceplate and place it back onto the device. Be careful not to break the two prongs at the top of the device.



While the faceplates of the NXD-430 and NXD-435 can be replaced with another of a different color, the faceplate for an NXD-430 cannot be used for an NXD-435 and vice versa.

Each device detects whether the faceplate installed onto the front is of the correct type, and the device's buttons will not function if an incorrect faceplate is installed.

Installation of an NXD-430 or NXD-435 Touch Panel

The NXD-430 and NXD-435 can be installed either directly into the (optional) CB-TP5i Rough-In Box or into another solid surface environment, using solid surface screws or the included locking tabs as mounting options. The following sections describe mounting the touch panel directly into a pre-wall rough-in box, a solid surface, drywall, or an NXA-RK5 Rack Mount Kit.

Pre-Wall Installation of the Rough-In Box

The CB-TP5i Rough-In Box (**FG038-11**) is an optional metallic box that is secured onto a stud/beam in a **pre-wall** setting, where no walls are present. Installation procedures and configurations can vary, depending on the installation environment.

This section describes the installation procedures for the most common installation scenarios.



In order to guarantee a stable installation of the NXD-430 or NXD-435, the distance between the CB-TP5i and the outer wall surface must be a minimum of .50 inches (1.27cm) and a maximum of .875 inches (2.22cm).



Cutting out the surface slightly smaller than what is outlined in the installation drawings, to allow any necessary cutout adjustments, is highly recommended.

1. Attach the optional Back Cover for the CB-TP5i (**FG038-12**) if necessary.
2. Fasten the CB-TP5i Rough-In Box to the stud through the holes on the Stud Mounting tabs (FIG. 7), using either nails or screws.

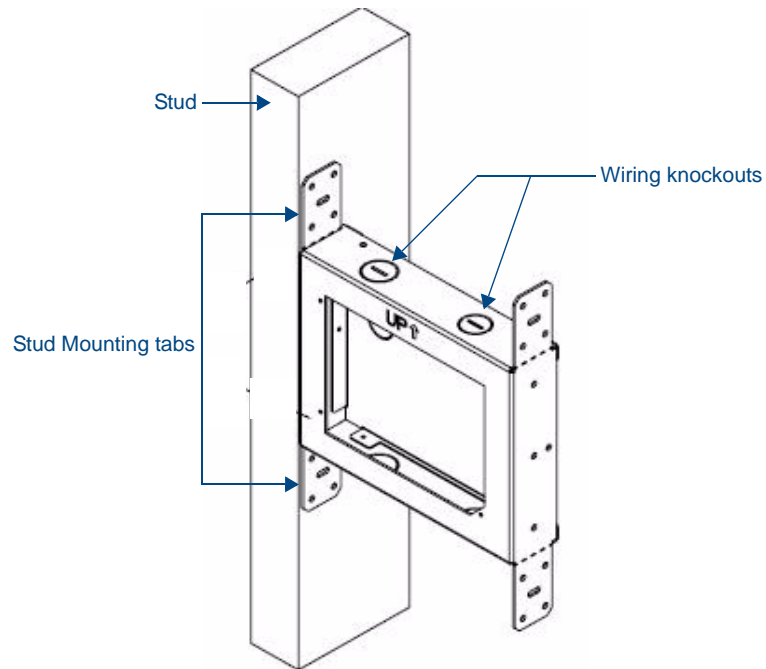


FIG. 7 CB-TP5i Rough-In Box components

- 3.** Remove the appropriate wiring knockouts from the rough-in box (FIG. 7) to accommodate the cables being threaded through to the touch panel.
- 4.** Thread the incoming Ethernet and USB wiring through the knockouts.
 - Use of the left wiring knockouts are recommended with this installation.
 - Leave enough slack in the wiring to accommodate any re-positioning of the panel.
- 5.** Install the drywall/sheetrock before inserting the device into the CB-TP5i.

Installing the NXD-430 panel within a Rough-In Box

The Rough-In Box must be mounted prior to continuing this section. Refer to the procedures in the *Pre-Wall Installation of the Rough-In Box* section on page 10 for detailed pre-wall installation instructions.



Verify that all necessary cables have been threaded through the knockouts on the left of the Rough-In Box and the connections have been tested prior to installation of the NXD-430.

1. Remove the faceplate from the main NXD-430 unit by gripping the faceplate from the top and lifting up and then pulling with gentle outward force.
2. Disconnect the capacitive touch connector from the 10-pin plug on the faceplate.

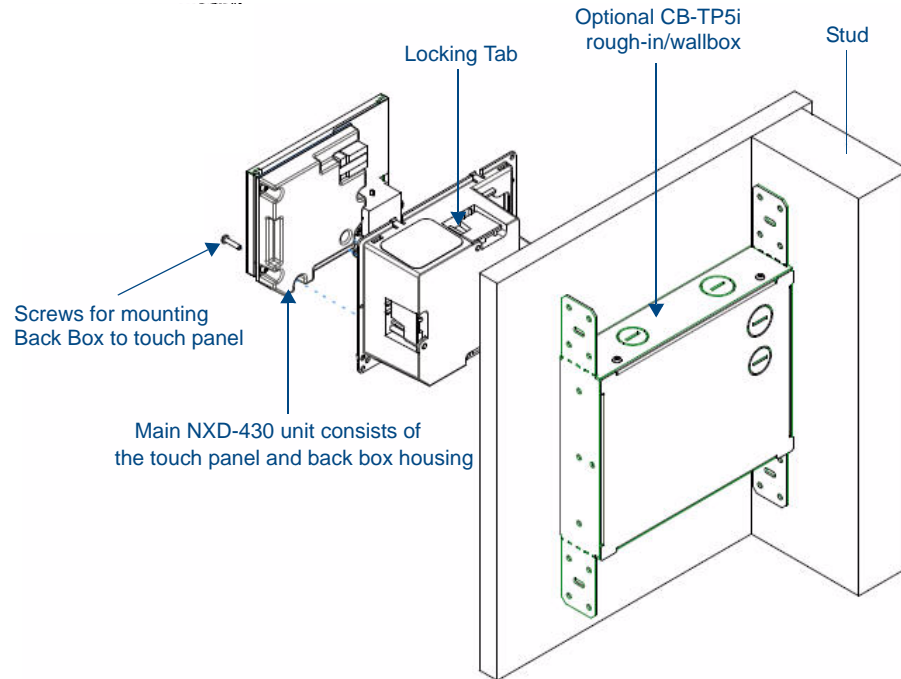


FIG. 8 NXD-430 panel installation into a CB-TP5i (pre-wall construction)



Be sure to pull the faceplate UP before pulling it out and away from the rest of the device. Pulling straight outward may lead to damage to the faceplate, including breaking off the tabs that attach the faceplate to the device and damaging the capacitive touch 10-pin female connector.

3. Thread the incoming Ethernet and USB wiring from their terminal locations through the surface opening. Leave enough slack in the wiring to accommodate any re-positioning of the panel.
4. Push the back box into the wall opening. Ensure that the locking tabs lie flush against the back box.
5. Connect both connectors to their corresponding locations along the left side of the touch panel.
6. Test the incoming wiring by attaching the panel connections to their terminal locations and applying power via the PoE Injector.
 - Verify that the panel is receiving power and functioning properly to prevent repetition of the installation.
 - Test the incoming wiring by connecting the panel connections to their terminal locations and applying power via the PoE Injector.
 - Verify that the panel is receiving power and functioning properly to prevent repetition of the installation.



Do not disconnect the connectors from the touch panel. The unit must be installed with the attached connectors before being inserted into the Rough-In Box.

7. Extend the locking tabs on the sides of the back box by tightening the screws inside the box.
 - Not all of the tabs must be extended to lock the back box in place, but extending a minimum of the top and bottom tabs is highly recommended.
 - Apply enough pressure to the screw head to keep the box flush with the wall: this ensures that the locking tabs will tighten up against the inside of the wall.
 - The back box is clear to allow visual confirmation that the tabs have been extended and are gripping the wall. This also allows visual confirmation that the tabs have been retracted away from the wall if the entire assembly has to be removed from the wall for any reason.



The maximum recommended torque to screw in the locking tabs on the back box is 5 IN-LB [56 N-CM].

Applying excessive torque while tightening the locking tab screws, such as with powered screwdrivers, can strip out the tabs or damage the back box.

8. Attach the capacitive touch connector to the 10-pin plug on the faceplate.
9. Place the faceplate back onto the main device.
10. Reconnect the terminal Ethernet and USB to their respective locations on the Ethernet port and NetLinX Master.

Installing the NXD-430 and NXD-435 into Drywall

The NXD-430 and NXD-435 come with a clear plastic backbox (FIG. 9) designed to attach the panel to standard drywall.

- This backbox has a locking tab on three of the four faces (missing only on the face containing the space for the connections) to help lock the backbox to the wall.
- These locking tabs are only extended AFTER the backbox is inserted into the wall.

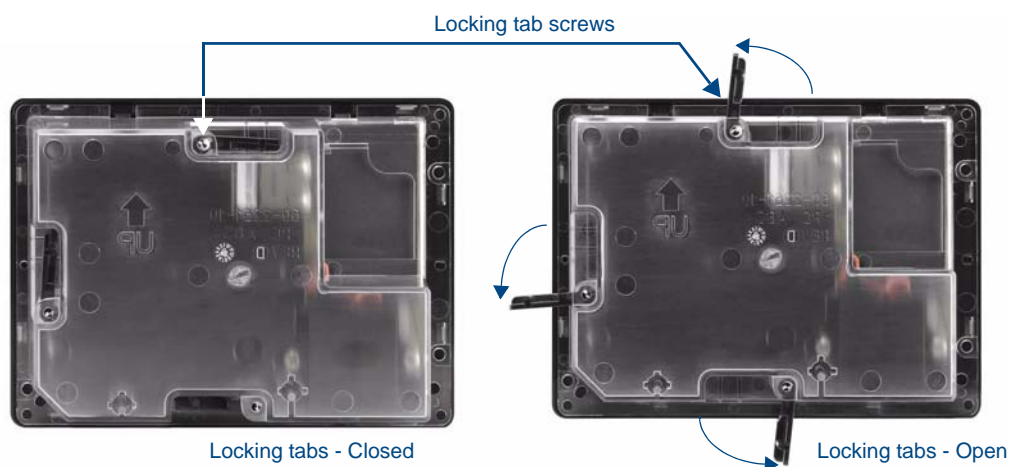


FIG. 9 NXD-430 backbox with closed and open locking tabs



When installing the backbox, make absolutely sure that the assembly is in the correct position and in the correct place.

Once the locking tabs are extended and locked into place, removing the backbox is possible, but it will be very difficult without having access to the back of the wall itself or damaging the wall.

- Refer to the diagram for detailed installation dimensions as shown in FIG. 10.
- Cutting out the surface slightly smaller than what is outlined in the installation drawings, in order to make any necessary cutout adjustments, is highly recommended.

1. Prepare the area by removing any screws or nails from the drywall before beginning the cutout process.
2. Cut out the surface for the back box. Refer to the dimensions in FIG. 10 for more information.

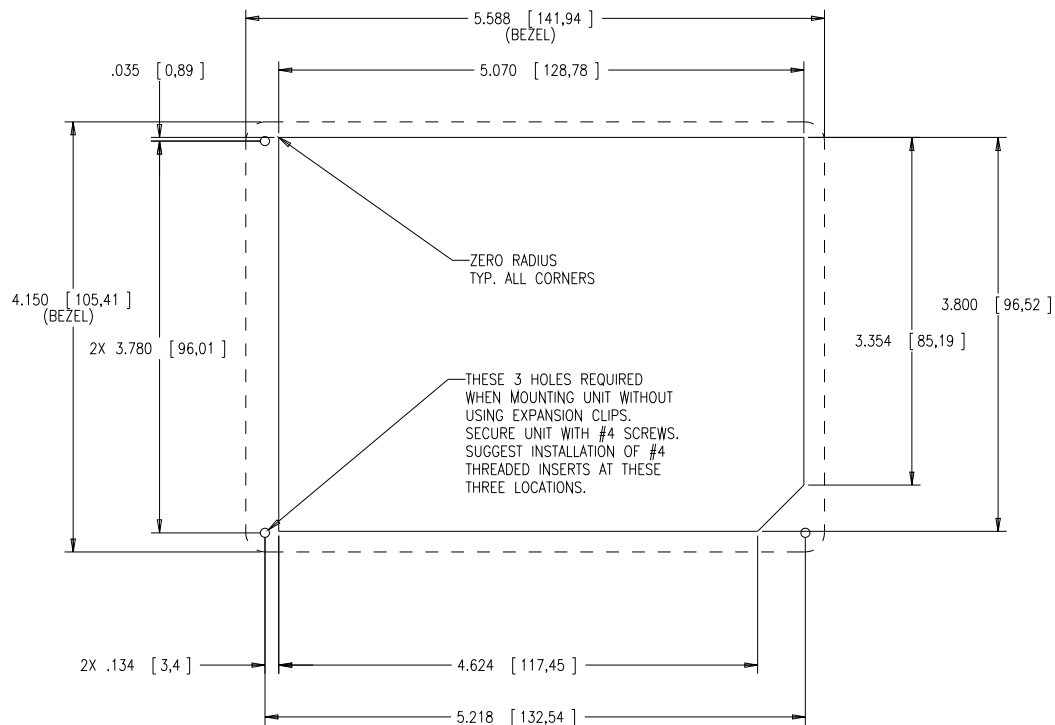


FIG. 10 NXD-430 Wall Mount panel dimensions



Making sure that the actual cutout opening is slightly smaller than the provided dimensions is highly recommended. This action provides the installer with a margin for error if the opening needs to be expanded.

3. Remove the faceplate from the main device by gripping the faceplate and pulling up and then out with gentle outward force.
4. Disconnect the capacitive touch connector from the 10-pin male plug on the faceplate.
5. Thread the incoming Ethernet and USB wiring from their terminal locations through the surface opening. Leave enough slack in the wiring to accommodate any re-positioning of the panel.
6. Connect both connectors to their corresponding locations along the left side of the touch panel.
7. Test the incoming wiring by attaching the panel connections to their terminal locations and applying power via the PoE Injector.
Verify that the panel is receiving power and functioning properly to prevent repetition of the installation.



Do not disconnect the connectors from the touch panel. The unit must be installed with the attached connectors before being inserted into the drywall.

8. Push the back box into the wall opening. Insure that the locking tabs lie flush against the back box.
9. Extend the locking tabs on the sides of the back box by tightening the screws inside the box. Not all of the tabs must be extended to lock the back box in place, but extending a minimum of the top and bottom tabs is highly recommended. Apply enough pressure to the screw head to keep the box flush with the wall: this ensures that the locking tabs will tighten up against the inside of the wall.
The back box is clear to allow visual confirmation that the tabs have been extended and are gripping the wall. This also allows visual confirmation that the tabs have been retracted away from the wall if the entire assembly has to be removed from the wall for any reason.



The maximum recommended torque to screw in the locking tabs on the back box is 5 IN-LB [56 N-CM]. Applying excessive torque while tightening the locking tab screws, such as with powered screwdrivers, can strip out the tabs or damage the back box. Use either a manual screwdriver or a variable torque motorized screwdriver at its lowest setting, and stop as soon as the panel is snugly secured.

10. Reconnect the capacitive touch connector to the 10-pin male plug on the faceplate.

11. Place the faceplate back onto the main device.



If needing to uninstall the back box, make sure that the heads to the locking tab screws do not touch the back of the circuit board. Use either a manual screwdriver or a variable torque motorized screwdriver at its lowest setting, and stop as soon as the locking tabs have moved into the slots on the sides of the back box.

Installing the NXD-430 and NXD-435 into a Flat Surface using #4 screws

Three #4 mounting screws (not included) are secured through circular holes located at the left and right sides of the touch panel.



The most important thing to remember when mounting the touch panel is that the back box must be installed flush against the mounting surface.

- Refer to **SP-2261-02** for detailed installation dimensions (reproduced in FIG. 11).
- Cutting out the surface slightly smaller than what is outlined in the installation drawings in order to make any necessary cutout adjustments, is highly recommended.

1. Prepare the area by removing any screws or nails from the surface before beginning the cutout process.
2. Cut out the surface for the touch panel using the dimensions shown in FIG. 11.

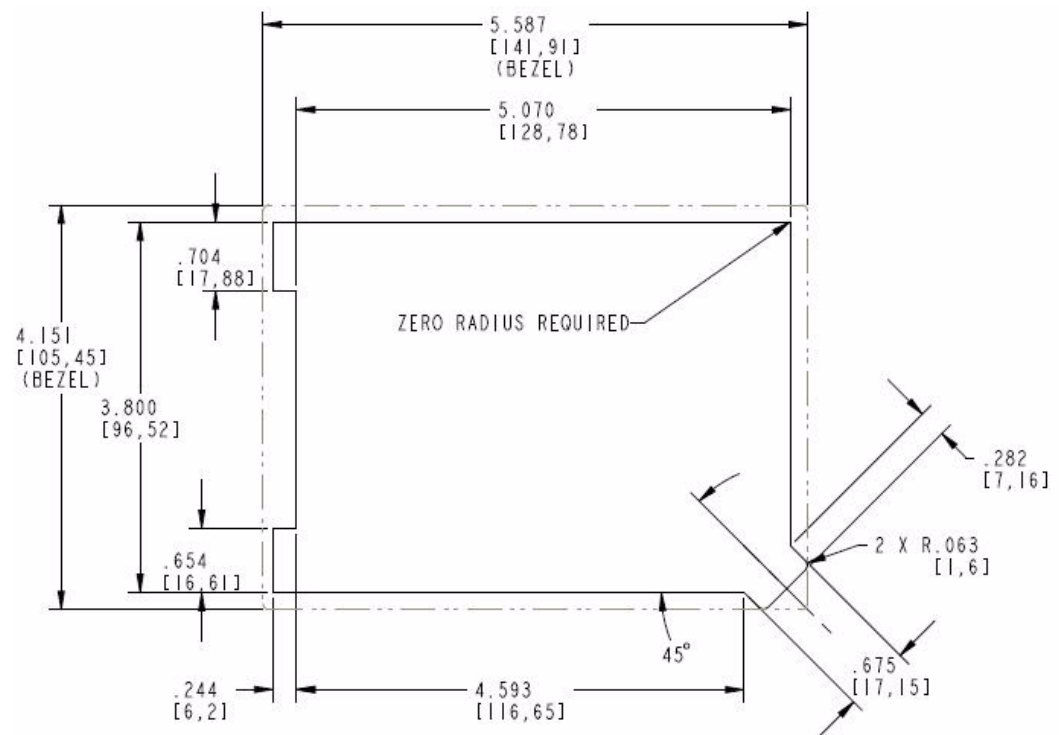


FIG. 11 NXD-430 Wall Mount panel dimensions

3. Remove the faceplate (A in FIG. 12) from the touch panel by gripping the faceplate and carefully pulling up and out with gentle force.

4. Disconnect the capacitive touch connector (**B** in FIG. 12) from the 10-pin male plug on the faceplate.
5. Thread the incoming Ethernet and USB wiring from their terminal sources through the surface opening. Leave enough slack in the wiring to accommodate any re-positioning of the panel.
6. Insert all connectors into their corresponding locations along the left side of the un-powered touch panel. The USB connectors can be from either a USB extension cable or a wireless USB RF transmitter.
7. Test the incoming wiring by connecting the panel connections to their terminal locations. Verify that the panel is receiving power and functioning properly before finalizing the installation.

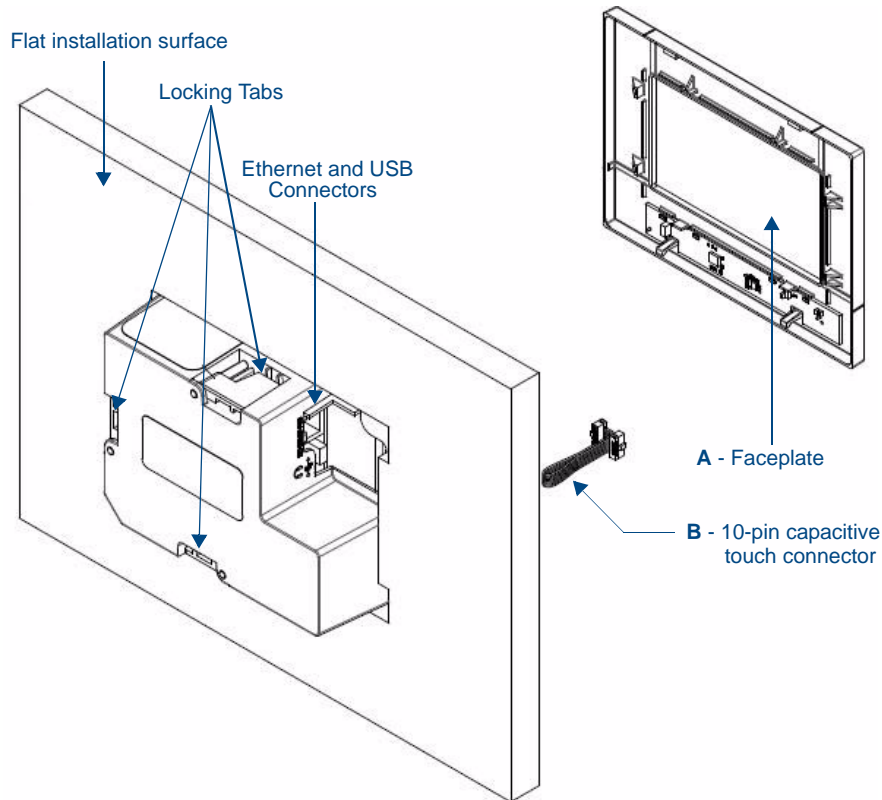


FIG. 12 Wall Mount panel installation configuration for flat surfaces



*Do not disconnect the connectors from the touch panel.
The unit must be installed with the necessary connectors before being inserted into the solid surface.*

8. Carefully slide the main unit into the cutout, making sure that the locking tabs lie flush against the back box.
9. Insert and secure three #4 Mounting Screws (not included) into the corresponding holes located along the sides of the device, using a grounded Phillips-head screwdriver, until the unit is secure and flush against the wall (FIG. 12).
10. Reconnect the capacitive touch connector to the 10-pin plug on the faceplate.
11. Place the faceplate back onto the device.

Installing an NXD-430 or NXD-435 into a Rack Mount Kit (NXA-RK5)

The NXA-RK5 is a 19" (48.26 cm) wide metal rack-mount (with black matte finish) measuring 3 rack units high.

1. Remove the faceplate from the touch panel.
2. Disconnect the capacitive touch connector from the 10-pin male plug on the faceplate.
3. Thread the incoming Ethernet and USB wiring from their terminal sources through the surface opening, leaving enough slack in the wiring to accommodate any re-positioning of the panel.
4. Connect all data and power wiring connectors to their corresponding locations along the left side of the device.

The USB connectors can be from either a USB extension cable or a wireless USB RF transmitter.

5. Test the incoming wiring by connecting the panel connections to their terminal locations.
Verify that the panel is receiving power from the PoE Injector and functioning properly.



Do not disconnect the connectors from the touch panel. The unit must be installed with the necessary connectors before being inserted into the equipment rack.

6. Carefully insert the device into the NXA-RK5.
7. Secure the panel to the NXA-RK5 mount by first inserting and then tightening the three included #4-40 screws.
8. Insert the NXA-RK5 (with the connected NXD-430 unit) into the equipment rack, making sure to align the screw holes along the sides on the NXA-RK5 with the holes in the equipment rack.
9. Use a grounded Phillips-head screwdriver to secure the NXA-RK5 to the equipment rack using the included #10-32 screws.
10. Reconnect the capacitive touch connector to the 10-pin plug on the faceplate.
11. Place the faceplate back onto the main device.
12. Reconnect the terminal Ethernet and USB wiring to their respective terminal locations on the Ethernet port or NetLinx Master.

Wiring Guidelines for the NXD-430 and NXD-435 Panels

Both the NXD-430 and NXD-435 panels utilize the Power over Ethernet (PoE) protocol, where the panel draws power directly from its Ethernet connection. Because of this, the panel has no need for standard power inputs or outputs.

Ethernet/RJ-45 Port: Connections and Wiring

FIG. 13 describes the blink activity for the Ethernet connector LEDs.

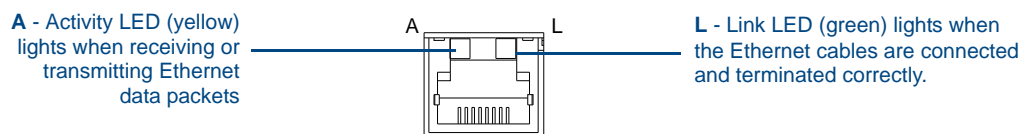


FIG. 13 Ethernet connector (showing communication and connection LEDs)

The following table lists the pinouts, signals, and pairing for the Ethernet connector.

Ethernet RJ-45 Pinouts and Signals				
Pin	Signals	Connections	Pairing	Color
1	TX +	1 ----- 1	1 ----- 2	Orange-White
2	TX -	2 ----- 2		Orange
3	RX +	3 ----- 3	3 ----- 6	Green-White
4	PoE power	4 ----- 4		Blue
5	PoE power	5 ----- 5	4 ----- 5	Blue-White
6	RX -	6 ----- 6		Green
7	PoE power	7 ----- 7	7 ----- 8	Brown-White
8	PoE power	8 ----- 8		Brown

FIG. 14 diagrams the RJ-45 pinouts and signals for the Ethernet RJ-45 connector and cable.

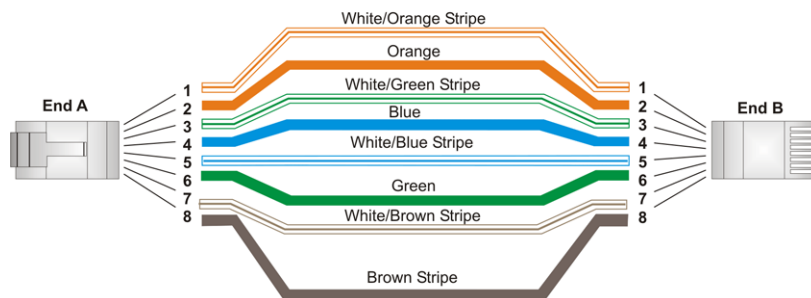


FIG. 14 RJ-45 wiring diagram

NXD-430/435 Touch Panel Accessories

Overview

The following section outlines and describes the optional AMX equipment available for the NXD-430 and NXD-435.

PS-POE-AF PoE Injector

The PS-POE-AF PoE Injector (**FG423-80**) is a single-port, self-contained Power-over-Ethernet (PoE) power supply, that delivers both DC power and data to PoE-equipped devices by “injecting” DC power through a Cat5 Ethernet cable (FIG. 15). The PoE Injector allows devices such as the NXD-430 and NXD-435 to function without an additional power connection other than an Ethernet connection.



FIG. 15 PS-POE-AF Power-Over-Ethernet Power Supply

Power-over-Ethernet eliminates the need for an AC outlet at each device installation point, resulting in easier and less expensive installation. It also can be used to extend the distance between the PoE devices and standard power outlets by up to 328 feet (100 meters).



NOTE

*Each PoE Injector may be used for **one** device's power needs. Multiple devices in a network that require PoE will require multiple Injectors.*

PS-POE-AF (FG423-80) Specifications

Output Specifications:

Combined Line and Load Voltage Regulation:	Excluding Cord $\pm 1\%$
Ripple:	1% Vp-p max.
Transient Response:	<ul style="list-style-type: none"> • 0.5ms for 50% • Load Change Typical
Protection:	<ul style="list-style-type: none"> • Foldback Overcurrent Protection • Short Circuit Protection

Input Specifications:

AC Input Voltage Range:	100-240VAC -10%, +6%
Line Frequency:	47-63Hz
AC Input Current:	<ul style="list-style-type: none"> • 90VAC Input • 0.6A max.
Protection:	<ul style="list-style-type: none"> • Internal Primary Current Fuse • Inrush Limiting

PS-POE-AF (FG423-80) Specifications (Cont.)	
General Specifications:	
Topology:	<ul style="list-style-type: none"> Switching-Fixed Frequency Flyback
Dielectric Withstand:	<ul style="list-style-type: none"> Primary-Secondary 3000VAC, 4250VDC Secondary-Ground 500VDC
Spacing:	5mm Primary-Secondary
Leakage Current:	Less than 250 uA
Efficiency:	<ul style="list-style-type: none"> 65% Typical @ Max. Load and 120VAC/60 Hz
Weight (excluding cord):	7 Ounces (200 Grams)
Dimension:	<ul style="list-style-type: none"> 5.24L x 2.13W x 1.42H (in) 133.0L x 54.0W x 36.0H (mm)
Case Material:	Black 94V0 Polycarbonate
Cord and Connectors:	Dual RJ45 jacks built into the enclosure
EMC Information:	
FCC:	<ul style="list-style-type: none"> Part 15 Class B EN55022 Class B
Immunity:	ESD: EN61000-4-2
RS:	EN61000-4-3
EFT:	EN61000-4-4
Surge:	EN61000-4-5
CS:	EN61000-4-6
Voltage Dip:	EN61000-4-11
Harmonic:	EN61000-3-2
CE:	CE Compliant
Hold-up Time:	<ul style="list-style-type: none"> @120VAC 10ms min. typ. @240VAC 40ms min. typ.
Storage Temperature:	-30° C to +85° C
Approvals and Standards - Safety:	<ul style="list-style-type: none"> cULus: UL/CSA60950 TUV: EN60950 CE: LVD, EMCD
MTBF:	100,000 Calculated Hours
Environmental Specifications	
Thermal Performance:	<ul style="list-style-type: none"> Operating Temperature 0° C to 40° C No Derating Convectional Cooling Non Vented Case
Relative Humidity:	Non-Condensing 5% to 95%
Altitude:	0-10,000 feet

For more information, refer to the *PS-POE-AF PoE Injector Installation Guide*, available at www.amx.com.

Panel Calibration

Overview

This section outlines the steps for calibrating an NXD-430 or NXD-435 touch panel.



Calibrating the panel before its initial use and after completing a firmware download is highly recommended.

Modero panels are set up in the factory with specific demo touch panel pages. The first splash screen that appears indicates the panel is receiving power, beginning to load firmware, and preparing to display the default touch panel pages. When the panel is ready, the AMX Splash Screen is replaced by the Initial Panel Page.

Calibrating the Modero Panel

1. Press and hold the **Front Setup Access** button (FIG. 16) for **9 seconds** to pass over the *Setup* page and access the *Calibrate* page (FIG. 17).

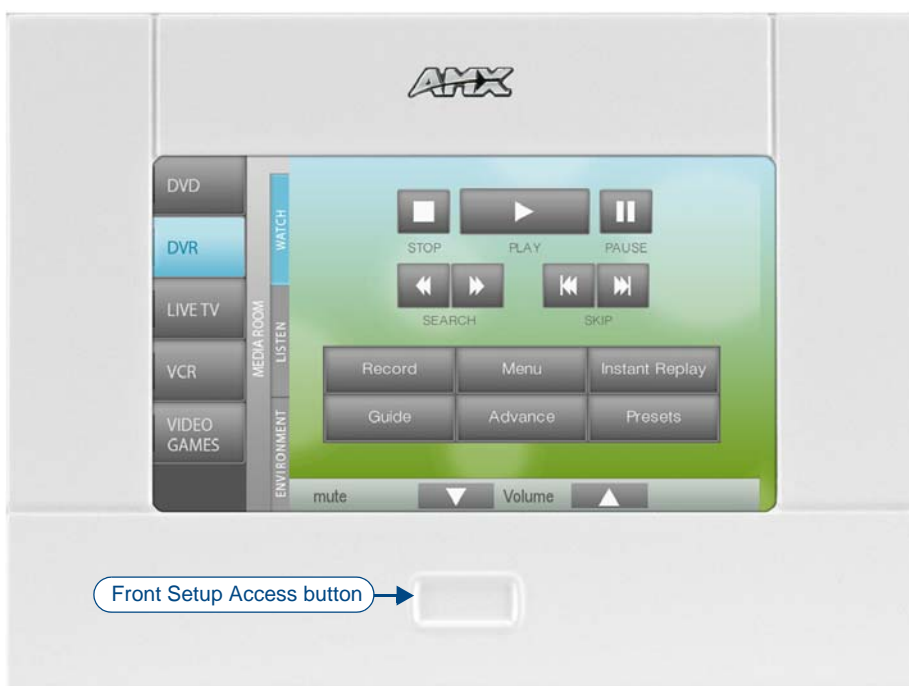


FIG. 16 NXD-430 Modero Wall/Flush Mount Touch Panel

2. Press the crosshairs (on the *Calibrate* page) to set the calibration points on the LCD (FIG. 17).

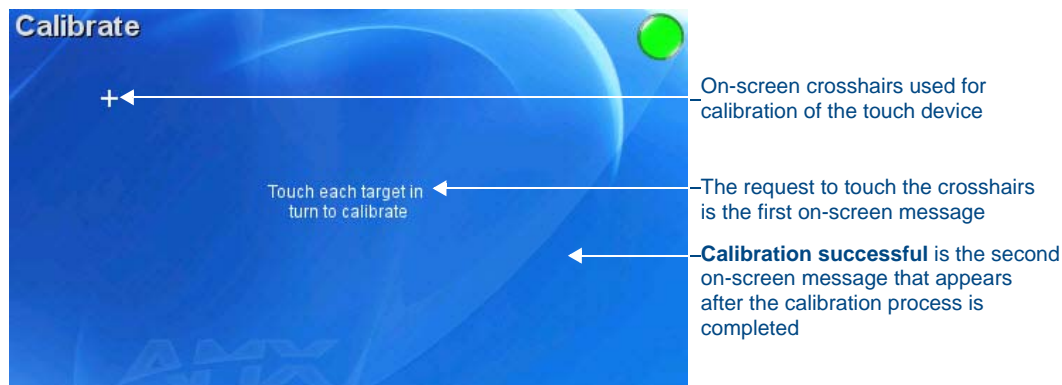


FIG. 17 Touch Panel Calibrate Screens

3. After the "**Calibration Successful.**" message appears, press anywhere on the screen to continue and return to the *Setup* page.



If the calibration was improperly set and you cannot return to the Calibrate page through the panel's Setup Pages or by pressing the Front Setup Access button, this firmware page may be accessed via G4 WebControl. Here, you can navigate to the Protected Setup page and press the Calibrate button through a VNC window.

This action causes the panel to go to the Calibrate page seen above, where the actual touch panel may be physically calibrated again using the above procedures.

Configuring Communication

Overview

Communication between a NXD-430 or NXD-435 and the Master is done using either **USB** or **ETHERNET (DHCP or Static IP)**. Ethernet communication can only be achieved via a direct Ethernet connection.



Before commencing, verify that you are using the latest NetLinx Master and Modero panel firmware, and also verify you are using the latest versions of AMX's NetLinx Studio and TPDesign4 applications. These are available at www.amx.com.

Modero Setup and System Connection

1. Press the **Front Setup Access** button (below the touch screen) for **6 seconds** to open the *Setup* page (FIG. 18).

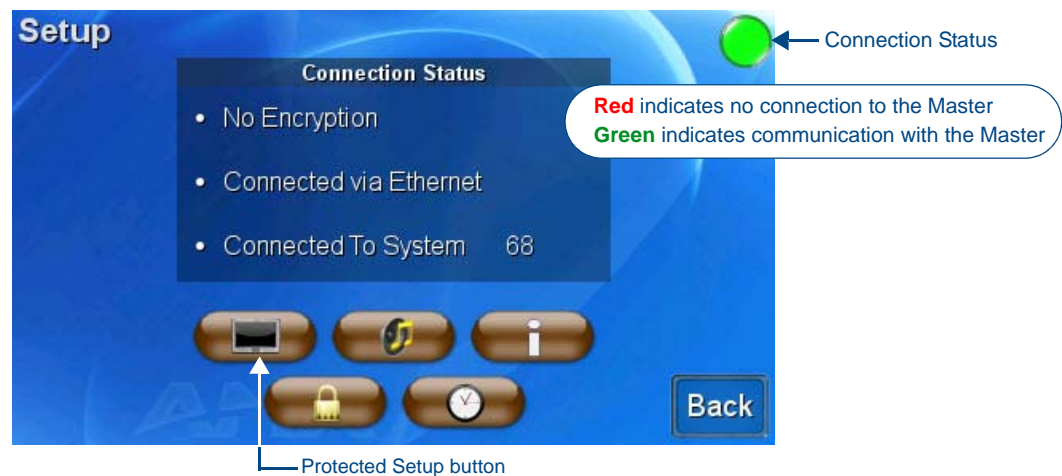


FIG. 18 Setup page

2. Press the **Protected Setup** button to open the *Protected Setup* page and display an on-screen keypad.
3. Enter **1988** into the keypad's password field and press **Done** when finished.



Clearing Password #5, from the initial Password Setup page, removes the need for you to enter the default password before accessing the Protected Setup page.

4. Press the red *Device Number* field to open the Device Number keypad (FIG. 19).

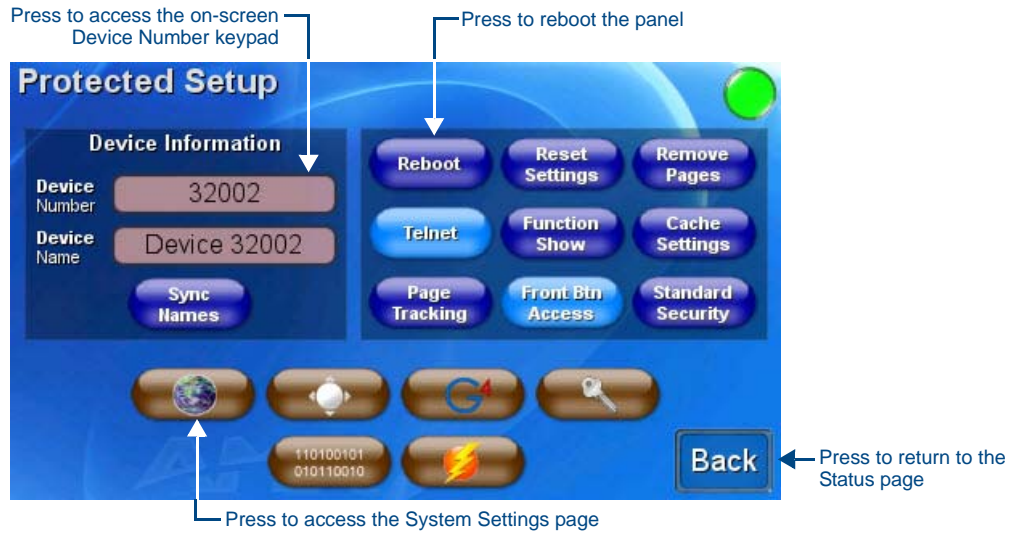


FIG. 19 Protected Setup Page

5. Enter a **Device Number** for the panel into the Device Number keypad.
- Default = 0
 - Range = 1 - 32000



When using multiple panels within a NetLinx System, remember to assign unique Device Number values to each panel, so that all assigned panels appear in the System listing for the target Master.

6. Press **Done** to close the keypad, assign the Device Number, and return to the *Protected Setup* page.



Before continuing, open NetLinx Studio. This program assists in developing a System Number, Master IP/URL, and Master Port number.

Refer to the NetLinx Master's instruction manual for more information.

Obtain the System Number and Master IP Address from NetLinx Studio. This information must be specific for the system used with the configured Modero panel.

7. Press the **Front Setup Access** button for **6 seconds** to open the *Status* page, and press the **Protected Setup** button to open the *Protected Setup* page (see FIG. 18 on page 23).

8. Press the **System Settings** button (see FIG. 19) to open the *System Settings* page (FIG. 20 on page 25) and begin configuring the communication settings on the panel to match those of the target Master.

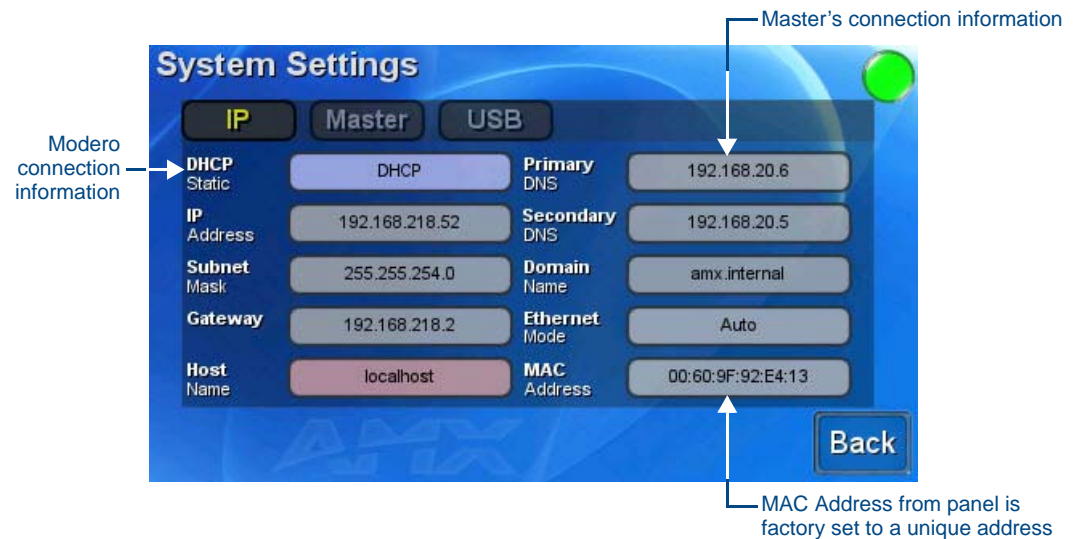


FIG. 20 System Settings page

The two possible Master Connection Types available are *USB* or *Ethernet*.

- A USB connection type is a direct connection from the panel's mini-USB port to a corresponding USB port on the PC, which is acting as a Virtual Master.

*The mini-USB connector MUST be plugged into a panel that is already set to **USB** communication (instead of Ethernet) before the PC can recognize the connection and assign an appropriate USB driver.*

- An Ethernet connection type involves indirect communication from the panel to a Master via an Ethernet connection to the network.

Configuring and Using USB with a Virtual Master

NetLinX Studio can be set up to run a Virtual Master, where the PC acts as the Master by supplying its own IP Address for communication to the panel. The PC is first equipped with the USB driver, the panel is then configured for USB communication, and then Studio is configured to act as the Master.

For a PC to establish a connection to a Modero panel via USB, the target PC must have the appropriate AMX USB driver installed. This installation is bundled into the TPDesign4 application setup process, available at www.amx.com.

Step 1: Set up the Panel and PC for USB Communication

1. If you do not currently have the latest version of TPDesign4, navigate to the Tech Center section of the AMX.com website, and locate TPDesign4. This will install the native RNDIS USB driver when executed.
2. Download this executable file to a known location on your computer.
3. Launch the Setup.exe file and follow the on-screen prompts to complete the installation.

Step 2: Confirm the Installation of the USB Driver on the PC

The first time each AMX touch panel is connected to the PC, it is detected as a new hardware device and the panel-specific USBLAN driver is associated with it. Each time thereafter, the panel is "recognized" as a unique USBLAN device and the association to the driver is handled in the background.

When the panel is detected for the first time, some user intervention is required during the association between panel and driver:



*The panel must be powered and configured for USB communication **before** connecting the mini-USB connector to the panel's Program Port.*

1. After the USB driver has been installed, confirm the proper installation of the large Type-A USB connector to the PC's USB port, and restart the PC.
2. Connect the terminal end of an Ethernet cable to the Ethernet 10/100 port on the panel.
3. Apply power to the panel.
4. After the panel powers up, press and hold the **Front Setup Access** button for 6 seconds to access the *Status* page.
5. Select **Protected Setup > System Settings** to open the *System Settings* page (FIG. 21) and select the **Master** tab.

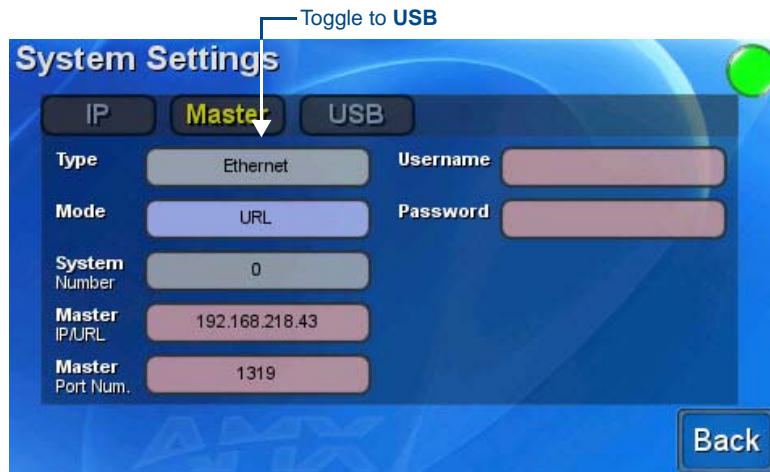


FIG. 21 System Settings page - using a USB Connection type



NOTE

No connection is established until the Virtual Master becomes active within NetLinx Studio

6. **Only after** the device displays the first panel page should you **then** insert the mini-USB connector into the Program Port on the panel. It may take a minute for the panel to detect the new connection and send a signal to the PC, as indicated by a green System Connection icon. If this is the first time for installing the USB driver, a USB driver installation popup window appears on the PC.
 - This window states that the panel has been detected by the PC as a USB-compliant device and the PC is installing an appropriate USB driver to establish a proper communication to the panel.
 - This driver was installed on the PC during the installation of the latest NetLinx Studio and TPDesign4 software application installations. *These applications should be installed prior to setting up a USB connection to the panel.*
 - Windows® notes that the driver does not contain a Microsoft® digital signature.
7. Click **Yes** when told that a digital signature was not found. This action accepts the installation of the new AMX USB driver. The panel is now configured to communicate directly with the PC.
 - This process completes the association between driver and device. Each time the same touch panel is connected to the computer, the driver is automatically loaded (*using a unique name - example USB LAN LINK #1, #2*). Each time a different touch panel is connected to the computer, the previous procedures will need to be repeated.
8. Navigate back to the *System Settings* page.

Step 3: Confirm and View the Current AMX USB Device Connections

The USB driver information can be confirmed via two different methods:

- Via the Control panel (previous steps 1 and 2) or
- Via the **Unplug or Eject Hardware** icon from the Taskbar.

1. Navigate to **Start > Settings > Control Panel >** and double-click the **System** icon to launch the *System Properties* dialog (FIG. 22).

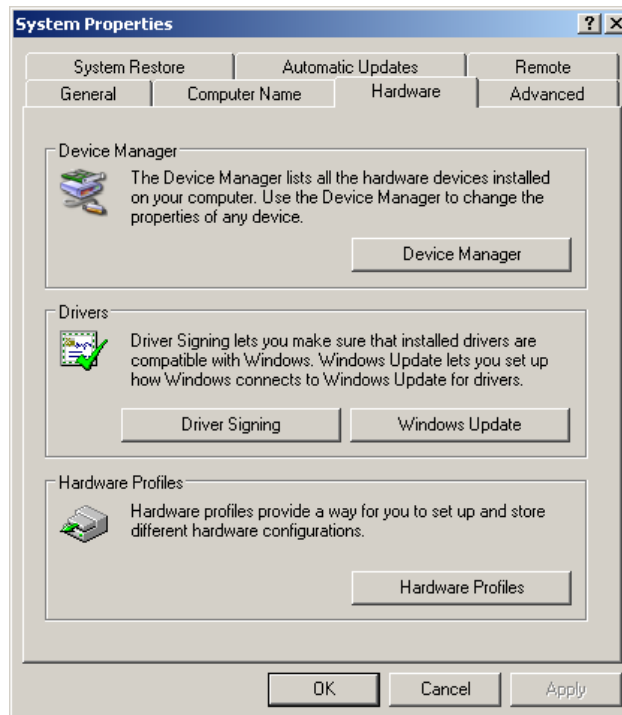


FIG. 22 System Properties dialog - Hardware tab

2. Select the **Hardware** tab and click on the **Device Manager** button to launch the Device Manager dialog.
 - Within the *Device Manager* dialog, the AMX USB LAN device appears under Network Adapters (FIG. 23) and has a unique name such as AMX USB LAN LINK #2. The number changes depending on which recognized panel is currently connected.

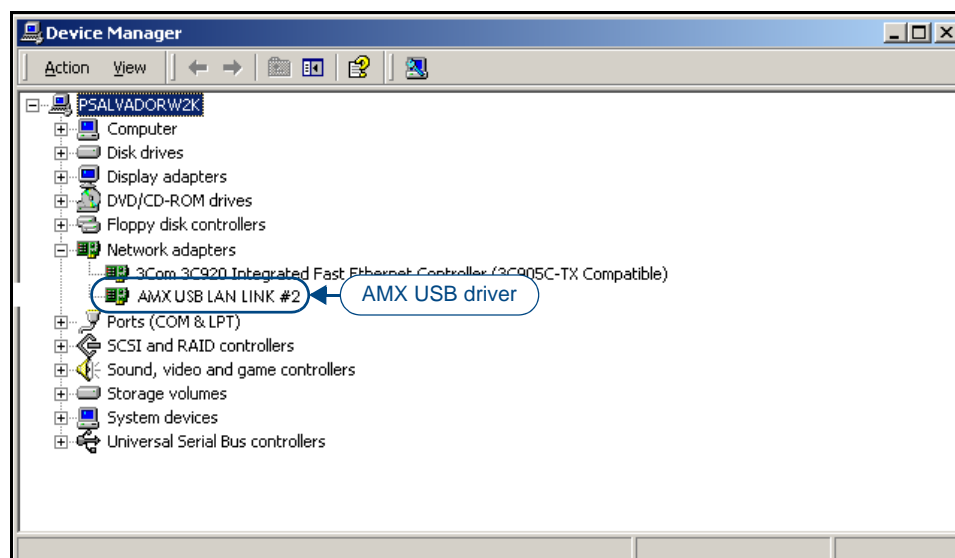


FIG. 23 Device Manager dialog showing USB device

3. Confirm that a new USB detection icon (FIG. 24) appears in the lower-right taskbar on the PC display window.
4. Double-click on the icon to open the **Unplug or Eject Hardware** window and confirm the AMX USB LAN LINK has been installed and is operating properly.



A Virtual NetLinx Master (VNM) is used when the target panel is not connected to a physical NetLinx Master. In this situation, the PC takes on the functions of a Master via a Virtual NetLinx Master.

This connection is made by either using the PC's Ethernet Address, via TCP/IP using a known PC's IP Address as the Master, or using a direct mini-USB connection to communicate directly to the panel.

5. Click the **Properties** button to view further information about the installed USB driver.

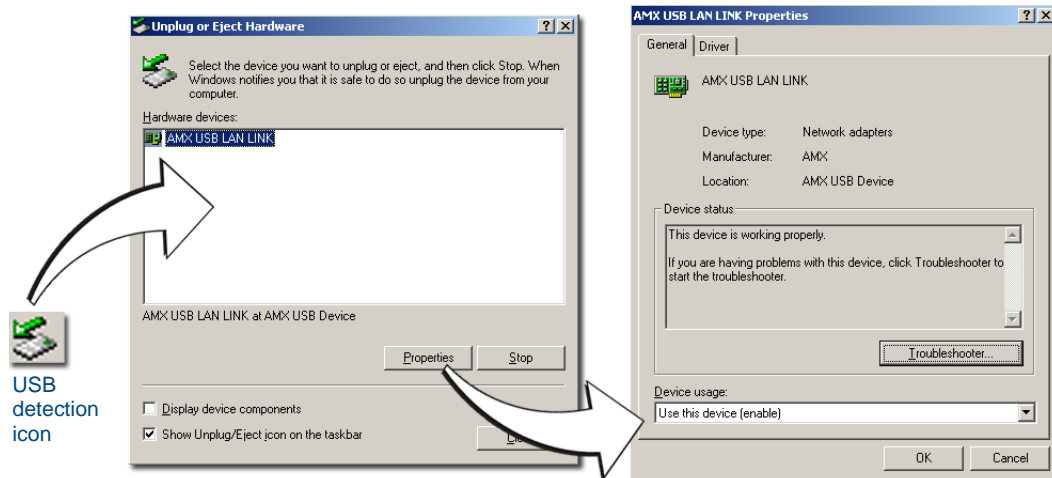


FIG. 24 USB Properties windows



If a yellow exclamation point appears next to the AMX USB LAN LINK device (within the hardware devices section of the Unplug or Eject Hardware window), stop and close the USB operation. Reconnect the USB cable to the panel and repeat the setup procedures. Refer to the Troubleshooting section on page 121 for more detailed information.

To remove the USB driver association from a previously connected touch panel, navigate back to the Device Manager, right-click on the panel's USB driver (example AMX USB LAN LINK #2) and select **Uninstall** from the context menu and then **OK**.

- Once the system completes the removal of the device, the *Device Manager* window will refresh, and the device will no longer appear.
- The next time this device is connected to the computer, it will appear as a new hardware device and will need to be associated again with the driver (refer to *Step 2: Confirm the Installation of the USB Driver on the PC* section on page 25 for more information).

Step 4: Use USB to Configure a Virtual Master (using NetLinx Studio)



Since this is a direct connection, the PC's IP Address is not needed.

Before beginning:

- Verify the panel has been configured to communicate via USB within the *System Settings* page and that the USB driver has been properly configured. Refer to the previous section for more information.
 - Launch NetLinx Studio (default location is **Start > Programs > AMX Control Disc > NetLinx Studio**).
1. In NetLinx Studio: select **Settings > Master Communication Settings** to open the *Master Communication Settings* dialog (FIG. 25).

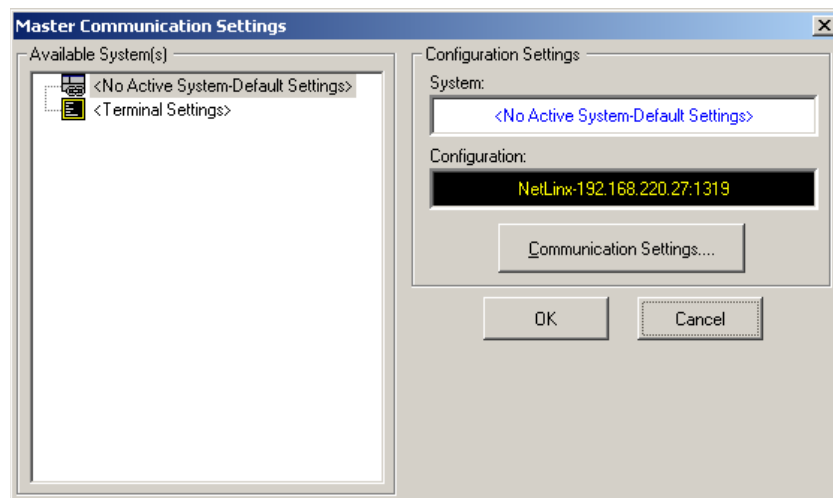


FIG. 25 NetLinx Studio - Master Communication Settings dialog

2. Click the **Communications Settings** button to open the *Communications Settings* dialog (FIG. 26).

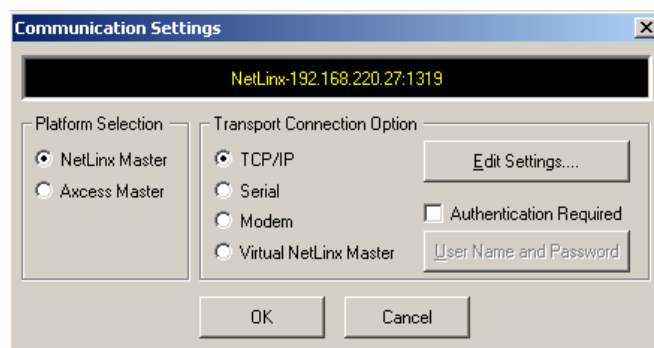


FIG. 26 NetLinx Studio - Communication Settings dialog

3. Click on the **NetLinx Master** option under *Platform Selection* to indicate that this is working as a NetLinx Master.
4. Click on the **Virtual NetLinx Master** option under *Transport Connection Option* to configure the PC to communicate directly with a panel.
5. Click the **Edit Settings** button on the *Communications Settings* dialog to open the *Virtual NetLinx Master Settings* dialog (FIG. 27).

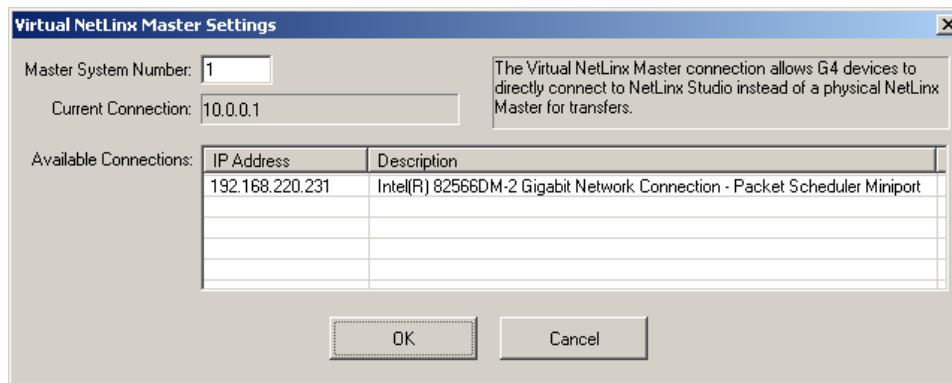


FIG. 27 NetLinX Studio - Virtual NetLinX Master Settings dialog

6. In this dialog, enter the **Master System Number** (default = 1).
7. Click **OK** three times to close the open dialogs, save the settings, and return to the main NetLinX Studio application.
8. Click the **OnLine Tree** tab in the Workspace window to view the devices on the Virtual System. Default System value = 1.
9. In the **OnLine Tree** tab in the Workspace window, right-click on the *Empty Device Tree/System* entry and select **Refresh System Online Tree** to re-populate the list.

The panel will not appear as a device below the virtual system number (in the Online Tree tab) until both the system number used in step 7 for the VNM is entered into the Master Connection section of the System Connection page and the panel is restarted.

- The Connection status on the panel's Status page turns green after a few seconds to indicate an active USB connection to the Virtual Master on the PC. No Lock icon is displayed because this USB connection is not secured and does not require a username and password.
- If a few minutes have gone by and the System Connection icon still does not turn green, repeat the USB connection and Virtual Master setup procedures (outlined in this section). Refreshing the System sends out a request to the panel to respond and completes the communication (*turning the System Connection icon green*).
- If the G4 panel still does not appear, refer to the *Troubleshooting* section on page 121 for more information.

Step 5: Confirm and View the Current AMX USB Device Connections

Use the CC-USB Type-A to Mini-B 5-wire programming cable (**FG10-5965**) to provide communication between the mini-USB Program port on the touch panel and the PC. This method of communication is used to transfer firmware KIT files and TPD4 touch panel files.



A mini-USB connection is only detected after it is installed onto an active panel. Connection to a previously powered panel which then reboots, allows the PC to detect the panel and assign an appropriate USB driver.

Verify this direct USB connection (Type-A on the panel to mini-USB on the panel) is configured properly using the steps outlined in the previous two sections.

With the panel already configured for USB communication and the Virtual Master setup within NetLinX Studio, it's now time to verify the panel is ready to receive files.

1. Click the **OnLine Tree** tab in the *Workspace* window to view the devices on the Virtual System. *The default System value is one.*
2. Right-click on the System entry and select **Display > Refresh System Online Tree**. This causes a refresh of all project systems, establishes a new connection to the Virtual Master, and populates the System list with devices on your system.

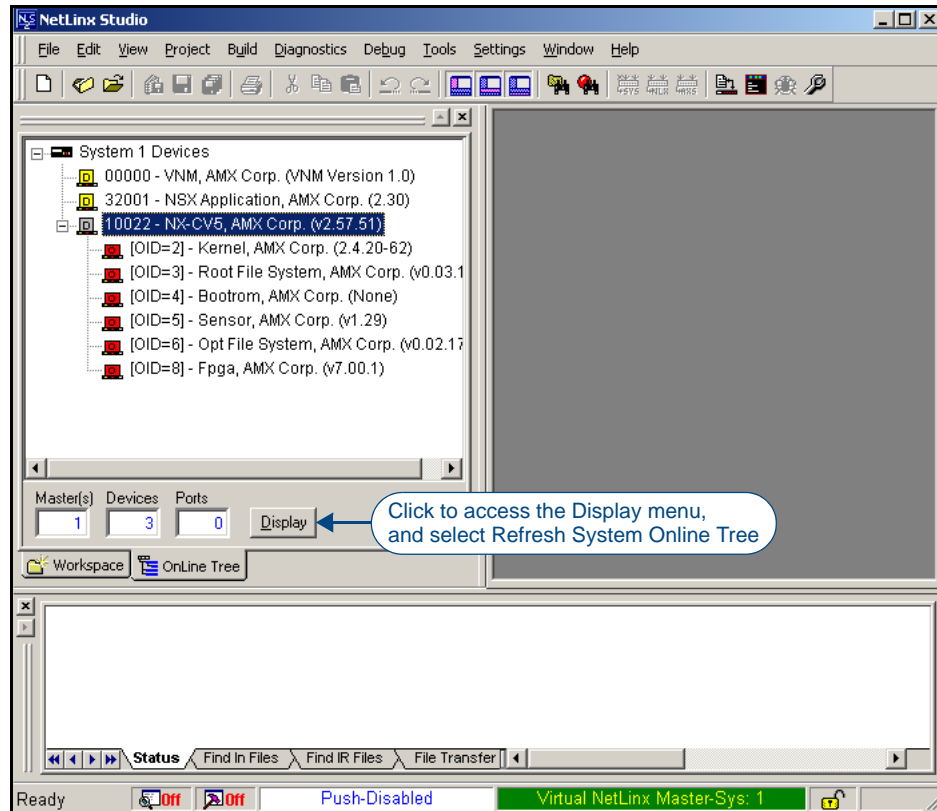


FIG. 28 NetLinX Studio - Repopulating the System Tree

Configuring a Wired Ethernet Connection

It is necessary to tell the panel to which Master it should be communicating. This "pointing to a Master" is done via the *System Settings* page, where the IP Address, System Number and Username/Password information assigned to the target Master is configured.

Until those parameters are configured, the Connection Status icon will remain red, indicating that it has no connection to a Master.

Step 1: Configure the Panel's Wired IP Settings

This panel has only one method of communicating to a target Master over the Internet: *Wired* (direct Ethernet connection, as wireless communication is not available on the NXD-430 or NXD-435). The connection parameters may only be configured through the *System Connection* page.

This type of communication can be established either via either a Dynamic IP Address (*DHCP*) or via a pre-reserved Static IP Address (*typically provided by your System Administrator*).

IP Settings section - Configuring a DHCP Address over Ethernet

1. Press the **System Settings** button on the *Protected Setup* page to open the *System Settings* page (FIG. 29).

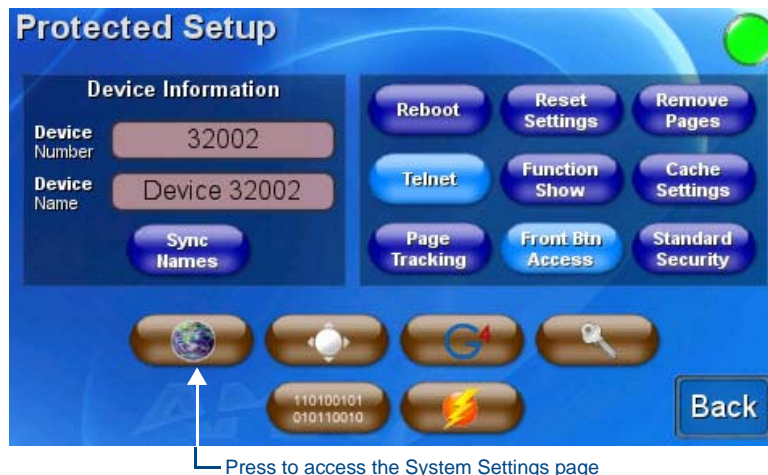


FIG. 29 Protected Setup Page

2. Open the *IP* tab (FIG. 30).



FIG. 30 System Settings Page - IP Tab

3. Toggle the *DHCP/Static* field until the choice cycles to **DHCP**. DHCP will register the unique factory-assigned MAC Address on the panel, and once the communication setup process is complete, reserve an IP Address, Subnet Mask, and Gateway values from the DHCP Server.
4. Press the *Host Name* field to open a keyboard and enter an alpha-numeric string Host Name (optional), and press **Done**.
5. Press the **Back** button to return to the *Protected Setup* page.
6. Press the **Reboot** button to save any changes and restart the panel.
 - Once the panel is rebooted, the remaining IP values are obtained by the unit and displayed in the DNS fields after power-up.
 - This information can be found in either the: Workspace- System name > Define Device section of the code that defines the properties for the panel, or in the *Device Addressing* and *Network Addresses* dialogs in NetLinx Studio.

IP Settings section - Configuring a Static IP Address over Ethernet



Check with your System Administrator for a pre-reserved Static IP Address assigned to the panel. This address must be obtained before Static assignment of the panel continues.

1. The *System Settings* page (IP tab), toggle the *DHCP/Static* button until the choice cycles to **Static** (see FIG. 30 on page 32).
2. Press the **IP Address** button to open a keyboard and enter the Static IP Address provided by your System Administrator., and press **Done**.
3. Repeat the same process for the *Subnet Mask* and *Gateway* fields.
4. Press the *Host Name* field to open a keyboard and enter an alpha-numeric string Host Name (optional), and press **Done**.
5. Press the *Primary DNS* field to open a keyboard, enter the Primary DNS Address provided by your System Administrator, and press **Done**. Repeat this process for the *Secondary DNS* field.
6. Press the *Domain* field to open a Keyboard, enter the resolvable domain Address provided by your System Administrator, and press **Done**.
7. Open the *Master* tab to begin configuring the communication parameters for the target Master.

Step 2: Choose a Master Connection Mode Setting

The **Master** tab of the System Connection page uses three (Master Connection) Mode settings (FIG. 31).

FIG. 31 System Settings page - Master Tab

The (Master Connection) **Mode** options are as follows:

- **URL** is the address that defines the route to a file on the Web or any other Internet facility. In this system, the panel acts as a "Client" and the Master acts as a Server (in that Clients attach to it). URL (Uniform Resource Locator) is the most commonly used method.
- **LISTEN** sets the Modero panel to "listen" for broadcasts from the Master (using the panel IP from its URL list). In this system, the panel acts as a "Server" (in that Clients attach to it) and the Master acts as a "Client".
- **AUTO** is used to instruct the Modero to search for a Master that uses the same System Number (assigned within the Master Connection section) and resides on the same Subnet as itself. In this case, the Master has its UDP feature enabled. This **UDP (User Datagram Protocol)** is a protocol within the TCP/IP protocol suite that is used in place of TCP when a reliable delivery is not required. This UDP enabling is done through a Telnet session on the Master.

Refer to the installation manual for the particular NetLinx Master for more detailed information.

Step 3: Configure an Ethernet Connection Type

Before commencing, verify that the NetLinx Master is using the latest available version of its firmware.



When using Ethernet as the selected communication method, the NetLinx Master must first be set up with either a Static IP or DHCP Address obtained from either NetLinx Studio or your System Administrator.

Before beginning:

- Verify that the panel has been configured to communicate through an Ethernet cable connected from the panel to a valid Ethernet Hub.
 - Verify that the NetLinx Master is receiving power and is communicating via an Ethernet connection with the PC running NetLinx Studio.
 - Verify that the green Ethernet LED on the rear Ethernet port on the Master is illuminated, indicating a proper connection.
 - Verify that the yellow LED on the rear Ethernet port on the Master is blinking, indicating communication with the device.
1. After the panel powers-up, press and hold the Front Setup Access button for 6 seconds to proceed to the *Status* page.
 2. Select **Protected Setup > System Settings** and click the **Master** tab (FIG. 32).

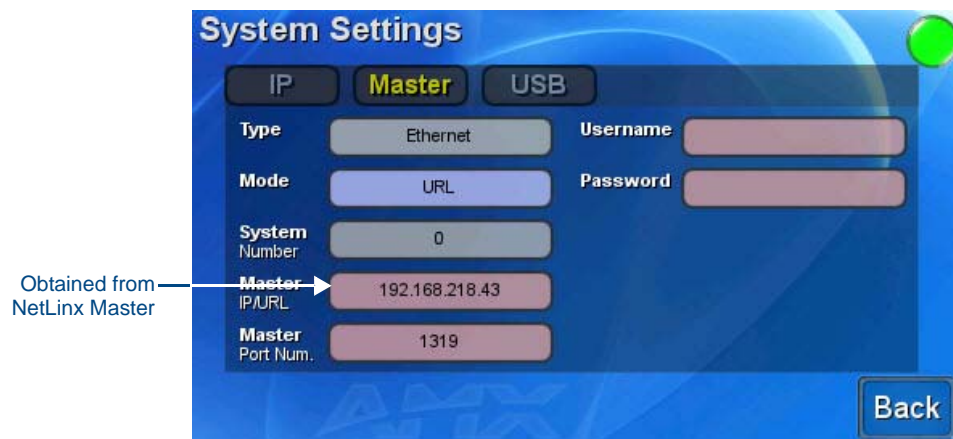


FIG. 32 System Settings Page - Master Tab

Master Tab - Virtual Master Communication Over Ethernet



When configuring the panel to communicate with a Virtual Master (on your PC) via Ethernet, the Master IP/URL field must be configured to match the IP Address of the PC. Make sure to use the Virtual System value assigned to the Virtual Master within NetLinx Studio.

Before beginning, verify that the panel has been configured to communicate through an Ethernet cable connected from the panel to a valid Ethernet Hub.

1. In NetLinx Studio, select **Settings > Master Communication Settings** to open the *Master Communication Settings* dialog (FIG. 33).

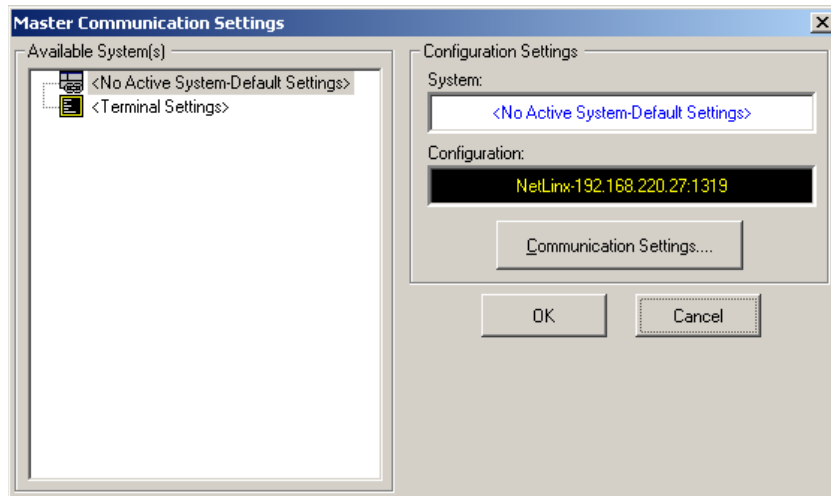


FIG. 33 NetLinX Studio - Master Communication Settings dialog

2. Click the **Communications Settings** button to open the *Communications Settings* dialog (FIG. 34).

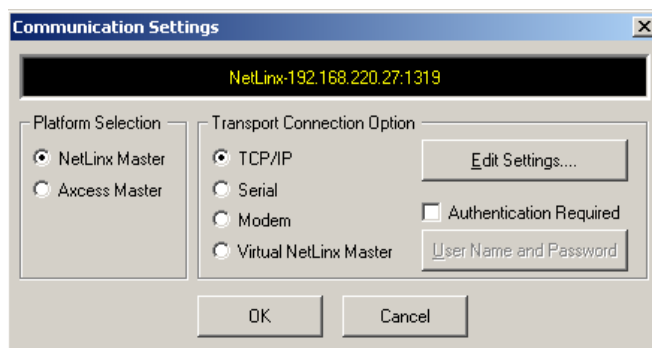


FIG. 34 NetLinX Studio - Communication Settings dialog

3. Click on the **NetLinX Master** option under *Platform Selection* section to indicate that you are working as a NetLinX Master.
4. Click on the **Virtual Master** option under *Transport Connection Option* to indicate you are wanting to configure the PC to communicate with a panel. All other fields will be greyed out because the Master's UI is not being used.
5. Click the **Edit Settings** button to open the *Virtual NetLinX Master Settings* dialog (FIG. 35).

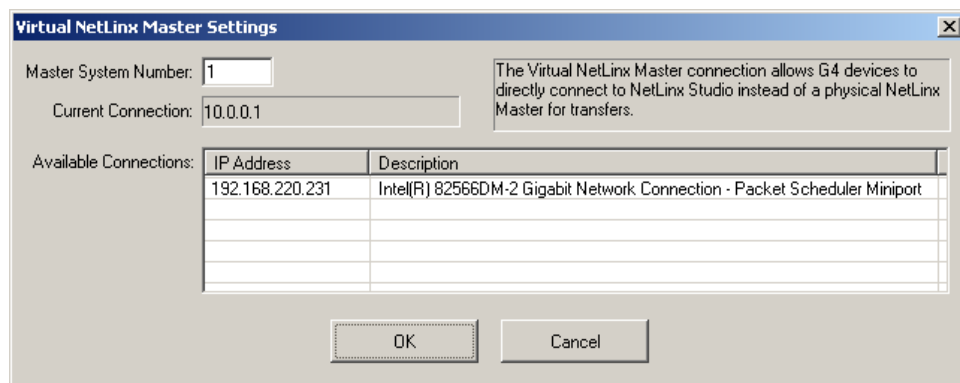


FIG. 35 NetLinX Studio - Virtual NetLinX Master Settings dialog

6. Enter the System number (*default is 1*) and note the IP Address of the target PC being used as the Virtual Master.

This IP Address can be obtained by following these procedures:

- On your PC, click **Start > Run** to open the *Run* dialog.
 - Enter **cmd** into the Open field and click **OK** to open the command DOS prompt.
 - From the **C:\>** command line, enter **ipconfig** to display the IP Address of the PC. This information is entered into the *Master IP/URL* field on the panel.
7. Click **OK** three times to close the open dialogs, save your settings, and return to the main NetLinx Studio application.
 8. Click the **OnLine Tree** tab in the Workspace window to view the devices on the Virtual System.
Default System value = 1.
 9. In the **OnLine Tree** tab in the Workspace window, right-click on the *Empty Device Tree/System* entry and select **Refresh System Online Tree** to re-populate the list.
 10. Power-up your panel and press and hold the grey Front Setup Access button for **6 seconds** to open the Status page.
 11. Select **Protected Setup > System Settings** and click the **Master** tab (FIG. 36).

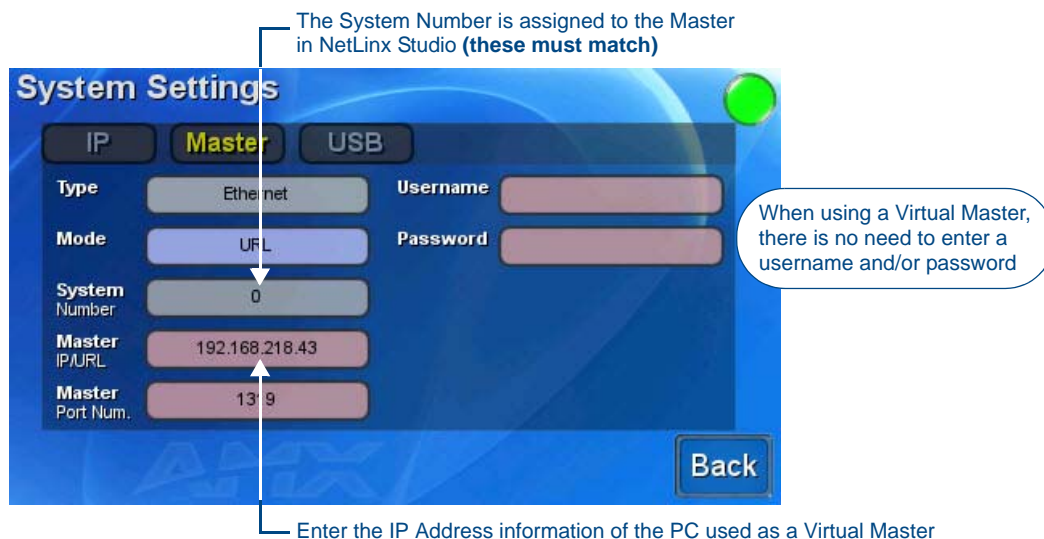


FIG. 36 Sample System Settings page (for Virtual Master communication)

12. Press the blue *Type* field until the choice cycles to **Ethernet**.
13. Press the *Mode* field until the choice cycles to the word **URL**.
 - By selecting **URL**, the System Number field becomes read-only (grey) because the panel pulls this value directly from the communicating target Master (virtual or not).
 - A Virtual Master system value can be set within active AMX software applications such as NetLinx Studio, TPD4, or IREdit.
14. Press the *Master IP/URL* field to open a Keyboard and enter the IP Address of the PC used as the Virtual Master, and press **Done**.



NOTE

Do not alter the Master Port Number value. This is the default value used by NetLinx.

15. Press the **Back** button to open the *Protected Setup* page.
16. Press the Reboot button to save changes and restart the panel.

Master Connection Tab - NetLinx Master Ethernet IP Address - URL Mode

In this mode, enter the System Number (**zero** for an unknown System Number) and the IP/URL of the Master (Master Port Number is defaulted to **1319**).

1. Open the System Settings page - Master tab (see FIG. 36 on page 36).
2. Press the *Type* button until the choice cycles to **Ethernet**. Refer to the *System Settings Page* section on page 60 for more information about the fields on this page.
3. Press the *Mode* button until the choice cycles to **URL**.
By selecting **URL**, the System Number field becomes read-only (grey) because the panel pulls this value directly from the communicating target Master, virtual or not. A Virtual Master system value can be set within the active AMX software applications such as NetLinx Studio, TPD4, or IREdit.



If the panel does not appear within the OnLine Tree tab of the Workspace window of NetLinx Studio, check to make sure that the NetLinx Master System Number from within the Device Addressing dialog is correctly assigned.

4. Press the *Master IP/URL* button to open a keyboard and enter the Master IP Address obtained from the *Diagnostics - Networking Address* dialog (in NetLinx Studio), and press **Done**.



Do not alter the Master Port Number value. This is the default value used by NetLinx.

5. Enter a Username and Password (*into their respective fields*) if the target Master has been previously secured.
6. Press the **Back** button to open the *Protected Setup* page.
7. Press the **Reboot** button to save changes and restart the panel.

Master Connection Tab - NetLinx Master Ethernet IP Address - Listen Mode

In this mode, add the Modero panel IP Address into the URL List of the Master by using NetLinx Studio. This mode sets the Modero panel to "listen" for broadcasts from the Master (using the panel IP from its URL list).

1. Obtain either a Static IP for the Modero panel (from your System Administrator) or a DHCP Address from the IP Settings field of the System Connection page.
 - The *DHCP/Static* field, in the **IP** tab of the *System Settings* page, must be set to **DHCP** to get Dynamic IP information for the panel.
 - Press the **Reboot** button on the *Protected Setup* page to save changes and restart the panel.
 - After power-up, press the front button for **6 seconds** to access the *Status* page.
 - Navigate to the **Setup > Protected Setup > System Settings** page, click the **IP Settings** tab, and note the newly obtained Dynamic IP Address information. This information is then entered into the URL List for the connected NetLinx Master.
2. Toggle the *Type* button until **Ethernet** is selected.
3. Press the *Mode* button until the choice cycles to **Listen**. The *System Number* and *Master IP/URL* fields are then disabled.
4. Enter a Username and Password into their respective fields if the target Master has been previously secured.
5. In NetLinx Studio, select the **OnLine Tree** tab in the *Workspace* window.
6. Enter the **System** and **Device** number for the specific Master associated with the touch panel as seen in the *OnLine Tree* tab.
7. In NetLinx Studio, select **Diagnostics > URL Listing** to open the *URL Listing* dialog.
8. Click **Add** and enter the IP Address of the touch panel in the *Add URL* dialog.
9. Click **OK** to enter the IP Address and add it to the list.
10. Click **Done** when finished adding your panel information to the list.
11. Press the **Reboot** button to save changes and restart the panel.

Master Connection Tab - NetLinX Master Ethernet IP Address - Auto Mode

In this mode, enter the System Number of the NetLinX Master. This mode instructs the Modero to search for a Master that uses the same System Number (assigned within the *Master Connection* section) and resides on the same Subnet as itself.



NOTE

The NetLinX Master and the Modero panel must both be on the same Subnet.

1. In the **Master** tab of the *System Settings* page, toggle the *Type* button until **Ethernet** is selected.
2. Press the *Mode* button until the choice cycles to **Auto**.
3. Press the *System Number* field to launch a keypad and enter the value for the system number of the NetLinX Master. This value can be obtained from the **NetLinX Studio program > OnLine Tree** of the Workspace window.



NOTE

Do not alter the IP tab of the System Settings page, as these fields are not applicable to this connection mode.

4. Enter a username and password into their respective fields if the target Master has been previously secured.
5. Press the **Reboot** button to save changes and restart the panel.
6. Press the grey **Front Setup Access** button for 6 seconds to open the *Status* page and confirm an active connection.

Using the NetLinX Master to Control the Panel

This firmware build enables SSL certificate identification and encryption, HTTPS communication, and ICSP data encryption, and it disables the ability to alter the Master security properties via a TELNET session.



NOTE

*Refer to the particular NetLinX Master's instruction manual for detailed information on how to download the latest firmware from **www.amx.com**.*



NOTE

In order to fully utilize the SSL encryption, your web browser should incorporate the an encryption feature. This encryption level is displayed as a Cipher strength.

Once the Master's IP Address has been set through NetLinX Studio version 2.x or higher:

1. Launch your web browser.
2. Enter the IP Address of the target Master (*ex: **http://198.198.99.99***) into the web browser's *Address* field.
3. Press the **Enter** key on your keyboard to begin the communication process between the target Master and your computer.
 - Initially, the Master Security option is disabled from within the *System Security* page, and no username and password is required for access or configuration.
 - Both HTTP and HTTPS Ports are enabled by default via the **Manage System > Server** page.
 - If the Master has been previously configured for secured communication, click **OK** to accept the AMX SSL certificate (*if SSL is enabled*) and then enter a valid username and password into the fields within the *Login* dialog.

Alternatively, right-click on the Master in the NetLinX Studio Online Device Tree and select **Launch Web Control Page via Default Browser** (FIG. 37):

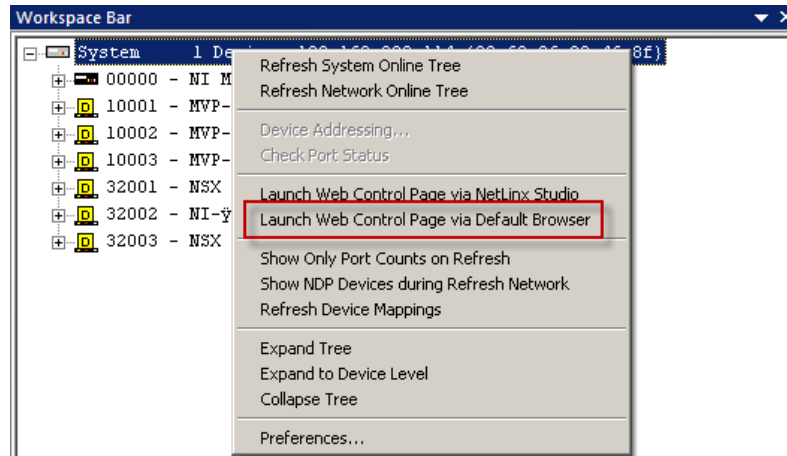


FIG. 37 NetLinx Studio - Online Device Tree context menu

4. Click **OK** to enter the information and proceed to the Master's *Manage WebControl Connections* window.
5. The *Manage WebControl Connections* page (FIG. 38) is accessed by clicking on the *Manage connections* link within the Web Control section in the Navigation frame.

Once activated, this page displays links to G4 panels running the G4 Web Control feature previously setup and activated on the panel.

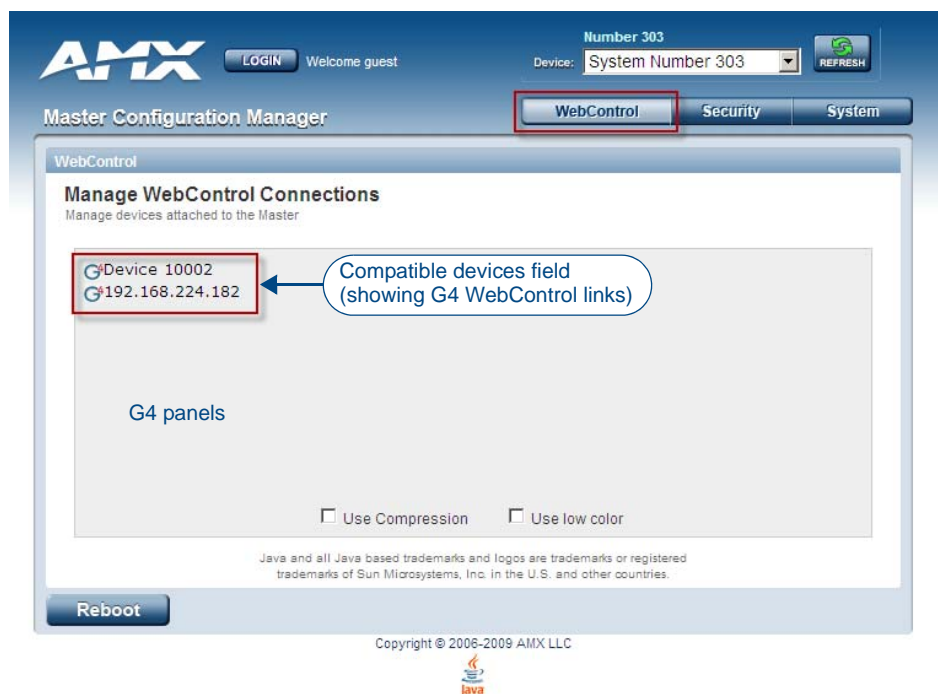


FIG. 38 Manage WebControl Connections page (populated with compatible panels)

6. Click on the G4 panel name link associated with the target panel. A secondary web browser window appears on the screen (FIG. 39).

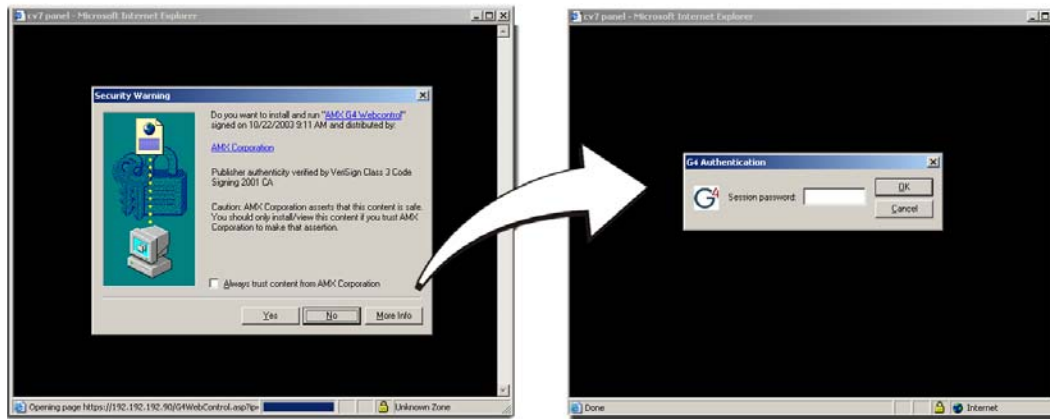


FIG. 39 Web Control VNC installation and Password entry screens

7. Click **Yes** from the Security Alert popup window to agree to the installation of the G4 WebControl application on your computer. This application contains the necessary Active X and VNC client applications necessary to view and control the panel pages from your computer.



The G4 Web Control application is sent by the panel to the computer that is used for communication. Once the application is installed, this popup will no longer appear. This popup will only appear if connecting to the target panel using a different computer.

8. In some cases, a *Connection Details* dialog (FIG. 40) may appear that requests a VNC Server IP Address. This is the IP Address of the target touch panel, not the IP of the Master. Depending on the method of communication being used, it can be found in either the:
 - **Wired Ethernet** - System Connection > IP Settings section within the *IP Address* field.
 - **Wireless** - *Not available with the NXD-430 panel.*
 - If this field does not appear, continue to step 9.

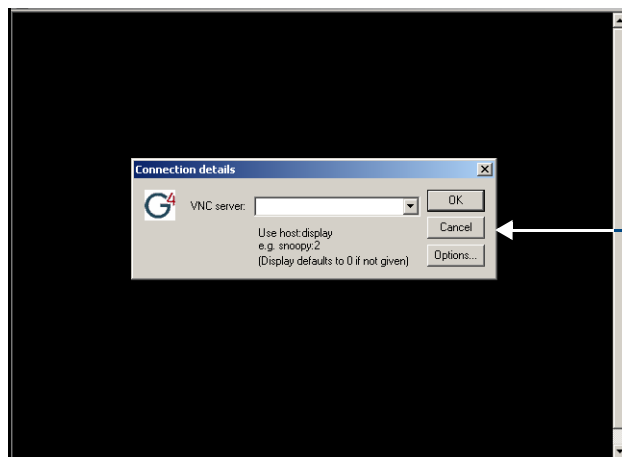


FIG. 40 Connection Details dialog

9. If a WebControl password was set up on the G4 WebControl page, a G4 Authentication Session password dialog box appears on the screen within the secondary browser window.
10. Enter the Web Control session password into the *Session Password* field (FIG. 39). *This password was previously entered into the Web Control Password field within the G4 Web Control page on the panel.*
11. Click **OK** to send the password to the panel and begin the session. A confirmation message appears stating "Please wait, Initial screen loading."

The secondary window then shows the same G4 page being displayed on the target G4 panel. A small circle appears within the on-screen G4 panel page and corresponds to the location of the mouse cursor. A left-mouse click on the computer-displayed panel page is the same as an actual touch on the target G4 panel page.

Upgrading Modero Firmware

Overview

The process of updating firmware involves the use of a communicating NetLinx Master. The required steps for updating firmware to a Modero panel are virtually identical to those necessary for updating Kit files to a NetLinx Master, except the target device is a panel instead of a Master. Refer to either the Master's User Manual or Studio 2.x Help file for those procedures.

Before beginning the Upgrade process:

- Set up and configure your NetLinx Master. Refer to the particular *NetLinx Master Instruction Manual* for detailed setup procedures.
- Calibrate and prepare the communication pages on the panel for use. Refer to the *Panel Calibration* section on page 21.
- Refer to the NetLinx Studio Help file for more information on uploading files.
- Configure the panel for a direct connection. Refer to the *Configuring Communication* section on page 23 for more information.



A touch panel which is not using a valid username and password will not be able to communicate with a secured Master. If you are updating the firmware on or through a panel which is not using a username or password field, you must first remove the Master Security feature to establish an unsecured connection.

Upgrading the Firmware via the USB port

Before beginning with this section, verify that your panel is both powered and the Type-A USB connector is securely inserted into the PC's USB port.

The panel must be powered on before connecting the mini-USB connector to the panel.



Establishing a USB connection between the PC and the panel prior to installing the latest NetLinx Studio and TPDesign4 applications will cause a failure in the USB driver installation.

This driver must first be saved to the PC as part of the new NetLinx Studio and TPDesign4 application installations.

Step 1: Configure the panel for a USB Connection Type

1. After the touch panel powers-up, press and hold the **Front Setup Access** button for 6 seconds to access the *Setup* page. Select **Protected Setup** and then **System Settings** to open the *System Settings* page (FIG. 41).
2. Select the **Master** tab at the top of the *System Settings* page to verify that the entered information is correct.

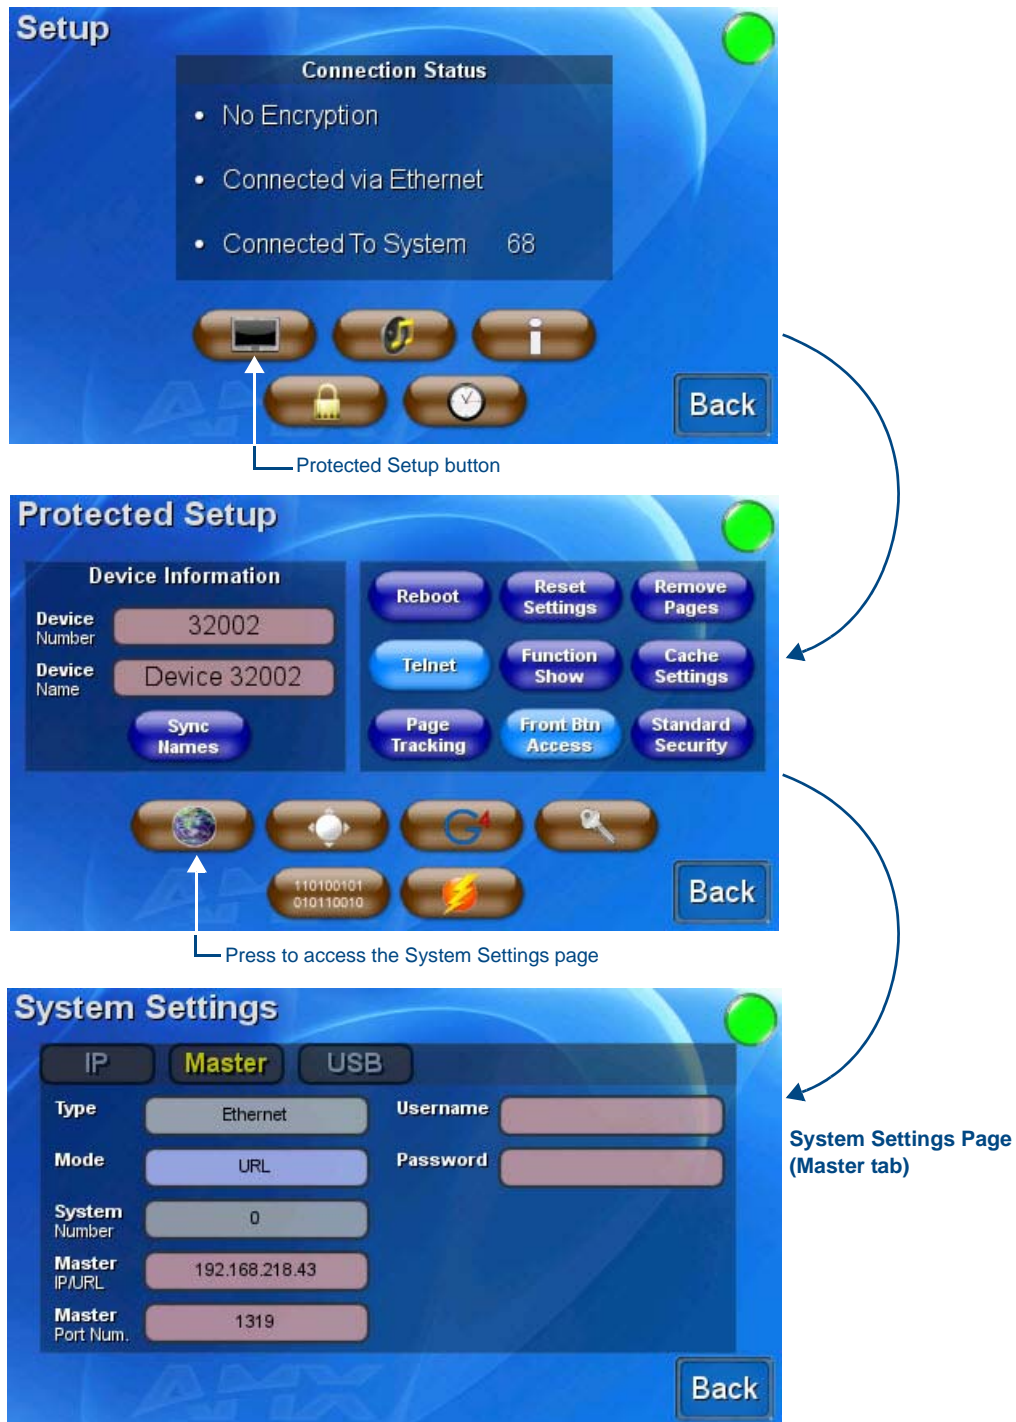


FIG. 41 Setup and Protected Setup pages



All fields are now disabled, but still display any previously shown network information.

3. Press the **Back** button to return to the *Protected Setup* page.
4. Press the **Reboot** button to save changes and restart the panel.



Remember that the panel's connection type must be set to USB prior to rebooting the panel and prior to inserting the USB connector.

5. **Only after** the unit displays the first panel page should the mini-USB connector be inserted into the USB Port on the panel. It may take a minute for the panel to detect the new connection and send a signal to the PC, indicated by a green *System Connection* icon.

If a few minutes have gone by and the *System Connection* icon still does not turn green, complete the procedures in the following section to set up the Virtual Master and refresh the System from the Online Tree. This action sends out a request to the panel to respond and completes the communication, turning the *System Connection* icon green.

6. Navigate back to the *System Settings* page.

Step 2: Prepare NetLinx Studio For Communication Via the USB port

1. Launch NetLinx Studio (default location is **Start > Programs > AMX Control Disc > NetLinx Studio**).
2. Select **Settings > Master Communication Settings** to open the *Master Communication Settings* dialog (FIG. 42).

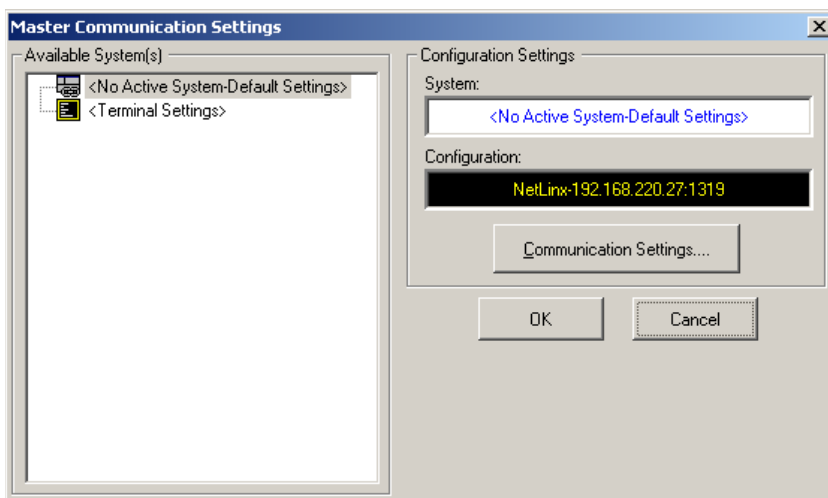


FIG. 42 NetLinx Studio - Master Communication Settings dialog

3. Click **Communications Settings** to open the *Communications Settings* dialog (FIG. 43).

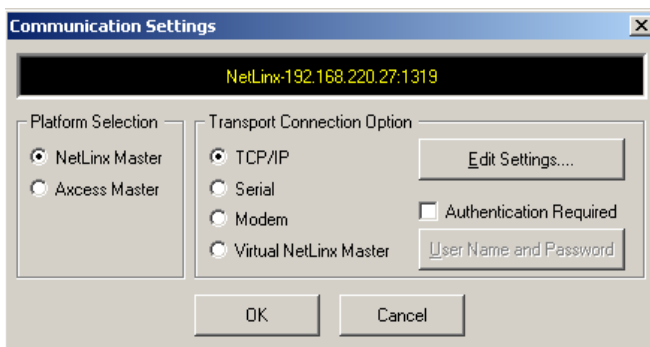


FIG. 43 NetLinx Studio - Communications Settings dialog

4. Click the **NetLinx Master** option under *Platform Selection*.
5. Click on the **Virtual Master** option under *Transport Connection Option* section to configure the PC to communicate directly with a panel. Everything else, such as the Authentication, is disabled because the communication is not going through the Master's UI.

- Click the **Edit Settings** button on the *Communications Settings* dialog to open the *Virtual NetLinx Master Settings* dialog (FIG. 44).

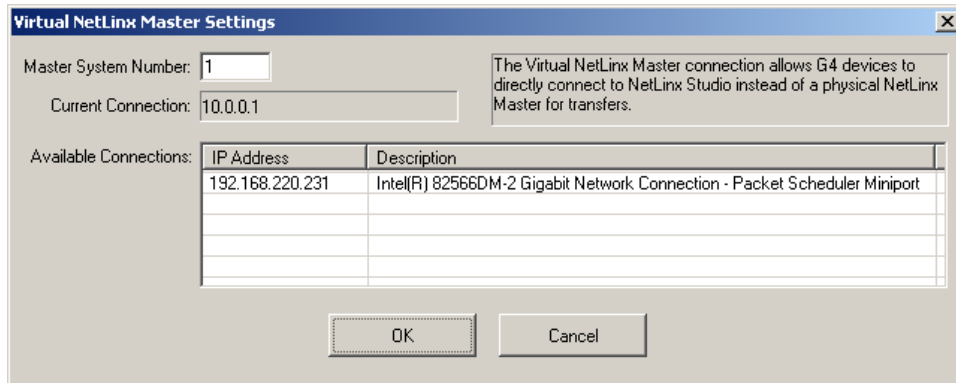


FIG. 44 NetLinx Studio - Virtual NetLinx Master Settings dialog

- Enter the *Master System Number* (default is **1**).
- Click **OK** to close the open dialogs, save settings, and return to the main NetLinx Studio application.
- Click the **OnLine Tree** tab in the Workspace window to view the devices on the Virtual System. *The default System value is one.*
- Right-click on the *Empty Device Tree/System* entry and select **Refresh System** to re-populate the list. *The panel will not appear as a device below the virtual system number in the Online Tree tab until both the system number used in step 7 for the Virtual NetLinx Master (VNM) is entered into the Master Connection section of the System Connection page and the panel is restarted.*



NOTE

If the G4 panel does not appear, refer to the Troubleshooting section on page 121 for more information.

Step 3: Confirm and Upgrade the Firmware Via the USB port

Use the CC-USB Type-A to Mini-B 5-wire programming cable (**FG10-5965**) to provide communication between the mini-USB Program port on the touch panel and the PC. This method of communication is used to transfer firmware Kit files and TPD4 touch panel files.



NOTE

A mini-USB connection is only detected after it is installed onto an active panel. Connection to a previously powered panel which then reboots, allows the PC to detect the panel and assign an appropriate USB driver.

- Verify that the direct USB connection (Type-A on the panel to mini-USB on the panel) is configured properly using the steps outlined in the previous two sections.
- After the Communication Verification dialog window verifies active communication between the Virtual Master and the panel, click the **OnLine Tree** tab in the Workspace window (FIG. 45) to view the devices on the Virtual System. *The default System value is one.*
- Right-click on the System entry (FIG. 45) and select **Refresh System** to re-populate the list. Verify the panel appears in the **OnLine Tree** tab of the Workspace window.

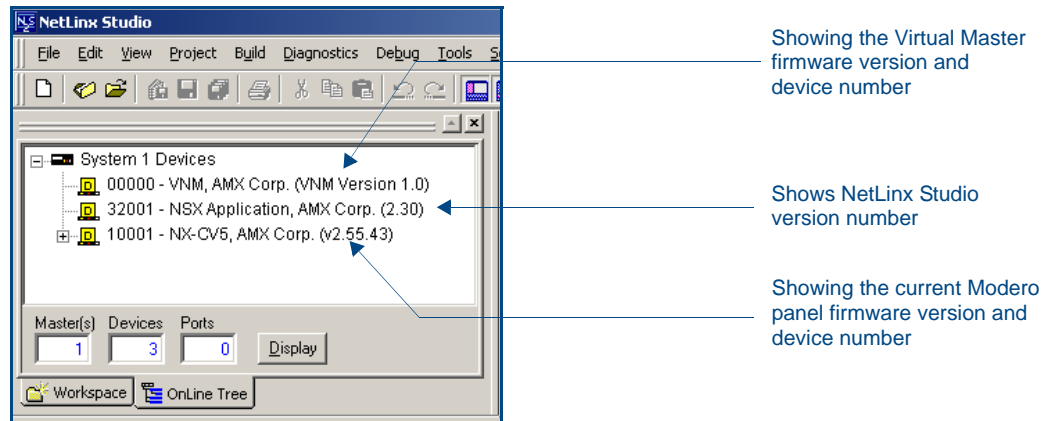


FIG. 45 NetLinx Workspace window (showing the panel connection via a Virtual NetLinx Master)



The panel firmware is shown on the right of the listed panel.

Download the latest firmware file from www.amx.com and then save the Kit file to your computer.

4. If the panel firmware being used is not current, download the latest Kit file by first logging in to www.amx.com and then navigate to **Tech Center > Firmware Files** and from within the **Modero** section of the web page locate your Modero panel.
5. Click on the desired Kit file link and after you've accepted the Licensing Agreement, verify you have downloaded the Modero Kit file to a known location.
6. From within Studio, select **Tools > Firmware Transfers > Send to NetLinx Device** from the Main menu to open the Send to NetLinx Device dialog (B in FIG. 46). Verify the panel's System and Device number values match those values listed within the System folder in the **OnLine Tree** tab of the Workspace window (A in FIG. 46).

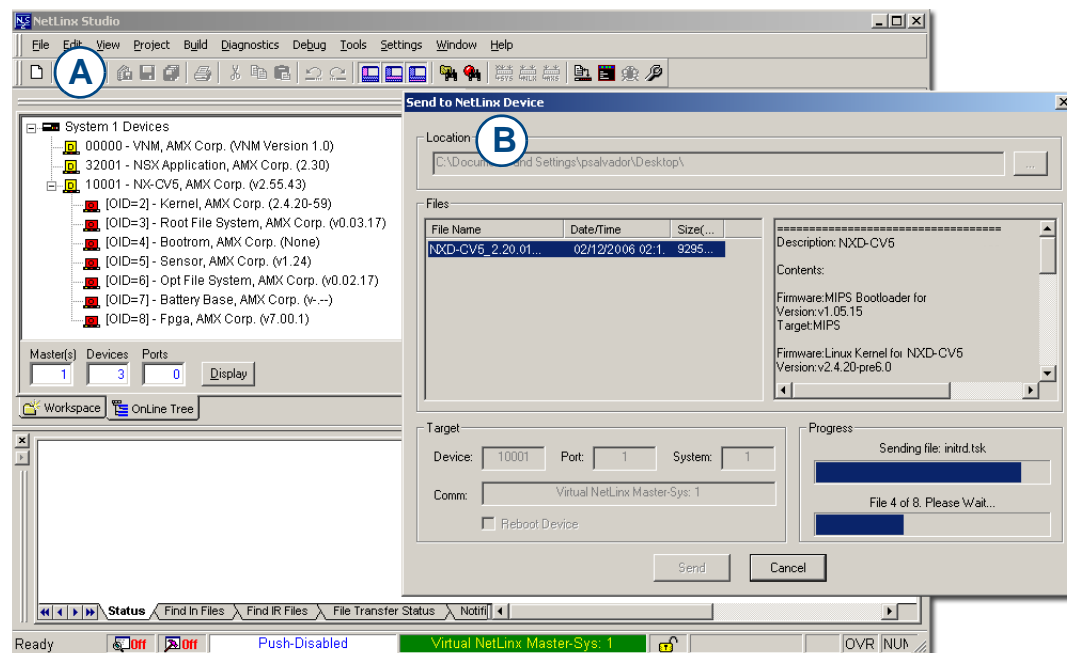


FIG. 46 Using USB for a Virtual Master transfer

7. Select the panel's Kit file from the **Files** section.
8. Enter the **Device** value associated with the panel and the **System** number associated with the Master listed in the **OnLine Tree** tab of the **Workspace** window. The **Port** field is greyed-out.

9. Click the **Reboot Device** checkbox. This causes the touch panel to reboot after the firmware update process is complete. The reboot of the panel can take up to 30 seconds after the firmware process has finished.
10. Click **Send** to begin the transfer. The file transfer progress is indicated on the bottom-right of the dialog (**B** in FIG. 46).
11. As the panel is rebooting, temporarily unplug the USB connector on the panel until the panel has completely restarted.
12. Once the first panel page has been displayed, reconnect the USB connector to the panel.
13. Right-click the associated System number and select **Refresh System**. This causes a refresh of all project systems, establishes a new connection to the Master, and populates the System list with devices on your particular system.
14. Confirm that the panel has been properly updated to the correct firmware version.

Setup Pages and Descriptions

Overview

This section describes the *Setup* and *Protected Setup* configuration pages and their specific functional elements. The configuration pages on the NXD-430 and NXD-435 are different than those of previous AMX touch panels, and necessary information may be displayed in different categories than before. Reading this section before attempting to change touch panel settings is highly recommended.

Setup

The *Setup* page (FIG. 47) is the first page viewed when entering the *Setup* page interface from the main touch panel pages. To access the *Setup* page, press and hold the **Front Setup Access** button (on the front panel) for 6 seconds.

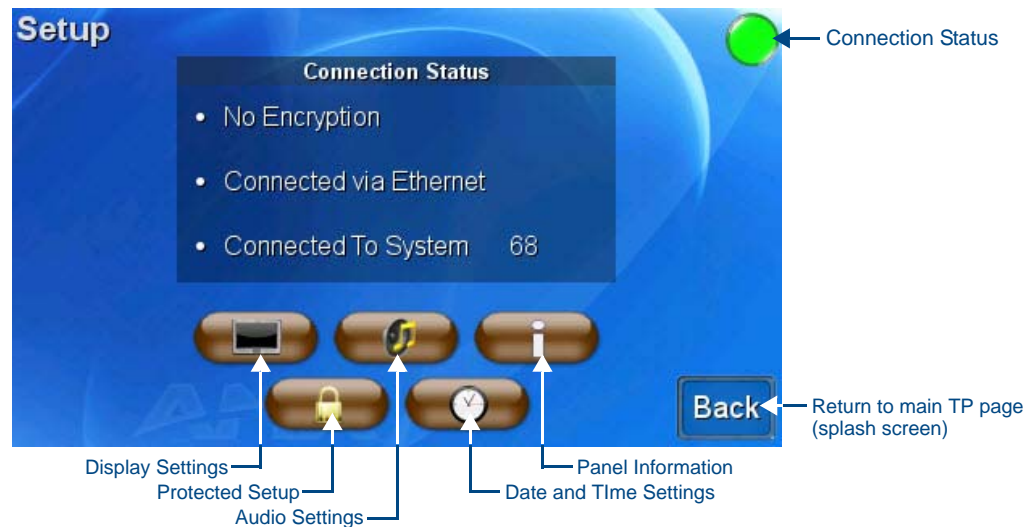


FIG. 47 Setup Page

Setup Page	
Connection Status icon:	Shows the current state of the panel's connection to the Master (green = online, red = offline). See the <i>Connection Status Icon</i> section on page 48 for details.
Connection Status:	<p>Displays whether the panel is communicating externally, the encryption status of the communicating Master, what connection type is being used (<i>Ethernet</i> or <i>USB</i>), and of what System the panel is a part.</p> <p>This visual display of the connection status is also reflected at the upper-right of each firmware page. This allows the user to have a current visual update of the panel's connection status regardless of what page is currently active.</p> <ul style="list-style-type: none"> • "Encrypted" appears when an encrypted connection is established with a target Master. Otherwise, the status reads "No Encryption". • When a connection is established, the message displayed is: "Connected via Ethernet". • If no connection can be established by the Modero panel, it will continue to try and establish a connection while displaying: "Attempting via...". • The panel must be rebooted before incorporating any panel communication changes and detecting any active Ethernet connections. <p>Note: The Ethernet connection is only detected after the panel is rebooted.</p>
Display:	This button opens the <i>Display</i> page (page 48).
Audio:	This button opens the <i>Audio</i> page (page 54).
Info:	This button opens the <i>Panel Information</i> page (page 50).

Setup Page (Cont.)	
Protected Setup:	This button opens the <i>Protected Setup</i> page (page 47).
Time:	This button opens the <i>Date & Time</i> page (page 54).
Back:	Returns to the Main touch panel page. In this case, the previous page is the default Main page.

Connection Status Icon

The icon in the upper-right corner of each Setup page shows the current state of the panel's connection to the Master. The Connection Status Icon provides a visual update of the panel's connection status, regardless of what page is currently active.

- **Red** - Panel is disconnected from the Master.
- **Green** - Panel is connected to the Master. Blinks when a blink message is received.
- **Yellow** - Panel missed a blink message from the Master. It will remain yellow for 3 missed blink messages, then turns red. It will return to green when a blink message is received.



NOTE

A Lock icon appears on the icon if the panel has established a connection with a currently secured target Master (requiring a username and password).

Display

The *Display Page* (FIG. 48), accessed by pressing the **Display Settings** button on the *Setup* page, allows adjustment of the default panel settings.



FIG. 48 Display Page

Display Page	
Connection Status icon:	Shows the current state of the panel's connection to the Master (green = online, red = offline). See the <i>Connection Status Icon</i> section on page 48 for details.
Panel Brightness:	<p>Sets the display brightness level of the panel.</p> <ul style="list-style-type: none"> • Press the UP/DN buttons to adjust the brightness level. Range = 0 - 100. • The on-screen bargraph can be dragged to adjust the Brightness level which is then reflected as a corresponding numeric value within the <i>Panel Brightness</i> field.
Display Timeout:	<p>Sets the length of time the panel can remain idle before activating the sleep mode. When the device goes into sleep mode, the LCD is powered down.</p> <ul style="list-style-type: none"> • Press the UP/DN buttons to increase/decrease the time until the panel times out. Range = 0 - 240 minutes. • Use this button to set the timeout value to zero and disable the sleep mode.

Display Page (Cont.)	
Inactivity Page Wait Time:	<p>Sets the number of minutes of inactivity before the panel automatically flips to a pre-selected touch panel page. When the device goes into this inactivity mode, the LCD does not power down.</p> <ul style="list-style-type: none"> Press the UP/DN buttons to increase/decrease the time the panel can remain inactive before it flips to the preset page. Range = 0 - 240 minutes. Use this button to set the timeout value to zero and disable the inactivity page flip mode.
Inactivity Page:	Lists the touch panel page used for the Inactivity page flip.
Screen Orientation:	<p>Select between 0° - Landscape and 90° - Portrait mode.</p> <p>NOTE: Using the panel in Portrait mode requires Portrait-enabled TPDesign4 pages. Templates for these pages are available at www.amx.com.</p>
Back:	Returns to the previously active touch panel page.

Audio

The *Audio* Page (FIG. 40), accessed by pressing the **Audio** button on the *Status* page, allows adjustment of the default sounds on the panel.



FIG. 49 Audio Page

Audio Page	
Connection Status icon:	Shows the current state of the panel's connection to the Master (green = online, red = offline). See the <i>Connection Status Icon</i> section on page 48 for details.
Button Hit:	Plays a default sound when touching an active button.
Button Miss:	Plays a default sound when touching a non-active button or any area outside of the active button.
Back:	Returns to the previously active touch panel page.

Panel Information

The Project Information page displays the TPDesign4 (TPD4) project file properties currently loaded on the selected Modero panel (FIG. 50).

Refer to the *TPDesign4 Touch Panel Program* instruction manual for more specific information on uploading TPDesign4 files to a panel. Select between the **Info**, **Config**, **File**, and **Project** tabs to view the appropriate information.

Panel Information - Info Tab



FIG. 50 Panel Information Page - Info Tab

Panel Information Page - Info Tab	
Connection Status icon:	Shows the current state of the panel's connection to the Master (green = online, red = offline). See the <i>Connection Status Icon</i> section on page 48 for details.
Panel Type:	Displays the model of the Modero panel being used.
Firmware Version:	Displays the G4 firmware version being used by the panel. • Verify that the panel has the latest version from www.amx.com .
Setup Port:	Displays the setup port information/value being used by the panel.
Serial Number:	Displays the specific serial number value assigned to the panel.
Setup Pages:	Displays the type and version of the Setup pages being used by the panel.
Panel Start Time:	Displays the last time the panel booted.
Screen Width:	Displays the pixel width being used to display the incoming signal on the Modero panel. • The maximum available screen width on a NXD-430 panel is 800 pixels.
Screen Height:	Displays the pixel height being used to display the incoming signal on the Modero panel. • The maximum available screen height on a NXD-430 panel is 480 pixels.
Screen Rotation:	Displays the degree of rotation applied to the on-screen image.
File System:	Displays the amount of Flash memory available on the Modero panel.
RAM:	Displays the available RAM (or Extended Memory module) on the Modero panel.
Bulb Hours	Displays the total time that the panel has been at full brightness.
Back:	Returns to the previously active touch panel page.

Panel Information Page - Config Tab



FIG. 51 Panel Information Page - Config Tab

Project Information Page - Config Tab	
Connection Status icon:	Shows the current state of the panel's connection to the Master (green = online, red = offline). See the <i>Connection Status Icon</i> section on page 48 for details.
Power Up Page:	Displays the first touch panel page assigned for display after the device is powered-up. <ul style="list-style-type: none"> • This information is taken from the TPD4 project file. • Most projects begin with a Main page.
Start-Up String:	Displays the start-up string.
Wake-Up String:	Displays the wake up string used after an activation from a timeout.
Sleep String:	Displays the sleep string used during a panel's sleep mode.
Setup Port:	Displays the setup port information/value being used by the panel.
High Port:	Displays the high port (port count) value for the panel.
High Address:	Displays the high channel (channel count) value for the panel.
High Channel:	Displays the purchase order information.
High Level:	Displays the high level (level count) value being used by the panel.
Back:	Returns to the previously active touch panel page.

Panel Information Page - File Tab

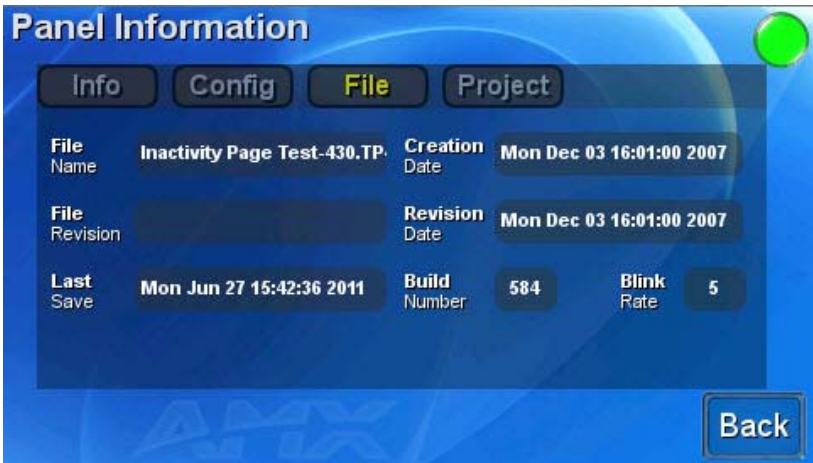


FIG. 52 Panel Information Page - File Tab

Project Information Page - File Tab	
Connection Status icon:	Shows the current state of the panel's connection to the Master (green = online, red = offline). See the <i>Connection Status Icon</i> section on page 48 for details.
File Name:	Displays the name of the TPDesign4 project file downloaded to the panel.
File Revision:	Displays the revision number of the file.
Last Save:	Displays the last date the project was saved.
Creation Date:	Displays the project creation date.
Revision Date:	Displays the last revision date for the project.
Build Number:	Displays the build number information of the TPD4 software used to create the project file.
Blink Rate:	Displays the feedback blink rate (10th of second).
Back:	Returns to the previously active touch panel page.

File Information Page - Project Tab

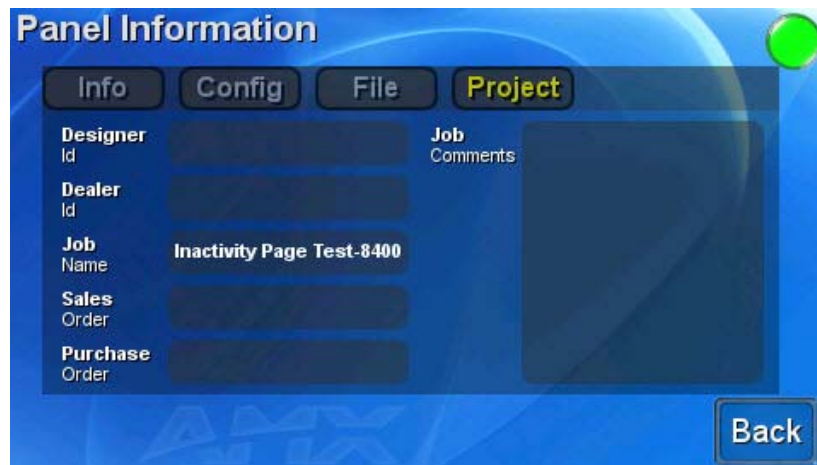


FIG. 53 Panel Information Page - Project Tab

Project Information Page - File Tab	
Connection Status icon:	Shows the current state of the panel's connection to the Master (green = online, red = offline). See the <i>Connection Status Icon</i> section on page 48 for details.
Designer ID:	Displays the name of the TPDesign4 project file downloaded to the panel.
Dealer ID:	Displays the dealer ID number (<i>unique to every dealer and entered in TPD4</i>).
Job Name:	Displays the job name.
Sales Order:	Displays the sales order information.
Purchase Order:	Displays the purchase order information.
Job Comments:	Displays any comments associated to the job. These comments are taken from the TPD4 project file.
Back:	Returns to the previously active touch panel page.

Protected Setup

This button opens the *Protected Setup* page, which centers around the properties used by the panel to communicate with the NetLinx Master.

Refer to the *Protected Setup Page* section on page 56 for information.

Date/Time Page

The *Date/Time* page (FIG. 54) allows setting and alteration of the time and date information on the NetLinx Master. If either the Time or Date is modified on this page and then updated to the Master by pressing the **Set Time** button, all devices communicating to that target Master will then be updated to reflect the new information.

FIG. 54 Date/Time page

Date/Time Page	
Connection Status icon:	Shows the current state of the panel's connection to the Master (green = online, red = offline). See the <i>Connection Status Icon</i> section on page 48 for details.
Current Date/Time:	This section displays the currently registered time. Press the Get Time or Set Time buttons to change the date or time.
Get Time/Set Time buttons:	<p>This section provides two options:</p> <ul style="list-style-type: none"> • The Get Time/Date button retrieves the Time and Date information from the Master. • The Set Time/Date button sets the Master to retain and save any time/date modifications made on the <i>Date/Time</i> page. <p>Use this option to override the Master's registered time.</p> <p>If making changes to the panel time and date, this button must be pushed before the changes are saved. Use the Up/Down arrow buttons to increase or decrease the time factor.</p>
Time Display fields:	<ul style="list-style-type: none"> • These fields display the time in three formats: STANDARD, STANDARD AM/PM, and 24 HOUR.
Date Display fields:	<ul style="list-style-type: none"> • These fields display the calendar date information in several different formats.
Back:	Returns to the previously active touch panel page without saving changes.



The NXD-430 and NXD-435 touch panels do not have an onboard clock. This page both receives and sets the time and date of the NetLinx Master.

To override the Master's registered time, press the **Set Time** button to open the *Set Time* page (FIG. 55). Click each field to select it and use the Up/Down arrow buttons to increase or decrease the time factor



FIG. 55 Set Time page

Set Time Page	
Year:	Use the UP/DN buttons to alter the year value (range = 2000 - 2037).
Month:	Use the UP/DN buttons to alter the month value (range = 1 - 12).
Day:	Use the UP/DN buttons to alter the day value (range = 1 - 31).
Hour:	Use the UP/DN buttons to alter the hour value (24-hour military).
Minute:	Use the UP/DN buttons to alter the minute value (range = 0 - 59).
Second:	Use the UP/DN buttons to alter the second value (range = 0 - 59).
Cancel:	Click this button to close this page and return to the <i>Date/Time</i> page without making any changes.
Save:	Click this button to save all changes and return to the <i>Date/Time</i> page.

Protected Setup Page

The *Protected Setup* page (FIG. 56) centers around the properties used by the panel for proper communication with the NetLinx Master. Enter the factory default password (**1988**) into the password keypad to access this page. Refer to the *Password Page* section on page 67 for more information.

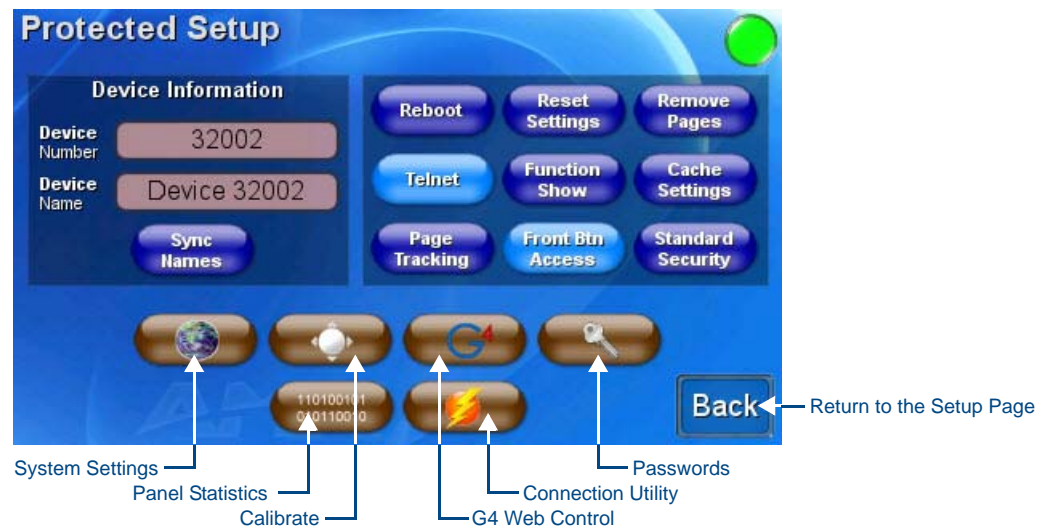


FIG. 56 Protected Setup Page

Protected Settings Page Icons

Unlike other touch panel interfaces, the interface for the *Protected Settings* page includes buttons featuring icons instead of text. These button icons include:

- **System Settings:** Press this button to configure communication settings between the NetLinx Master and the panel (see page 60).
- **Calibrate:** Press this button to access the *Calibrate* Page (see page 64).
- **G4 Web Control** (page 65): Press this button to enable or disable remote display and control of the panel via a Web-enabled PC.
- **Passwords:** Press this button to access the *Passwords* Page (see page 67).
- **Panel Statistics:** Press this button to access the *Panel Statistics* Page (see page 68).
- **Connection Utility:** Press this button to access the *Connection Utility* Page see (page 71).

The elements of the Protected Setup page are described in the table below:

Protected Setup Page	
Connection Status icon:	Shows the current state of the panel's connection to the Master (green = online, red = offline). See the <i>Connection Status Icon</i> section on page 48 for details.
Device Information:	<ul style="list-style-type: none"> • Number: Opens a keypad that is used to set and display the current device number. • Name: Opens a keypad that is used to set and display the current device name. • Sync Names: Press this button to synchronize device names reserved by the Master.
Reboot:	Press this button to restart the panel after saving any changes.
Reset Settings:	Press this button to wipe out all current configuration parameters on the touch panel (such as IP Addresses, Device Number assignments, Passwords, and other presets). <ul style="list-style-type: none"> • Pressing this button launches a Confirmation dialog which asks to confirm your selection. • This dialog is configured with a delay timer that does not enable the YES button for 5 seconds. This delay provides an additional amount of time for the user to confirm a decision.

Protected Setup Page (Cont.)	
Remove Pages:	<p>Press this button to remove all current TPD4 touch panel pages currently on the panel (<i>including the pre-installed AMX Demo pages</i>).</p> <ul style="list-style-type: none"> Pressing this button launches a Confirmation dialog which asks to confirm your selection. This dialog is configured with a delay timer that does not enable the YES button for 5 seconds. This delay provides an additional amount of time for the user to confirm a decision.
Telnet:	Press this button to enable or disable the telnet server on the panel. This feature focuses on direct telnet communication to the panel.
Function Show:	Press this button to enable the display of the channel port and channel code in the top left corner of the button, the level port and level code in the bottom left corner, and the address port and address code in the bottom right corner (see FIG. 58 on page 58).
Page Tracking:	Press this button for the touch panel sends page data back to the NetLinx Master, or vice versa depending on the touch panel settings.
Front Btn Access:	<p>Press this button to activate the grey Front Setup Access button (located below the LCD) to access the firmware pages.</p> <ul style="list-style-type: none"> Default condition is On. Press and hold the Front Setup Access button for 6 seconds to access the <i>Setup</i> page. Press and hold the Front Setup Access button for 9 seconds to access the <i>Calibration</i> page.
Security:	<p>Displays one of three security settings: <i>Standard</i>, <i>Secure</i>, and <i>DoD</i>. Pressing this button opens a popup window allowing changes to the Security Profile.</p> <p>NOTE: Refer to the <i>Security Settings</i> section on page 59 for very important information on using this feature.</p>
System Settings:	Press this button to configure communication settings between the NetLinx Master and the panel.
Calibrate:	Press this button to access the <i>Calibrate</i> Page (page 64).
G4 Web Control:	Press this button to enable or disable remote display and control of the panel via a Web-enabled PC.
Passwords:	Press this button to access the <i>Passwords</i> Page (page 67).
Panel Statistics:	Press this button to access the <i>Panel Statistics</i> Page (page 68).
Connection Utility:	Press this button to access the <i>Connection Utility</i> Page (page 71).
Back:	Saves the changes and returns to the previously active touch panel page.

Any use of the **Reset Settings** or **Remove Pages** buttons opens up the *Confirmation Dialog* window.

- The **Yes** button is disabled for 5 seconds while a timer reads down between it and the **No** button, and then becomes enabled.
- Clicking either button will return you to the *Protected Setup* page.



FIG. 57 Protected Setup page-System Settings confirmation dialog

Pressing the **Function Show** button once displays the function information on each button and slider in the *Setup* and *Protected Setup* pages (FIG. 57). Press the button again to hide the function information.

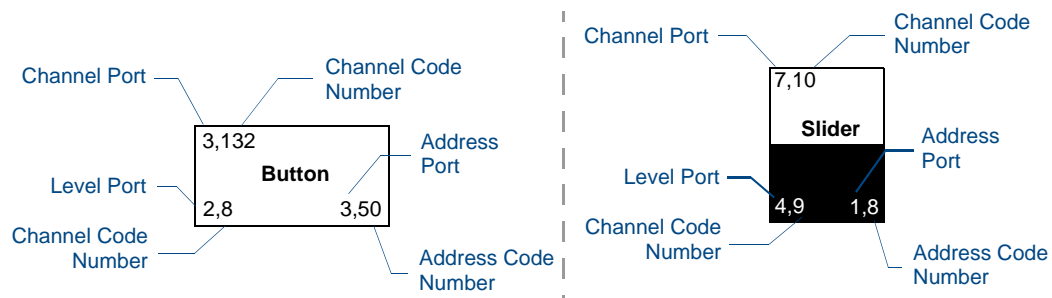


FIG. 58 Button/slider Function Show example

Security Settings

The **Security** button on the *Protected Setup* page has three settings: *Standard*, *Secure*, and *DoD*. Pressing the button opens the *Panel Security Setting* popup window (FIG. 59)



FIG. 59 Panel Security Setting popup window

Each of the settings has different features for touch panel security:

Security Profile Features	
Standard:	<ul style="list-style-type: none"> • Factory default, shipped in this configuration. • Default Protected Setup Password is "1988". • Remote login uses Telnet.
Secure:	<ul style="list-style-type: none"> • Default Protected Setup Password is "Amx1234!". • Minimum password requirement is 8 characters with at least one numeric character. • Remote login uses SSH. • Remote login user name is "amx". • Login failure attempt pauses 4 seconds before another login attempt is allowed. • After 3 consecutive unsuccessful SSH login attempts, login lockout is enabled for 15 minutes. • Login and logout audit logging is enabled.
DoD:	<ul style="list-style-type: none"> • Default Protected Setup Password is "Amx1234!". • Minimum password requirement is 8 characters with at least one numeric character, one uppercase character, one lower case character, and one special character, with no duplicate adjacent characters. • Remote login uses SSH. • Remote login user name is "amx". • Login failure attempt pauses 4 seconds before another login attempt is allowed. • After 3 consecutive unsuccessful SSH login attempts, login lockout is enabled for 15 minutes. • Login and logout audit logging is enabled. • DoD login banner is enabled.



A transition from one security mode to another will reset the Protected/Web Control/remote login password to the default value for the current security mode (please refer to the default passwords above). A transition to Secure or DoD mode will disable G4 Web Control. Although the security password features are immediate, a reboot must occur for all the new security mode features to fully take effect.

For more information on configuring AMX devices for a secure environment, please refer to the guide *Security Profiles: Configuring AMX Devices For Installation Into a Secure Environment*, available at www.amx.com.

System Settings Page

The *System Settings* page (FIG. 60) sets the Secondary DNS Address information with its corresponding IP communication parameters, sets NetLinX Master communication settings, and reads the device number assigned to the Modero panel. Select between the **IP**, **Master**, and **USB** tabs to view the appropriate information.



Changes made on any tab of this page are not saved until the panel is rebooted.

System Settings Page - IP Tab

The *IP* tab is the default tab on the *System Settings* page. This tab contains the main IP and MAC address information for the panel.

Red fields are user-editable

Blue fields cycle through choices

Grey fields are read-only

FIG. 60 System Settings Page - IP Tab

System Settings Page - IP Tab	
Connection Status icon:	Shows the current state of the panel's connection to the Master (green = online, red = offline). See the <i>Connection Status Icon</i> section on page 48 for details.
DHCP/Static:	Sets the panel to either DHCP or Static communication modes. <ul style="list-style-type: none"> <i>DHCP (Dynamic Host Configuration Protocol)</i> assigns IP Addresses from client stations logging onto a TCP/IP network via a DHCP server. <i>Static IP</i> is a permanent IP Address that is assigned to a node in a TCP/IP network.
IP Address:	Sets the secondary IP Address assigned to the panel.
Subnet Mask:	Sets a subnetwork address to the panel. <ul style="list-style-type: none"> <i>Subnetwork mask</i> is the technique used by the IP protocol to filter messages into a particular network segment (Subnet).
Gateway:	Sets a gateway value to the panel. <ul style="list-style-type: none"> <i>Gateway</i> is a computer that either performs protocol conversion between different types of networks/applications or acts as a go-between two or more networks that use the same protocols.
Host Name:	Sets the host name of the panel.
Primary DNS:	Sets the address of the primary DNS server used for host name lookups. <ul style="list-style-type: none"> <i>DNS (Domain Name System)</i> is software that lets users locate computers on a local network or the Internet (TCP/IP network) by host and domain. The DNS server maintains a database of host names for its domain and their corresponding IP Addresses.
Secondary DNS:	Sets a secondary DNS value to the panel.

System Settings Page - IP Tab (Cont.)	
Domain:	Sets the unique name on the Internet to the panel for DNS look-up. <ul style="list-style-type: none">• The panel belongs to the DNS domain.
Ethernet Mode:	Sets the speed of the Ethernet connection to the panel. <ul style="list-style-type: none">• Choices are: Auto, 10 Half Duplex, 10 Full Duplex, 100 Half Duplex, or 100 Full Duplex.
MAC Address:	Displays a read-only field that is factory set by AMX for the built-in Ethernet interface.
Back:	Saves any changes and returns to the previously active touch panel page.

System Settings - Master Tab

The *Master* tab of the *System Settings* page contains the necessary information for connecting to the network Master.

FIG. 61 System Settings page - Master Tab

System Settings Page - Master Tab	
Connection Status icon:	Shows the current state of the panel's connection to the Master (green = online, red = offline). See the <i>Connection Status Icon</i> section on page 48 for details.
Type:	<p>This display-only field indicates whether the NetLinx Master communicates with the panel via either USB or Ethernet. This is based on the cable connection from the rear.</p> <p>Note: <i>ICSNet is not a supported option on this panel.</i></p> <ul style="list-style-type: none"> • <i>Ethernet</i> is a CAT-5 cable (10/100Base T terminated in an RJ-45 connector) used to network computers together and is used in most LAN (local area networks). This description is also used to refer to both wired and wireless communication. • <i>USB</i> option cannot be used on Modero panels that are not equipped with a USB port.
Mode:	<p>Cycles between the different connection modes (<i>URL</i>, <i>Listen</i>, and <i>Auto</i>) (ETHERNET Only - disabled when USB is selected)</p> <ul style="list-style-type: none"> • URL - In this mode, enter the IP/URL, Master Port Number, and username/password (if used) on the Master. The System Number field is read-only because the panel obtains this information from the communicating Master. • Listen - In this mode, add the Modero panel address into the URL List in NetLinx Studio and set the connection mode to Listen. This mode allows the Modero touch panel to "listen" for the Master's communication signals. The System Number and Master IP/URL fields are red-only. • Auto - In this mode, enter the System Number and a username/password (if applicable). This mode is used when both the panel and the NetLinx Master are on the same Subnet and the Master has its UDP feature enabled. The Master IP/URL field is read-only.
System Number:	Allows you to enter a system number. Default value is 0 (zero). (ETHERNET Only - disabled when USB is selected)
Master IP/URL:	Sets the Master IP or URL of the NetLinx Master. (ETHERNET Only - disabled when USB is selected)
Master Port Number:	Enters the port number used with the NetLinx Master. • Default value is 1319. (ETHERNET Only - disabled when USB is selected)
Username/Password:	If the target Master has been previously secured, enter the alphanumeric string (into each field) assigned to a pre-configured user profile on the Master. This profile should have the pre-defined level of access/configuration rights.
Back:	Saves any changes and returns to the previously active touch panel page.

System Settings - USB Tab



FIG. 62 System Settings Page - USB Tab

System Settings Page - USB Tab	
Connection Status icon:	Shows the current state of the panel's connection to the Master (green = online, red = offline). See the <i>Connection Status Icon</i> section on page 48 for details.
IP Address:	The IP address of the device
Back:	Saves any changes and returns to the previously active touch panel page.

Calibrate Page

The *Calibrate* page (FIG. 63) allows you to calibrate the touch panel for maximum sensitivity.

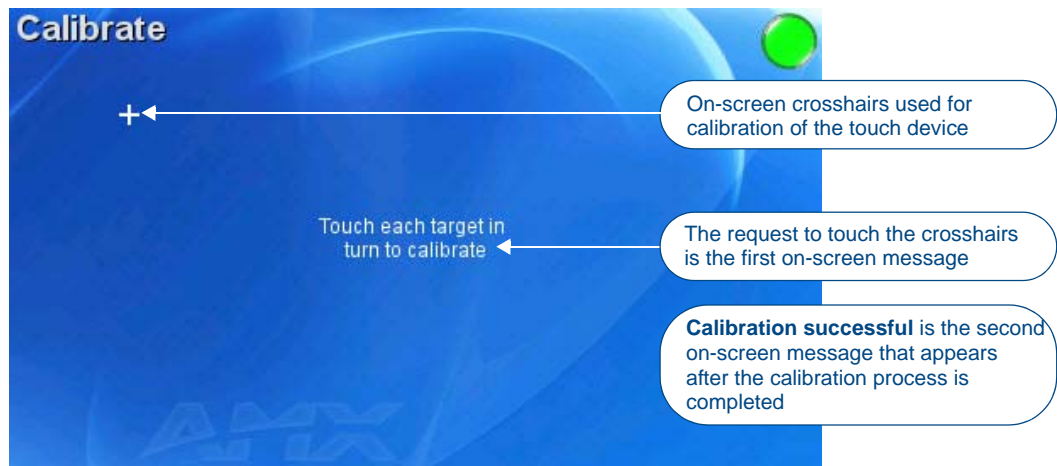


FIG. 63 Calibration page (actually 3 separate screens)

- Press and hold the **Front Setup Access** button for 9 seconds to access the *Calibration* page.
- Press the crosshairs to calibrate the panel and return to the last active firmware page.

G4 Web Control Page

The *G4 Web Control* page (FIG. 64) centers around enabling and disabling both the display and control of your panel via the Web. An external PC running a VNC client, installed during the initial communication to the G4 panel, makes this possible.



FIG. 64 G4 Web Control Settings page

Each panel supports the open standard Virtual Network Computing (VNC) interface. These panels contain a VNC server that allows them to accept a connection from any other device running a VNC client. Once a connection is established to that target device, the client can control the touch panel remotely.

G4 Web Control Settings Page	
Connection Status icon:	Shows the current state of the panel's connection to the Master (green = online, red = offline). See the <i>Connection Status Icon</i> section on page 48 for details.
Enable/Enabled:	The Enable/Enabled button allows you to toggle between the two G4 activation settings: <ul style="list-style-type: none"> • Enable - deactivates the G4 Web Control feature on the panel. • Enabled - activates the G4 Web Control feature on the panel and allows an external PC running a VNC client to access the panel after the remaining fields are configured.
Timeout:	Sets the length of time (in minutes) the panel can remain idle (no cursor movements) before the session is closed and the user is disconnected. <ul style="list-style-type: none"> • Minimum value = 0 minutes (panel never times-out) • Maximum value = 240 minutes (panel times-out after 240 minutes/4hours)
Network Interface:	Displays the detected method of communication to the web. Wired is used when a direct Ethernet connection is being used for communication to the web. <i>This is a default setting.</i>
Control Name:	Allows entry of a unique alphanumeric string used as the display name of the panel within the <i>Manage WebControl Connections</i> window of the new NetLinx Security browser window. <ul style="list-style-type: none"> • This Web Control tab displays a G4 icon alongside the link to the Web Control Name given to this panel (FIG. 65).
Control Password:	Allows entry of the G4 Authentication session password associated for VNC web access of this panel.
Control Port:	Allows entry of the VNC Web Server's port value. <ul style="list-style-type: none"> • Default value = 5900.
Max Connects:	This read-only field displays the maximum number of users that can be connected simultaneously to the target panel via the Web. <ul style="list-style-type: none"> • Default value = 1.

G4 Web Control Settings Page (Cont.)	
Connect Count	This read-only field displays the current number of users connected to the target panel via the Web. <i>This value cannot exceed the Max Connects field.</i>
Back:	Saves the changes and returns to the previously active touch panel page.



FIG. 65 Sample relationship between G4 Web Control and Manage WebControl Connections window

Refer to the *Using the NetLinX Master to Control the Panel* section on page 38 for more detailed instructions on how to use the G4 Web Control page with the web-based NetLinX Security application.

Password Page

The options on the *Password* page (FIG. 66) allow you to assign the passwords required for users to access the *Protected Setup* page.



FIG. 66 Password page

Password Page	
Connection Status icon:	Shows the current state of the panel's connection to the Master (green = online, red = offline). See the <i>Connection Status Icon</i> section on page 48 for details.
In Panel Password Change:	Accesses the alphanumeric values associated to particular password sets. <ul style="list-style-type: none">• The PASSWORD 1, 2, 3, 4 and 5 (protected) buttons open a keyboard to enter alphanumeric values associated to the selected password group. Note: Clearing Password #5 removes the need to enter a password before accessing the <i>Protected Setup</i> page.
Back:	Saves all changes and returns to the previous page.

Panel Statistics Page

The options on the Panel Statistics page allow you to track the connection status for the panel. The *Panel Statistics* page tracks ICSP messages, Blink messages, and Ethernet connection statistics (FIG. 67). Select between the **ICSP**, **Blinks**, and **Wired** tabs to view the appropriate information.

Panel Statistics - ICSP Tab

The **ICSP** Tab tracks messages between the master and the touch panel, as ICSP is the protocol they use to communicate with each other.



FIG. 67 Panel Statistics Page - ICSP Tab

Panel Statistics Page - ICSP Tab	
Connection Status icon:	Shows the current state of the panel's connection to the Master (green = online, red = offline). See the <i>Connection Status Icon</i> section on page 48 for details.
Total:	<ul style="list-style-type: none">Received - The total ICSP messages received by the panel.Processed - The total ICSP messages processed by the panel.Dropped - The total ICSP messages dropped by the panel.
Last 15 Minutes:	<ul style="list-style-type: none">Received - The total ICSP messages received by the panel in the last 15 minutes.Processed - The total ICSP messages processed by the panel in the last 15 minutes.Dropped - The total ICSP messages dropped by the panel in the last 15 minutes.
Back:	Saves all changes and returns to the previous page.

Panel Statistics - Blinks Tab

The **Blinks** Tab tracks blinks, which are messages sent by the master once every 5 seconds to all connected devices.



FIG. 68 Panel Statistics Page - Blinks Tab

Panel Statistics Page - Blinks Tab	
Connection Status icon:	Shows the current state of the panel's connection to the Master (green = online, red = offline). See the <i>Connection Status Icon</i> section on page 48 for details.
Total:	<ul style="list-style-type: none"> Received - The total Blink messages received by the panel. Missed - The total Blink messages missed by the panel.
Last 15 Minutes:	<ul style="list-style-type: none"> Received - The total Blink messages received by the panel in the last 15 minutes. Missed - The total Blink messages missed by the panel in the last 15 minutes.
Clear:	Pressing this button clears all fields on this page.
Refresh:	Pressing this button refreshes all data in the fields on this page.
Back:	Saves all changes and returns to the previous page.

Panel Statistics - Wired Tab

The **Wired** Tab lists all of the Ethernet connection statistics for this panel.



FIG. 69 Panel Statistics Page - Wired Tab

Panel Statistics Page - Wired Tab	
Connection Status icon:	Shows the current state of the panel's connection to the Master (green = online, red = offline). See the <i>Connection Status Icon</i> section on page 48 for details.
Wired Statistics:	The Ethernet connection statistics for the panel.
Clear:	Clears all panel connection statistics.
Refresh:	Refreshes all panel connection statistics.
Back:	Saves all changes and returns to the previous page.

Checking the Panel Statistics

- 1. Press the **Panel Statistics** button in the *Protected Setup Page* section.
- 2. Toggle between the three tabs: **ICSP**, **Blinks**, and **Wired**.

Refreshing the Panel Statistics

- 1. In the *Protected Setup Page* section, press the **Panel Statistics** button.
- 2. Toggle between the **ICSP**, **Blinks**, and **Wired** tabs.
- 3. Push the **Refresh** button on each tab.

Clearing the Panel Statistics

- 1. In the *Protected Setup Page* section, press the **Panel Statistics** button.
- 2. Push the **Clear** button.
- 3. Confirm the selection.

Connection Utility

The *Connection Utility* page (FIG. 70) allows access to the connection information for the panel, such as the panel IP address.



FIG. 70 Connection Utility Page

Connection Utility Page	
Connection Status icon:	Shows the current state of the panel's connection to the Master (green = online, red = offline). See the <i>Connection Status Icon</i> section on page 48 for details.
Connection Information:	
Master IP:	The IP Address for the connected master.
Panel IP:	The IP Address for the panel.
Connection Statistics:	
Messages Sent:	The number of messages sent from the panel to the master.
Responses Received:	The number of responses the panel has received from the master.
Responses Missed:	The number of expected responses from the master to the panel missed.
Back:	Saves all changes and returns to the previous page.

Using the Connection Utility

1. Press the **Connection Utility** button in the *Protected Setup Page* section to open the *Connection Utility* page.
2. The *Connection Information* notes the IP of the connected master and the IP of the panel. The *Connection Statistics* show the current quality of the panel connection.
3. Push **Back** to save your changes and return to the *Protected Setup* page.

Programming

Overview

The NXD-430 and NXD-435 may be programmed, using the commands in this section, to perform a wide variety of operations using Send_Commands and variable text commands.

- A device must first be defined in the NetLinX programming language with values for the Device: Port: System
- In all programming examples - *Panel* is used in place of these values and represents all Modero panels).



WARNING

Verify that you are using the latest NetLinX Master and Modero firmware, and verify that you are using the latest version of NetLinX Studio and TPD4.

Button Assignments

- Button Channel Range: 1 - 4000 Button push and Feedback (per address port)
- Button Variable Text range: 1 - 4000 (per address port)
- Button States Range: 1 - 256 (0 = All states, for General buttons 1 = Off state and 2 = On state).
- Level Range: 1 - 600 (Default level value 0 - 255, can be set up to 1 - 65535)
- Address port Range: 1 - 100



NOTE

These button assignments can only be adjusted in TPD4 and not on the panels themselves.

Page Commands

These Page Commands are used in NetLinX Programming Language and are case insensitive.

Page Commands	
@APG	<p>Add the popup page to a group if it does not already exist. If the new popup is added to a group which has a popup displayed on the current page along with the new pop-up, the displayed popup will be hidden and the new popup will be displayed.</p> <p>Syntax:</p> <pre>" '@APG-<popup page name>;<popup group name>' "</pre> <p>Variables:</p> <p>popup page name = 1 - 50 ASCII characters. Name of the popup page.</p> <p>popup group name = 1 - 50 ASCII characters. Name of the popup group.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'@APG-Popup1;Group1' "</pre> <p>Adds the popup page 'Popup1' to the popup group 'Group1'.</p>
@CPG	<p>Clear all popup pages from specified popup group.</p> <p>Syntax:</p> <pre>" '@CPG-<popup group name>' "</pre> <p>Variable:</p> <p>popup group name = 1 - 50 ASCII characters. Name of the popup group.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'@CPG-Group1' "</pre> <p>Clears all popup pages from the popup group 'Group1'.</p>

Page Commands (Cont.)	
@DPG	<p>Delete a specific popup page from specified popup group if it exists.</p> <p>Syntax:</p> <pre>" '@DPG-<popup page name>;<popup group name>' "</pre> <p>Variables:</p> <p>popup page name = 1 - 50 ASCII characters. Name of the popup page.</p> <p>popup group name = 1 - 50 ASCII characters. Name of the popup group.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'@DPG-Popup1;Group1' "</pre> <p>Deletes the popup page 'Popup1' from the popup group 'Group1'.</p>
@PDR	<p>Set the popup location reset flag.</p> <p>If the flag is set, the popup will return to its default location on show instead of its last drag location.</p> <p>Syntax:</p> <pre>" '@PDR-<popup page name>;<reset flag>' "</pre> <p>Variable:</p> <p>popup page name = 1 - 50 ASCII characters. Name of the page the popup is displayed On.</p> <p>reset flag = 1 = Enable reset flag 0 = Disable reset flag</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'@PDR-Popup1;1' "</pre> <p>Popup1 will return to its default location when turned On.</p>
@PHE	<p>Set the hide effect for the specified popup page to the named hide effect.</p> <p>Syntax:</p> <pre>" '@PHE-<popup page name>;<hide effect name>' "</pre> <p>Variable:</p> <p>popup page name = 1 - 50 ASCII characters. Name of the page the popup is displayed On.</p> <p>hide effect name = Refers to the popup effect names being used.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'@PHE-Popup1;Slide to Left' "</pre> <p>Sets the Popup1 hide effect name to 'Slide to Left'.</p>
@PHP	<p>Set the hide effect position.</p> <p>Only 1 coordinate is ever needed for an effect; however, the command will specify both. This command sets the location at which the effect will end.</p> <p>Syntax:</p> <pre>" '@PHP-<popup page name>;<x coordinate>;<y coordinate>' "</pre> <p>Variable:</p> <p>popup page name = 1 - 50 ASCII characters. Name of the page the popup is displayed On.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'@PHP-Popup1;75,0' "</pre> <p>Sets the Popup1 hide effect x-coordinate value to 75 and the y-coordinate value to 0.</p>
@PHT	<p>Set the hide effect time for the specified popup page.</p> <p>Syntax:</p> <pre>" '@PHT-<popup page name>;<hide effect time>' "</pre> <p>Variables:</p> <p>popup page name = 1 - 50 ASCII characters. Name of the page the popup is displayed On.</p> <p>hide effect time = Given in 1/10ths of a second.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'@PHT-Popup1;50' "</pre> <p>Sets the Popup1 hide effect time to 5 seconds.</p>

Page Commands (Cont.)	
@PPA	<p>Close all popups on a specified page.</p> <ul style="list-style-type: none"> • If the page name is empty, the current page is used. • Same as the 'Clear Page' command in TPDesign4. <p>Syntax:</p> <pre>" '@PPA-<page name>' "</pre> <p>Variable:</p> <p>page name = 1 - 50 ASCII characters. Name of the page the popup is displayed On.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'@PPA-Page1' "</pre> <p>Close all popups on Page1.</p>
@PPF	<p>Deactivate a specific popup page on either a specified page or the current page.</p> <ul style="list-style-type: none"> • If the page name is empty, the current page is used (see example 2 below). • If the popup page is part of a group, the whole group is deactivated. • This command works in the same way as the 'Hide Popup' command in TPDesign4. <p>Syntax:</p> <pre>" '@PPF-<popup page name>;<page name>' "</pre> <p>Variables:</p> <p>popup page name = 1 - 50 ASCII characters. Name of the popup page.</p> <p>page name = 1 - 50 ASCII characters. Name of the page the popup is displayed On.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'@PPF-Popup1;Main' "</pre> <p>Deactivates the popup page 'Popup1' on the Main page.</p> <p>Example 2:</p> <pre>SEND_COMMAND Panel, "'@PPF-Popup1' "</pre> <p>Deactivates the popup page 'Popup1' on the current page.</p>
@PPG	<p>Toggle a specific popup page on either a specified page or the current page.</p> <ul style="list-style-type: none"> • If the page name is empty, the current page is used (see example 2). • Toggling refers to the activating/deactivating (On/Off) of a popup page. • This command works in the same way as the 'Toggle Popup' command in TPDesign4. <p>Syntax:</p> <pre>" '@PPG-<popup page name>;<page name>' "</pre> <p>Variables:</p> <p>popup page name = 1 - 50 ASCII characters. Name of the popup page.</p> <p>page name = 1 - 50 ASCII characters. Name of the page the popup is displayed On.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'@PPG-Popup1;Main' "</pre> <p>Toggles the popup page 'Popup1' on the 'Main' page from one state to another (On/Off).</p> <p>Example 2:</p> <pre>SEND_COMMAND Panel, "'@PPG-Popup1' "</pre> <p>Toggles the popup page 'Popup1' on the current page from one state to another (On/Off).</p>
@PPK	<p>Kill a specific popup page from all pages.</p> <ul style="list-style-type: none"> • <i>Kill</i> refers to the deactivating (Off) of a popup window from all pages. • If the pop-up page is part of a group, the whole group is deactivated. • This command works in the same way as the 'Clear Group' command in TPDesign 4. <p>Syntax:</p> <pre>" '@PPK-<popup page name>' "</pre> <p>Variable:</p> <p>popup page name = 1 - 50 ASCII characters. Name of the popup page.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'@PPK-Popup1' "</pre> <p>Kills the popup page 'Popup1' on all pages.</p>

Page Commands (Cont.)	
@PPM	<p>Set the modality of a specific popup page to Modal or NonModal.</p> <p>A Modal popup page, when active, only allows use of the buttons and features on that popup page. All other buttons on the panel page are inactivated.</p> <p>Syntax:</p> <pre>" '@PPM-<popup page name>;<mode>' "</pre> <p>Variable:</p> <p>popup page name = 1 - 50 ASCII characters. Name of the popup page.</p> <p>mode = NONMODAL converts a previously Modal popup page to a NonModal. MODAL converts a previously NonModal popup page to Modal. modal = 1 and non-modal = 0</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'@PPM-Popup1;Modal' "</pre> <p>Sets the popup page 'Popup1' to Modal.</p> <pre>SEND_COMMAND Panel, "'@PPM-Popup1;1' "</pre> <p>Sets the popup page 'Popup1' to Modal.</p>
@PPN	<p>Activate a specific popup page to launch on either a specified page or the current page.</p> <ul style="list-style-type: none"> • If the page name is empty, the current page is used (see example 2 below). • If the popup page is already on, do not re-draw it. • This command works in the same way as the 'Show Popup' command in TPDesign4. <p>Syntax:</p> <pre>" '@PPN-<popup page name>;<page name>' "</pre> <p>Variable:</p> <p>popup page name = 1 - 50 ASCII characters. Name of the popup page.</p> <p>page name = 1 - 50 ASCII characters. Name of the page the popup is displayed On.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'@PPN-Popup1;Main' "</pre> <p>Activates 'Popup1' on the 'Main' page.</p> <p>Example 2:</p> <pre>SEND_COMMAND Panel, "'@PPN-Popup1' "</pre> <p>Activates the popup page 'Popup1' on the current page.</p>
@PPT	<p>Set a specific popup page to timeout within a specified time.</p> <ul style="list-style-type: none"> • If timeout is empty, the popup page will clear the timeout. <p>Syntax:</p> <pre>" '@PPT-<popup page name>;<timeout>' "</pre> <p>Variable:</p> <p>popup page name = 1 - 50 ASCII characters. Name of the popup page.</p> <p>timeout = Timeout duration in 1/10ths of a second.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'@PPT-Popup1;30' "</pre> <p>Sets the popup page 'Popup1' to timeout within 3 seconds.</p>
@PPX	<p>Close all popups on all pages.</p> <ul style="list-style-type: none"> • This command works in the same way as the 'Clear All' command in TPDesign 4. <p>Syntax:</p> <pre>" '@PPX' "</pre> <p>Example:</p> <pre>SEND_COMMAND Panel, "'@PPX' "</pre> <p>Close all popups on all pages.</p>

Page Commands (Cont.)	
@PSE	<p>Set the show effect for the specified popup page to the named show effect.</p> <p>Syntax:</p> <pre>" '@PSE-<popup page name>;<show effect name>' "</pre> <p>Variable:</p> <p>popup page name = 1 - 50 ASCII characters. Name of the page the popup is displayed On.</p> <p>show effect name = Refers to the popup effect name being used.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'@PSE-Popup1;Slide from Left' "</pre> <p>Sets the Popup1 show effect name to 'Slide from Left'.</p>
@PSP	<p>Set the show effect position.</p> <ul style="list-style-type: none"> Only 1 coordinate is ever needed for an effect; however, the command will specify both. This command sets the location at which the effect will begin at. <p>Syntax:</p> <pre>" '@PSP-<popup page name>;<x coordinate>,<y coordinate>' "</pre> <p>Variable:</p> <p>popup page name = 1 - 50 ASCII characters. Name of the page the popup is displayed On.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'@PSP-Popup1;100,0' "</pre> <p>Sets the Popup1 show effect x-coordinate value to 100 and the y-coordinate value to 0.</p>
@PST	<p>Set the show effect time for the specified popup page.</p> <p>Syntax:</p> <pre>" '@PST-<popup page name>;<show effect time>' "</pre> <p>Variable:</p> <p>popup page name = 1 - 50 ASCII characters. Name of the page the popup is displayed On.</p> <p>show effect time = Given in 1/10ths of a second.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'@PST-Popup1;50' "</pre> <p>Sets the Popup1 show effect time to 5 seconds.</p>
PAGE	<p>Flip to a specified page.</p> <ul style="list-style-type: none"> Flips to a page with a specified page name. If the page is currently active, it will not redraw the page. <p>Syntax:</p> <pre>" 'PAGE-<page name>' "</pre> <p>Variable:</p> <p>page name = 1 - 50 ASCII characters. Name of the page the popup is displayed On.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'PAGE-Page1' "</pre> <p>Flips to page1.</p>

Page Commands (Cont.)	
PPOF	<p>Deactivate a specific popup page on either a specified page or the current page.</p> <ul style="list-style-type: none"> • If the page name is empty, the current page is used (see example 2 below). • If the popup page is part of a group, the whole group is deactivated. • This command works in the same way as the 'Hide Popup' command in TPDesign4. <p>Syntax:</p> <pre>" 'PPOF-<popup page name>;<page name>' "</pre> <p>Variable:</p> <p>popup page name = 1 - 50 ASCII characters. Name of the popup page. page name = 1 - 50 ASCII characters. Name of the page the popup is displayed On.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, " 'PPOF-Popup1;Main' "</pre> <p>Deactivates the popup page 'Popup1' on the Main page.</p> <p>Example 2:</p> <pre>SEND_COMMAND Panel, " 'PPOF-Popup1' "</pre> <p>Deactivates the popup page 'Popup1' on the current page.</p>
PPOG	<p>Toggle a specific popup page on either a specified page or the current page.</p> <ul style="list-style-type: none"> • If the page name is empty, the current page is used (see example 2 below). • <i>Toggling</i> refers to the activating/deactivating (On/Off) of a popup page. • This command works in the same way as the 'Toggle Popup' command in TPDesign4. <p>Syntax:</p> <pre>" 'PPOG-<popup page name>;<page name>' "</pre> <p>Variable:</p> <p>popup page name = 1 - 50 ASCII characters. Name of the popup page. page name = 1 - 50 ASCII characters. Name of the page the popup is displayed On.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, " 'PPOG-Popup1;Main' "</pre> <p>Toggles the popup page 'Popup1' on the Main page from one state to another (On/Off).</p> <p>Example 2:</p> <pre>SEND_COMMAND Panel, " 'PPOG-Popup1' "</pre> <p>Toggles the popup page 'Popup1' on the current page from one state to another (On/Off).</p>
PPON	<p>Activate a specific popup page to launch on either a specified page or the current page.</p> <ul style="list-style-type: none"> • If the page name is empty, the current page is used (see example 2 below). • If the popup page is already On, do not re-draw it. • This command works in the same way as the 'Show Popup' command in TPDesign4. <p>Syntax:</p> <pre>" 'PPON-<popup page name>;<page name>' "</pre> <p>Variable:</p> <p>popup page name = 1 - 50 ASCII characters. Name of the popup page. page name = 1 - 50 ASCII characters. Name of the page the popup is displayed On.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, " 'PPON-Popup1; Main' "</pre> <p>Activates the popup page 'Popup1' on the Main page.</p> <p>Example 2:</p> <pre>SEND_COMMAND Panel, " 'PPON-Popup1' "</pre> <p>Activates the popup page 'Popup1' on the current page.</p>

Programming Numbers for Colors, Fonts, and Borders

Colors can be used to set the colors on buttons, sliders, and pages. The lowest color number represents the lightest color-specific display and the highest number represents the darkest display. For example, 0 represents light red, and 5 is dark red.

RGB Triplets and Names For Basic 88 Colors

RGB Values for all 88 Basic Colors									
Index No.	Name	Red	Green	Blue	Index No.	Name	Red	Green	Blue
00	Very Light Red	255	0	0	50	Blue	0	0	191
01	Light Red	223	0	0	52	Dark Blue	0	0	127
02	Red	191	0	0	53	Very Dark Blue	0	0	95
03	Medium Red	159	0	0	54	Very Light Purple	128	0	255
04	Dark Red	127	0	0	55	Light Purple	112	0	223
05	Very Dark Red	95	0	0	56	Purple	96	0	191
06	Very Light Orange	255	128	0	57	Medium Purple	80	0	159
07	Light Orange	223	112	0	58	Dark Purple	64	0	127
08	Orange	191	96	0	59	Very Dark Purple	48	0	95
09	Medium Orange	159	80	0	60	Very Light Magenta	255	0	255
10	Dark Orange	127	64	0	61	Light Magenta	223	0	223
11	Very Dark Orange	95	48	0	62	Magenta	191	0	191
12	Very Light Yellow	255	255	0	63	Medium Magenta	159	0	159
13	Light Yellow	223	223	0	64	Dark Magenta	127	0	127
14	Yellow	191	191	0	65	Very Dark Magenta	95	0	95
15	Medium Yellow	159	159	0	66	Very Light Pink	255	0	128
16	Dark Yellow	127	127	0	67	Light Pink	223	0	112
17	Very Dark Yellow	95	95	0	68	Pink	191	0	96
18	Very Light Lime	128	255	0	69	Medium Pink	159	0	80
19	Light Lime	112	223	0	70	Dark Pink	127	0	64
20	Lime	96	191	0	71	Very Dark Pink	95	0	48
21	Medium Lime	80	159	0	72	White	255	255	255
22	Dark Lime	64	127	0	73	Grey1	238	238	238
23	Very Dark Lime	48	95	0	74	Grey3	204	204	204
24	Very Light Green	0	255	0	75	Grey5	170	170	170
25	Light Green	0	223	0	76	Grey7	136	136	136
26	Green	0	191	0	77	Grey9	102	102	102
27	Medium Green	0	159	0	78	Grey4	187	187	187
28	Dark Green	0	127	0	79	Grey6	153	153	153
29	Very Dark Green	0	95	0	80	Grey8	119	119	119
30	Very Light Mint	0	255	128	81	Grey10	85	85	85
31	Light Mint	0	223	112	82	Grey12	51	51	51
32	Mint	0	191	96	83	Grey13	34	34	34
33	Medium Mint	0	159	80	84	Grey2	221	221	221
34	Dark Mint	0	127	64	85	Grey11	68	68	68
35	Very Dark Mint	0	95	48	86	Grey14	17	17	17
36	Very Light Cyan	0	255	255	87	Black	0	0	0
37	Light Cyan	0	223	223	255	TRANSPARENT	99	53	99
38	Cyan	0	191	191					
39	Medium Cyan	0	159	159					
40	Dark Cyan	0	127	127					
41	Very Dark Cyan	0	95	95					
42	Very Light Aqua	0	128	255					
43	Light Aqua	0	112	223					
44	Aqua	0	96	191					
45	Medium Aqua	0	80	159					
46	Dark Aqua	0	64	127					
47	Very Dark Aqua	0	48	95					
48	Very Light Blue	0	0	255					
49	Light Blue	0	0	223					

Font Styles and ID Numbers

Font styles can be used to program the text fonts on buttons, sliders, and pages. The following chart shows the default font type and their respective ID numbers generated by TPDesign4.

Default Font Styles and ID Numbers					
Font ID #	Font type	Size	Font ID #	Font type	Size
1	Courier New	9	19	Arial	9
2	Courier New	12	20	Arial	10
3	Courier New	18	21	Arial	12
4	Courier New	26	22	Arial	14
5	Courier New	32	23	Arial	16
6	Courier New	18	24	Arial	18
7	Courier New	26	25	Arial	20
8	Courier New	34	26	Arial	24
9	AMX Bold	14	27	Arial	36
10	AMX Bold	20	28	Arial Bold	10
11	AMX Bold	36	29	Arial Bold	8
32 - Variable Fonts start at 32.					



NOTE

Fonts must be imported into a TPDesign4 project file. The font ID numbers are assigned by TPDesign4. These values are also listed in the **Generate Programmer's Report**.

Border Styles and Programming Numbers

Border styles may be used to program borders on buttons, sliders, and popup pages.

Border Styles and Programming Numbers			
No.	Border styles	No.	Border styles
0-1	No border	10-11	Picture frame
2	Single line	12	Double line
3	Double line	20	Bevel-S
4	Quad line	21	Bevel-M
5-6	Circle 15	22-23	Circle 15
7	Single line	24-27	Neon inactive-S
8	Double line	40-41	Diamond 55
9	Quad line		

TPD4 Border Styles by Name

The TPDesign4 Touch Panel Design program has pre-set border styles that are user-selectable. The following number values may not be used for programming purposes when changing border styles.

TPD4 border styles may ONLY be changed by using the name.

TPD4 Border Styles by Name			
No.	Border styles	No.	Border styles
1	None	27	Cursor Bottom
2	AMX Elite -L	28	Cursor Bottom with Hole
3	AMX Elite -M	29	Cursor Top
4	AMX Elite -S	30	Cursor Top with Hole
5	Bevel -L	31	Cursor Left
6	Bevel -M	32	Cursor Left with Hole
7	Bevel -S	33	Cursor Right
8	Circle 15	34	Cursor Right with Hole
9	Circle 25	35	Custom Frame
10	Circle 35	36	Diamond 15
11	Circle 45	37	Diamond 25
12	Circle 55	38	Diamond 35
13	Circle 65	39	Diamond 45
14	Circle 75	40	Diamond 55
15	Circle 85	41	Diamond 65
16	Circle 95	42	Diamond 75
17	Circle 105	43	Diamond 85
18	Circle 115	44	Diamond 95
19	Circle 125	45	Diamond 105
20	Circle 135	46	Diamond 115
21	Circle 145	47	Diamond 125
22	Circle 155	48	Diamond 135
23	Circle 165	49	Diamond 145
24	Circle 175	50	Diamond 155
25	Circle 185	51	Diamond 165
26	Circle 195	52	Diamond 175
53	Diamond 185	97	Menu Bottom Rounded 185
54	Diamond 195	98	Menu Bottom Rounded 195
55	Double Bevel -L	99	Menu Top Rounded 15
56	Double Bevel -M	100	Menu Top Rounded 25
57	Double Bevel -S	101	Menu Top Rounded 35
58	Double Line	102	Menu Top Rounded 45
59	Fuzzy	103	Menu Top Rounded 55
60	Glow-L	104	Menu Top Rounded 65
61	Glow-S	105	Menu Top Rounded 75
62	Help Down	106	Menu Top Rounded 85
63	Neon Active -L	107	Menu Top Rounded 95
64	Neon Active -S	108	Menu Top Rounded 105
65	Neon Inactive -L	109	Menu Top Rounded 115
66	Neon Inactive -S	110	Menu Top Rounded 125
67	Oval H 60x30	111	Menu Top Rounded 135
68	Oval H 100x50	112	Menu Top Rounded 145
69	Oval H 150x75	113	Menu Top Rounded 155
70	Oval H 200x100	114	Menu Top Rounded 165
71	Oval V 30x60	115	Menu Top Rounded 175
72	Oval V 50x100	116	Menu Top Rounded 185
73	Oval V 75x150	117	Menu Top Rounded 195
74	Oval V 100x200	118	Menu Right Rounded 15
75	Picture Frame	119	Menu Right Rounded 25
76	Quad Line	120	Menu Right Rounded 35
77	Single Line	121	Menu Right Rounded 45

TPD4 Border Styles by Name (Cont.)			
78	Windows Style Popup	122	Menu Right Rounded 55
79	Windows Style Popup (Status Bar)	123	Menu Right Rounded 65
80	Menu Bottom Rounded 15	124	Menu Right Rounded 75
81	Menu Bottom Rounded 25	125	Menu Right Rounded 85
82	Menu Bottom Rounded 35	126	Menu Right Rounded 95
83	Menu Bottom Rounded 45	127	Menu Right Rounded 105
84	Menu Bottom Rounded 55	128	Menu Right Rounded 115
85	Menu Bottom Rounded 65	129	Menu Right Rounded 125
86	Menu Bottom Rounded 75	130	Menu Right Rounded 135
87	Menu Bottom Rounded 85	131	Menu Right Rounded 145
88	Menu Bottom Rounded 95	132	Menu Right Rounded 155
89	Menu Bottom Rounded 105	133	Menu Right Rounded 165
90	Menu Bottom Rounded 115	134	Menu Right Rounded 175
91	Menu Bottom Rounded 125	135	Menu Right Rounded 185
92	Menu Bottom Rounded 135	136	Menu Right Rounded 195
93	Menu Bottom Rounded 145	137	Menu Left Rounded 15
94	Menu Bottom Rounded 155	138	Menu Left Rounded 25
95	Menu Bottom Rounded 165	139	Menu Left Rounded 35
96	Menu Bottom Rounded 175	140	Menu Left Rounded 45
141	Menu Left Rounded 55	149	Menu Left Rounded 135
142	Menu Left Rounded 65	150	Menu Left Rounded 145
143	Menu Left Rounded 75	151	Menu Left Rounded 155
144	Menu Left Rounded 85	152	Menu Left Rounded 165
145	Menu Left Rounded 95	153	Menu Left Rounded 175
146	Menu Left Rounded 105	154	Menu Left Rounded 185
147	Menu Left Rounded 115	155	Menu Left Rounded 195
148	Menu Left Rounded 125		

"^" Button Commands

These Button Commands are used in NetLinX Studio and are case insensitive.

All commands that begin with "^" have the capability of assigning a variable text address range and button state range.

- A device must first be defined in the NetLinX programming language with values for the Device: Port: System.
- In all programming examples - *Panel* is used in place of these values.
- **Variable text ranges** allow you to target 1 or more variable text channels in a single command.
- **Button State ranges** allow you to target 1 or more states of a variable text button with a single command.
- "." Character is used for the 'through' notation, also the "&" character is used for the 'And' notation.

"^" Button Commands	
^ANI	<p>Run a button animation (in 1/10 second).</p> <p>Syntax:</p> <pre>"'^ANI-<vt addr range>,<start state>,<end state>,<time>'"</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>start state = Beginning of button state (0= current state).</p> <p>end state = End of button state.</p> <p>time = In 1/10 second intervals.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'^ANI-500,1,25,100'"</pre> <p>Runs a button animation at text range 500 from state 1 to state 25 for 10 second.</p>

"^" Button Commands (Cont.)	
^APF	<p>Add page flip action to a button if it does not already exist.</p> <p>Syntax:</p> <pre>"'^APF-<vt addr range>,<page flip action>,<page name>' "</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>page flip action =</p> <ul style="list-style-type: none"> Stan[dardPage] - Flip to standard page Prev[iousPage] - Flip to previous page Show[Popup] - Show Popup page Hide[Popup] - Hide Popup page Togg[lePopup] - Toggle popup state ClearG[roup] - Clear popup page group from all pages ClearP[age] - Clear all popup pages from a page with the specified page name ClearA[ll] - Clear all popup pages from all pages <p>page name = 1 - 50 ASCII characters.</p> <p>Example:</p> <pre>SEND COMMAND Panel,"'^APF-400,Stan,Main Page' "</pre> <p>Assigns a button to a standard page flip with page name 'Main Page'.</p>
^BAT	<p>Append non-unicode text.</p> <p>Syntax:</p> <pre>"'^BAT-<vt addr range>,<button states range>,<new text>' "</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>new text = 1 - 50 ASCII characters.</p> <p>Example:</p> <pre>SEND_COMMAND Panel,"'^BAT-520,1,Enter City' "</pre> <p>Appends the text 'Enter City' to the button's OFF state.</p>
^BAU	<p>Append unicode text.</p> <ul style="list-style-type: none"> • Same format as ^UNI. <p>Syntax:</p> <pre>"'^BAU-<vt addr range>,<button states range>,<unicode text>' "</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>unicode text = 1 - 50 ASCII characters. Unicode characters must be entered in Hex format.</p> <p>Example:</p> <pre>SEND_COMMAND Panel,"'^BAU-520,1,00770062' "</pre> <p>Appends Unicode text '00770062' to the button's OFF state.</p>

"^" Button Commands (Cont.)	
^BCB	<p>Set the border color to the specified color, <i>only if the specified border color is not the same as the current color.</i></p> <p>Syntax:</p> <pre>"'^BCB-<vt addr range>,<button states range>,<color value>'"</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>color value = Refer to theRGB Values for all 88 Basic Colors table on page 79 for more information.</p> <p>Example:</p> <pre>SEND_COMMAND Panel,"'^BCB-500.504&510,1,12'"</pre> <p>Sets the Off state border color to 12 (Yellow).</p> <ul style="list-style-type: none"> Colors can be set by Color Numbers, Color name, R,G,B,alpha colors (RRGGBBAA) and R, G & B colors values (RRGGBB). Refer to theRGB Values for all 88 Basic Colors table on page 79.
^BCF	<p>Set the fill color to the specified color, <i>only if the specified fill color is not the same as the current color.</i></p> <p>Syntax:</p> <pre>"'^BCF-<vt addr range>,<button states range>,<color value>'"</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>color value = Refer to theRGB Values for all 88 Basic Colors table on page 79 for more information.</p> <p>Example:</p> <pre>SEND_COMMAND Panel,"'^BCF-500.504&510.515,1,12'" SEND_COMMAND Panel,"'^BCF-500.504&510.515,1,Yellow'" SEND_COMMAND Panel,"'^BCF-500.504&510.515,1,#F4EC0A63'" SEND_COMMAND Panel,"'^BCF-500.504&510.515,1,#F4EC0A'"</pre> <p>Sets the Off state fill color by color number.</p> <ul style="list-style-type: none"> Colors can be set by Color Numbers, Color name, R,G,B,alpha colors (RRGGBBAA) and R, G & B colors values (RRGGBB). Refer to theRGB Values for all 88 Basic Colors table on page 79.
^BCT	<p>Set the text color to the specified color, <i>only if the specified text color is not the same as the current color.</i></p> <p>Syntax:</p> <pre>"'^BCT-<vt addr range>,<button states range>,<color value>'"</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>color value = Refer to theRGB Values for all 88 Basic Colors table on page 79 for more information.</p> <p>Example:</p> <pre>SEND_COMMAND Panel,"'^BCT-500.504&510,1,12'"</pre> <p>Sets the Off state border color to 12 (Yellow).</p> <ul style="list-style-type: none"> Colors can be set by Color Numbers, Color name, R,G,B,alpha colors (RRGGBBAA) and R, G & B colors values (RRGGBB). Refer to theRGB Values for all 88 Basic Colors table on page 79.

"^" Button Commands (Cont.)	
^BDO	<p>Set the button draw order (determines what order each layer of the button is drawn).</p> <p>Syntax:</p> <pre>''^BDO-<vt addr range>,<button states range>,<1-5><1-5><1-5><1-5><1-5>''</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>layer assignments = Fill Layer = 1 Image Layer = 2 Icon Layer = 3 Text Layer = 4 Border Layer = 5</p> <p>Note: The layer assignments are from bottom to top. The default draw order is 12345.</p> <p>Example 1:</p> <pre>SEND_COMMAND Panel, ''^BDO-530,1&2,51432''</pre> <p>Sets the button's variable text 530 ON/OFF state draw order (from bottom to top) to Border, Fill, Text, Icon, and Image.</p> <p>Example 2:</p> <pre>SEND_COMMAND Panel, ''^BDO-1,0,12345''</pre> <p>Sets all states of a button back to its default drawing order.</p>
^BFB	<p>Set the feedback type of the button.</p> <p>Note: This command only works on General-type buttons.</p> <p>Syntax:</p> <pre>''^BFB-<vt addr range>,<feedback type>''</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>feedback type = (None, Channel, Invert, On (Always on), Momentary, and Blink).</p> <p>Example:</p> <pre>SEND_COMMAND Panel, ''^BFB-500,Momentary''</pre> <p>Sets the Feedback type of the button to 'Momentary'.</p>
^BIM	<p>Set the input mask for the specified address.</p> <p>Syntax:</p> <pre>''^BIM-<vt addr range>,<input mask>''</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>input mask = Refer to the <i>Text Area Input Masking</i> section on page 124 for character types.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, ''^BIM-500,AAAAAAAAA''</pre> <p>Sets the input mask to ten 'A' characters, that are required, to either a letter or digit (<i>entry is required</i>).</p>

" ^ " Button Commands (Cont.)	
^BMC	<p>Button copy command - copy attributes of the source button to all the destination buttons.</p> <ul style="list-style-type: none"> • Note that the source is a single button state. Each state must be copied as a separate command. • The <codes> section represents what attributes will be copied. • All codes are 2 char pairs that can be separated by comma, space, percent or just ran together. <p>Syntax:</p> <pre>" ^ ^BMC-<vt addr range>,<button states range>,<source port>,<source address>,<source state>,<codes>"</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>source port = 1 - 100.</p> <p>source address = 1 - 4000.</p> <p>source state = 1 - 256.</p> <p>codes:</p> <p>BM - Picture/Bitmap BR - Border CB - Border Color CF - Fill Color CT - Text Color EC - Text effect color EF - Text effect FT - Font IC - Icon JB - Bitmap alignment JI - Icon alignment JT - Text alignment LN - Lines of video removed OP - Opacity SO - Button Sound TX - Text VI - Video slot ID WW - Word wrap on/off</p> <p>Example:</p> <pre>SEND_COMMAND Panel," ^ ^BMC-425,1,1,500,1,BR"</pre> <p>or</p> <pre>SEND_COMMAND Panel," ^ ^BMC-425,1,1,500,1,%BR"</pre> <p>Copies the OFF state border of button with a variable text address of 500 onto the OFF state border of button with a variable text address of 425.</p> <p>Example 2:</p> <pre>SEND_COMMAND Panel," ^ ^BMC-150,1,1,315,1,%BR%FT%TX%BM%IC%CF%CT"</pre> <p>Copies the OFF state border, font, Text, bitmap, icon, fill color and text color of the button with a variable text address of 315 onto the OFF state border, font, Text, bitmap, icon, fill color and text color of the button with a variable text address of 150.</p>

"^" Button Commands (Cont.)**^BMF**

Set any/all button parameters by sending embedded codes and data.

Syntax:

```
"^BMF-<vt addr range>,<button states range>,<data>"
```

Variables:

variable text address char array = 1 - 4000.

button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).

level range = 1 - 600 (level value is 1 - 65535).

data:

'%B<border style>' = Set the border style name. See theBorder Styles and Programming Numbers table on page 80.

'%B',<border 0-27,40,41> = Set the borer style number. See theBorder Styles and Programming Numbers table on page 80.

'%DO<1-5><1-5><1-5><1-5>' = Set the draw order. Listed from bottom to top. Refer to the ^BDO command on page 85 for more information.

'%F', = Set the font. See theDefault Font Styles and ID Numbers table on page 80.

'%F' = Set the font. See theDefault Font Styles and ID Numbers table on page 80.

'%MI<mask image>' = Set the mask image. Refer to the ^BMI command on page 89 for more information.

'%T<text >' = Set the text using ASCII characters (empty is clear).

'%P<bitmap>' = Set the picture/bitmap filename (empty is clear).

'%I',<icon 01-9900, 0-clear>' = Set the icon using values of 01 - 9900 (icon numbers are assigned in the TPDesign4 Resource Manager tab - Slots section).

'%I<icon 01-9900, 0-clear>' = Set the icon using values of 01 - 9900 (icon numbers are assigned in the TPDesign4 Resource Manager tab - Slots section).

'%J',<alignment of text 1-9> = As shown the following telephone keypad alignment chart:

0

1	2	3
4	5	6
7	8	9

Zero can be used for an absolute position

'%JT<alignment of text 0-9>' = As shown the above telephone keypad alignment chart, **BUT** the 0 (zero) is absolute and followed by ',<left>,<top>'

'%JB<alignment of bitmap/picture 0-9>' = As shown the above telephone keypad alignment chart **BUT** the 0 (zero) is absolute and followed by ',<left>,<top>'

'%JI<alignment of icon 0-9>' = As shown the above telephone keypad alignment chart, **BUT** the 0 (zero) is absolute and followed by ',<left>,<top>'

For some of these commands and values, refer to theRGB Values for all 88 Basic Colors table on page 79.

'%CF<on fill color>' = Set Fill Color.

'%CB<on border color>' = Set Border Color.

'%CT<on text color>' = Set Text Color.

'%SW<1 or 0>' = Show/hide a button.

'%SO<sound>' = Set the button sound.

'%EN<1 or 0>' = Enable/disable a button.

'%WW<1 or 0>' = Word wrap On/Off.

'%GH<bargraph hi>' = Set the bargraph upper limit.

'%GL<bargraph low>' = Set the bargraph lower limit.

'%GN<bargraph slider name>' = Set the bargraph slider name/Joystick cursor name.

'%GC<bargraph slider color>' = Set the bargraph slider color/Joystick cursor color.

'%GI<bargraph invert>' = Set the bargraph invert/noninvert or joystick coordinate (0,1,2,3). See the ^GIV command on page 95 for more information.

" ^ " Button Commands (Cont.)	
^BMF (Cont.)	<p>'%GU<bargraph ramp up>' = Set the bargraph ramp up time in intervals of 1/10 second.</p> <p>'%GD<bargraph ramp down>' = Set the bargraph ramp down time in 1/10 second.</p> <p>'%GG<bargraph drag increment> = Set the bargraph drag increment. Refer to the ^GDI command on page 95 for more information.</p> <p>'%OT<feedback type>' = Set the Feedback (Output) Type to one of the following: None, Channel, Invert, ON (Always ON), Momentary, or Blink.</p> <p>'%SM' = Submit a text for text area button.</p> <p>'%SF<1 or 0>' = Set the focus for text area button.</p> <p>'%OP<0-255>' = Set the button opacity to either Invisible (value=0) or Opaque (value=255).</p> <p>'%OP#<00-FF>' = Set the button opacity to either Invisible (value=00) or Opaque (value=FF).</p> <p>'%UN<Unicode text>' = Set the Unicode text. See the ^UNI section on page 101 for the text format.</p> <p>'%EF<text effect name>' = Set the text effect.</p> <p>'%EC<text effect color>' = Set the text effect color.</p> <p>'%ML<max length>' = Set the maximum length of a text area.</p> <p>'%MK<input mask>' = Set the input mask of a text area.</p> <p>'%VL<0-1>' = Log-On/Log-Off the computer control connection</p> <p>'%VN<network name>' = Set network connection name.</p> <p>'%VP<password>' = Set the network connection password.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, " ' ^BMF-500,1,%B10%CFRed%CB Blue %CTBlack%Ptest.png' "</pre> <p>Sets the button OFF state as well as the Border, Fill Color, Border Color, Text Color, and Bitmap.</p>

"^" Button Commands (Cont.)	
^BMI	<p>Mask image is used to crop a borderless button to a non-square shape. This is typically used with a bitmap.</p> <p>Syntax:</p> <pre>"^BMI-<vt addr range>,<button states range>,<mask image>"</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>mask image = Graphic file used.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "^BMI-530,1&2,newMac.png"</pre> <p>Sets the button with variable text 530 ON/OFF state mask image to 'newmac.png'.</p> <p>"^BMI-<variable text address range>,<button states range>,<mask image>"</p> <p>Set the Chameleon Image button property. See Working With Chameleon Images in TPD4 Help.</p> <p>Note: If the Border Style properties is set to something other than 'None', no visible change will occur. Setting the Border Style to 'None' via ^BOR or ^BMF.%B will reveal the Chameleon image.</p> <p>Syntax:</p> <pre>SEND_COMMAND <DEV>,"^BMI-<vt addr range>,<button states range>,<mask image>"</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>mask image = Chameleon used.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "^BMI-530,1&2,newMac.png"</pre> <p>Sets the button with variable text 530 ON/OFF state mask image to 'newmac.png'. .png'.</p>
^BML	<p>Set the maximum length of the text area button.</p> <ul style="list-style-type: none"> • If this value is set to zero (0) there is no max length. • The maximum length available is 2000. • This is only for a Text area input button and not for a Text area input masking button. <p>Syntax:</p> <pre>"^BML-<vt addr range>,<max length>"</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>max length = 2000 (0=no max length).</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "^BML-500,20"</pre> <p>Sets the maximum length of the text area input button to 20 characters.</p>

"^" Button Commands (Cont.)	
^BMP	<p>Assign a picture to those buttons with a defined address range.</p> <p>Syntax:</p> <pre>''^BMP-<vt addr range>,<button states range>,<name of bitmap/picture>''</pre> <p>Variables:</p> <ul style="list-style-type: none"> variable text address range = 1 - 4000. button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). name of bitmap/picture = 1 - 50 ASCII characters. <p>Example:</p> <pre>SEND_COMMAND Panel, ''^BMP-500.504&510.515,1,bitmap.png''</pre> <p>Sets the OFF state picture for the buttons with variable text ranges of 500-504 & 510-515.</p>
^BNC	<p>Clear current TakeNote annotations.</p> <p>Syntax:</p> <pre>''^BNC-<vt addr range>,<command value>''</pre> <p>Variables:</p> <ul style="list-style-type: none"> variable text address range = 1 - 4000. command value = (0= clear, 1= clear all). <p>Example:</p> <pre>SEND_COMMAND Panel, ''^BNC-973,0''</pre> <p>Clears the annotation of the TakeNote button with variable text 973.</p>
^BNN	<p>Set the TakeNote network name for the specified Addresses.</p> <p>Syntax:</p> <pre>''^BNN-<vt addr range>,<network name>''</pre> <p>Variables:</p> <ul style="list-style-type: none"> variable text address range = 1 - 4000. network name = Use a valid IP Address. <p>Example:</p> <pre>SEND_COMMAND Panel, ''^BNN-973,192.168.169.99''</pre> <p>Sets the TakeNote button network name to 192.168.169.99.</p>
^BNT	<p>Set the TakeNote network port for the specified Addresses.</p> <p>Syntax:</p> <pre>''^BNT-<vt addr range>,<network port>''</pre> <p>Variables:</p> <ul style="list-style-type: none"> variable text address range = 1 - 4000. network port = 1 - 65535. <p>Example:</p> <pre>SEND_COMMAND Panel, ''^BNT-973,5000''</pre> <p>Sets the TakeNote button network port to 5000.</p>

"^" Button Commands (Cont.)	
^BOP	<p>Set the button opacity.</p> <ul style="list-style-type: none"> The button opacity can be specified as a decimal between 0 - 255, where zero (0) is invisible and 255 is opaque, or as a HEX code, as used in the color commands by preceding the HEX code with the # sign. In this case, #00 becomes invisible and #FF becomes opaque. If the opacity is set to zero (0), this does not make the button inactive, only invisible. <p>Syntax:</p> <pre>""^BOP-<vt addr range>,<button states range>,<button opacity>""</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>button opacity = 0 (invisible) - 255 (opaque).</p> <p>Example:</p> <pre>SEND_COMMAND Panel, ""^BOP-500.504&510.515,1,200""</pre> <p>Example 2:</p> <pre>SEND_COMMAND Panel, ""^BOP-500.504&510.515,1,#C8""</pre> <p>Both examples set the opacity of the buttons with the variable text range of 500-504 and 510-515 to 200.</p>
^BOR	<p>Set a border to a specific border style associated with a border value for buttons with a defined address range.</p> <ul style="list-style-type: none"> The border style is available through the TPDesign4 border-style drop-down list. Refer to the TPD4 Border Styles by Name table on page 81 for more information. <p>Syntax:</p> <pre>""^BOR-<vt addr range>,<border style name or border value>""</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>border style name = Refer to the Border Styles and Programming Numbers table on page 80.</p> <p>border value = 0 - 41.</p> <p>Examples:</p> <pre>SEND_COMMAND Panel, ""^BOR-500.504&510.515,10""</pre> <p>Sets the border by number (#10) to those buttons with the variable text range of 500-504 & 510-515.</p> <pre>SEND_COMMAND Panel, ""^BOR-500.504&510,AMX Elite -M""</pre> <p>Sets the border by name (AMX Elite) to those buttons with the variable text range of 500-504 & 510-515.</p>
^BPP	<p>Set or clear the protected page flip flag of a button.</p> <ul style="list-style-type: none"> Zero clears the flag. <p>Syntax:</p> <pre>""^BPP-<vt addr range>,<protected page flip flag value>""</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>protected page flip flag value range = 0 - 4 (0 clears the flag).</p> <p>Example:</p> <pre>SEND_COMMAND Panel, ""^BPP-500,1""</pre> <p>Sets the button to protected page flip flag 1 (sets it to password 1).</p>

"^^" Button Commands (Cont.)	
^BRD	<p>Set the border of a button state/states, <i>only if the specified border is not the same as the current border.</i></p> <ul style="list-style-type: none"> The border names are available through the TPDesign4 border-name drop-down list. Refer to the TPD4 Border Styles by Name table on page 81. <p>Syntax:</p> <pre>^^^BRD-<vt addr range>,<button states range>,<border name>' "</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>border name = Refer to Border Styles and Programming Numbers table on page 80.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "^^^BRD-500.504&510.515,1&2,Quad Line' "</pre> <p>Sets the border by name (Quad Line) to those buttons with the variable text range of 500-504 & 510-515.</p>
^BSF	<p>Set the focus to the text area.</p> <p>Note: <i>Select one button at a time (single variable text address).</i></p> <ul style="list-style-type: none"> Do not assign a variable text address range to set focus to multiple buttons. Only one variable text address can be in focus at a time. <p>Syntax:</p> <pre>^^^BSF-<vt addr range>,<selection value>' "</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>selection value = Unselect = 0 and select = 1.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "^^^BSF-500,1' "</pre> <p>Sets the focus to the text area of the button.</p>
^BSM	<p>Submit text for text area buttons - causes the text areas to send their text as strings to the NetLinx Master.</p> <p>Syntax:</p> <pre>^^^BSM-<vt addr range>' "</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "^^^BSM-500' "</pre> <p>Submits the text of the text area button.</p>
^BSP Set the button size and position.	<p>Set the button size and its position on the page.</p> <p>Syntax:</p> <pre>^^^BSP-<vt addr range>,<left>,<top>,<right>,<bottom>' "</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>left = left side of page.</p> <p>top = top of page.</p> <p>right = right side of page.</p> <p>bottom = bottom of page.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "^^^BSP-530,left,top' "</pre> <p>Sets the button with variable text 530 in the left side top of page.</p>

"^" Button Commands (Cont.)	
^BVL	<p>Log-On/Log-Off the computer control connection.</p> <p>Syntax:</p> <pre>"'^BVL-<vt addr range>,<connection>'"</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>connection = 0 (Log-Off connection) and 1 (Log-On connection).</p> <p>Example:</p> <pre>SEND_COMMAND Panel,"'^BVL-500,0'"</pre> <p>Logs-off the computer control connection of the button.</p>
^BVN	<p>Set the computer control remote host for the specified address.</p> <p>Syntax:</p> <pre>SEND_COMMAND <DEV>,"'^BVN-<vt addr range>,<remote host>'"</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>remote host = 1 - 50 ASCII characters.</p> <p>Example:</p> <pre>SEND_COMMAND Panel,"'^BVN-500,191.191.191.191'"</pre> <p>Sets the remote host to '191.191.191.191' for the specific computer control button.</p>
^BVP	<p>Set the network password for the specified address.</p> <p>Syntax:</p> <pre>"'^BVP-<vt addr range>,<network password>'"</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>network password = 1 - 50 ASCII characters.</p> <p>Example:</p> <pre>SEND_COMMAND Panel,"'^BVP-500,PCLOCK'"</pre> <p>Sets the password to PCLOCK for the specific PC control button.</p>
^BVT	<p>Set the computer control network port for the specified address.</p> <p>Syntax:</p> <pre>"'^BVT-<vt addr range>,<network port>'"</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>network port = 1 - 65535.</p> <p>Example:</p> <pre>SEND_COMMAND Panel,"'^BVT-500,5000'"</pre> <p>Sets the network port to 5000.</p>
^BWW	<p>Set the button word wrap feature to those buttons with a defined address range.</p> <ul style="list-style-type: none"> By default, word-wrap is Off. <p>Syntax:</p> <pre>"'^BWW-<vt addr range>,<button states range>,<word wrap>'"</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>word wrap = (0=Off and 1=On). Default is Off.</p> <p>Example:</p> <pre>SEND_COMMAND Panel,"'^BWW-500,1,1'"</pre> <p>Sets the word wrap on for the button's Off state.</p>

" ^ " Button Commands (Cont.)	
^CPF	<p>Clear all page flips from a button.</p> <p>Syntax:</p> <pre>" ^ CPF-<vt addr range>'"</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, " ^ CPF-500'"</pre> <p>Clears all page flips from the button.</p>
^DPF	<p>Delete page flips from button if it already exists.</p> <p>Syntax:</p> <pre>" ^ DPF-<vt addr range>,<actions>,<page name>'"</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>actions =</p> <p>Stan[dardPage] - Flip to standard page</p> <p>Prev[iousPage] - Flip to previous page</p> <p>Show[Popup] - Show Popup page</p> <p>Hide[Popup] - Hide Popup page</p> <p>Togg[lePopup] - Toggle popup state</p> <p>ClearG[roup] - Clear popup page group from all pages</p> <p>ClearP[age] - Clear all popup pages from a page with the specified page name</p> <p>ClearA[ll] - Clear all popup pages from all pages</p> <p>page name = 1 - 50 ASCII characters.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, " ^ DPF-409,Prev'"</pre> <p>Deletes the assignment of a button from flipping to a previous page.</p>
^ENA	<p>Enable or disable buttons with a set variable text range.</p> <p>Syntax:</p> <pre>" ^ ENA-<vt addr range>,<command value>'"</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>command value = (0= disable, 1= enable)</p> <p>Example:</p> <pre>SEND_COMMAND Panel, " ^ ENA-500.504&510.515,0'"</pre> <p>Disables button pushes on buttons with variable text range 500-504 & 510-515.</p>
^FON	<p>Set a font to a specific Font ID value for those buttons with a defined address range.</p> <p>The Font ID is generated by TPD4 and is located in TPD4 through the Main menu:</p> <p>Panel > Generate Programmer's Report >Text Only Format >Readme.txt.</p> <p>Syntax:</p> <pre>" ^ FON-<vt addr range>,<button states range>,'"</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>font value = Range = 1 - XXX. Refer to theDefault Font Styles and ID Numbers table on page 80.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, " ^ FON-500.504&510.515,1&2,4'"</pre> <p>Sets the font size to font ID #4 for the On and Off states of buttons with the variable text range of 500-504 & 510-515.</p>

"^" Button Commands (Cont.)										
^GDI	<p>Change the bargraph drag increment.</p> <p>Syntax:</p> <pre>"'^GDI-<vt addr range>,<bargraph drag increment>'"</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>bargraph drag increment = The default drag increment is 256.</p> <p>Example:</p> <pre>SEND_COMMAND Panel,"'^GDI-7,128'"</pre> <p>Sets the bargraph with variable text 7 to a drag increment of 128.</p>									
^GIV	<p>Invert the joystick axis to move the origin to another corner.</p> <ul style="list-style-type: none">Parameters 1,2, and 3 will cause a bargraph or slider to be inverted regardless of orientation.Their effect is as described for joysticks. <p>Syntax:</p> <pre>"'^GIV-<vt addr range>,<joystick axis to invert>'"</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>joystick axis to invert = 0 - 3.</p> <table><tr><td>0</td><td></td><td>1</td></tr><tr><td></td><td></td><td></td></tr><tr><td>2</td><td></td><td>3</td></tr></table> <p>0 = Normal 1 = Invert horizontal axis 2 = Invert vertical axis 3 = Invert both axis locations</p> <p>For a bargraph 1 = Invert , 0 = Non Invert</p> <p>Example:</p> <pre>SEND_COMMAND Panel,"'^GIV-500,3'"</pre> <p>Inverts the joystick axis origin to the bottom right corner.</p>	0		1				2		3
0		1								
2		3								
^GLH	<p>Change the bargraph upper limit.</p> <p>Syntax:</p> <pre>"'^GLH-<vt addr range>,<bargraph hi>'"</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>bargraph limit range = 1 - 65535 (<i>bargraph upper limit range</i>).</p> <p>Example:</p> <pre>SEND_COMMAND Panel,"'^GLH-500,1000'"</pre> <p>Changes the bargraph upper limit to 1000.</p>									
^GLL	<p>Change the bargraph lower limit.</p> <p>Syntax:</p> <pre>"'^GLL-<vt addr range>,<bargraph low>'"</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>bargraph limit range = 1 - 65535 (<i>bargraph lower limit range</i>).</p> <p>Example:</p> <pre>SEND_COMMAND Panel,"'^GLL-500,150'"</pre> <p>Changes the bargraph lower limit to 150.</p>									

"^" Button Commands (Cont.)	
^GRD	<p>Change the bargraph ramp-down time in 1/10th of a second.</p> <p>Syntax:</p> <pre>''^GRD-<vt addr range>,<bargraph ramp down time>''</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>bargraph ramp down time = In 1/10th of a second intervals.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, ''^GRD-500,200''</pre> <p>Changes the bargraph ramp down time to 20 seconds.</p>
^GRU	<p>Change the bargraph ramp-up time in 1/10th of a second.</p> <p>Syntax:</p> <pre>''^GRU-<vt addr range>,<bargraph ramp up time>''</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>bargraph ramp up time = In 1/10th of a second intervals.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, ''^GRU-500,100''</pre> <p>Changes the bargraph ramp up time to 10 seconds.</p>
^GSC	<p>Change the bargraph slider color or joystick cursor color.</p> <p>Syntax:</p> <pre>''^GSC-<vt addr range>,<color value>''</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>color value = Refer to the RGB Values for all 88 Basic Colors table on page 79.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, ''^GSC-500,12''</pre> <p>Changes the bargraph or joystick slider color to Yellow.</p> <ul style="list-style-type: none"> Colors can be set by Color Numbers, Color name, R,G,B,alpha colors (RRGGBBAA) and R, G & B colors values (RRGGBB). Refer to the RGB Values for all 88 Basic Colors table on page 79.

"^" Button Commands (Cont.)**^GSN**

Change the bargraph slider name or joystick cursor name.

Slider names and cursor names can be found in the TPDesign4 slider name and cursor drop-down list.

- Colors can be set by Color Numbers, Color name, R,G,B,alpha colors (RRGGBBAA) and R, G & B colors values (RRGGBB).
- Refer to the RGB Values for all 88 Basic Colors table on page 79.

Syntax:

```
""^GSN-<vt addr range>,<bargraph slider name>""
```

Variables:

variable text address range = 1 - 4000.

bargraph slider name = See table below.

Bargraph Slider Names:		
None	Ball	Circle -L
Circle -M	Circle -S	Precision
Rectangle -L	Rectangle -M	Rectangle -S
Windows	Windows Active	
Joystick Cursor Names:		
None	Arrow	Ball
Circle	Crosshairs	Gunsight
Hand	Metal	Spiral
Target	View Finder	

Example:

```
SEND_COMMAND Panel, ""^GSN-500,Ball""
```

Changes the bargraph slider name or the Joystick cursor name to 'Ball'.

^ICO

Set the icon to a button.

Syntax:

```
""^ICO-<vt addr range>,<button states range>,<icon index>""
```

Variables:

variable text address range = 1 - 4000.

button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).

icon index range = 0 - 9900 (**a value of 0 is clear**).

Example:

```
SEND_COMMAND Panel, ""^ICO-500.504&510.515,1&2,1""
```

Sets the icon for On and Off states for buttons with variable text ranges of 500-504 & 510-515.

" ^ " Button Commands (Cont.)										
^JSB	<p>Set bitmap/picture alignment using a numeric keypad layout for those buttons with a defined address range.</p> <ul style="list-style-type: none">• The alignment of 0 is followed by '<left>,<top>'.• The left and top coordinates are relative to the upper left corner of the button. <p>Syntax:</p> <pre>"'^JSB-<vt addr range>,<button states range>,<new text alignment>'"</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>new text alignment = Value of 1 - 9 corresponds to the following locations:</p> <p>0</p> <table><tr><td>1</td><td>2</td><td>3</td></tr><tr><td>4</td><td>5</td><td>6</td></tr><tr><td>7</td><td>8</td><td>9</td></tr></table> <p>Zero can be used for an absolute position</p> <p>Example:</p> <pre>SEND_COMMAND Panel,"'^JSB-500.504&510.515,1&2,1'"</pre> <p>Sets the off/on state picture alignment to upper left corner for those buttons with variable text ranges of 500-504 & 510-515.</p>	1	2	3	4	5	6	7	8	9
1	2	3								
4	5	6								
7	8	9								
^JSI	<p>Set icon alignment using a numeric keypad layout for those buttons with a defined address range.</p> <ul style="list-style-type: none">• The alignment of 0 is followed by '<left>,<top>'.• The left and top coordinates are relative to the upper left corner of the button. <p>Syntax:</p> <pre>"'^JSI-<vt addr range>,<button states range>,<new icon alignment>'"</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>new icon alignment = Value of 1 - 9 corresponds to the following locations:</p> <p>0</p> <table><tr><td>1</td><td>2</td><td>3</td></tr><tr><td>4</td><td>5</td><td>6</td></tr><tr><td>7</td><td>8</td><td>9</td></tr></table> <p>Zero can be used for an absolute position</p> <p>Example:</p> <pre>SEND_COMMAND Panel,"'^JSI-500.504&510.515,1&2,1'"</pre> <p>Sets the Off/On state icon alignment to upper left corner for those buttons with variable text range of 500-504 & 510-515.</p>	1	2	3	4	5	6	7	8	9
1	2	3								
4	5	6								
7	8	9								

"" Button Commands (Cont.)										
^JST	<p>Set text alignment using a numeric keypad layout for those buttons with a defined address range.</p> <ul style="list-style-type: none">• The alignment of 0 is followed by '<left>,<top>'.• The left and top coordinates are relative to the upper left corner of the button. <p>Syntax:</p> <pre>""^JST-<vt addr range>,<button states range>,<new text alignment>""</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>new text alignment = Value of 1 - 9 corresponds to the following locations:</p> <p>0</p> <table><tr><td>1</td><td>2</td><td>3</td></tr><tr><td>4</td><td>5</td><td>6</td></tr><tr><td>7</td><td>8</td><td>9</td></tr></table> <p>Zero can be used for an absolute position</p> <p>Example:</p> <pre>SEND_COMMAND Panel, ""^JST-500.504&510.515,1&2,1""</pre> <p>Sets the text alignment to the upper left corner for those buttons with variable text ranges of 500-504 & 510-515.</p>	1	2	3	4	5	6	7	8	9
1	2	3								
4	5	6								
7	8	9								
^MBT	<p>Set the Mouse Button mode On for the virtual PC.</p> <p>Syntax:</p> <pre>""^MBT-<pass data>""</pre> <p>Variables:</p> <p>pass data:</p> <p>0 = None</p> <p>1 = Left</p> <p>2 = Right</p> <p>3 = Middle</p> <p>Example:</p> <pre>SEND COMMAND Panel, ""^MBT-1""</pre> <p>Sets the mouse button mode to 'Left Mouse Click'.</p>									
^MDC	<p>Turn On the 'Mouse double-click' feature for the virtual PC.</p> <p>Syntax:</p> <pre>""^MDC""</pre> <p>Example:</p> <pre>SEND COMMAND Panel, ""^MDC""</pre> <p>Sets the mouse double-click for use with the virtual PC.</p>									
^SHO	<p>Show or hide a button with a set variable text range.</p> <p>Syntax:</p> <pre>""^SHO-<vt addr range>,<command value>""</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>command value = (0= hide, 1= show).</p> <p>Example:</p> <pre>SEND_COMMAND Panel, ""^SHO-500.504&510.515,0""</pre> <p>Hides buttons with variable text address range 500-504 & 510-515.</p>									

"^" Button Commands (Cont.)	
^TEC	<p>Set the text effect color for the specified addresses/states to the specified color.</p> <ul style="list-style-type: none"> The Text Effect is specified by name and can be found in TPD4. You can also assign the color by name or RGB value (RRGGBB or RRGGBBAA). <p>Syntax:</p> <pre>''^TEC-<vt addr range>,<button states range>,<color value>''</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>color value = Refer to the RGB Values for all 88 Basic Colors table on page 79.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, ''^TEC-500.504&510.515,1&2,12''</pre> <p>Sets the text effect color to Very Light Yellow on buttons with variable text 500-504 and 510-515.</p>
^TEF	<p>Set the Text Effect.</p> <ul style="list-style-type: none"> The Text Effect is specified by name and can be found in TPD4. <p>Syntax:</p> <pre>''^TEF-<vt addr range>,<button states range>,<text effect name>''</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>text effect name = Refer to the Text Effects table on page 101 for a listing of text effect names.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, ''^TEF-500.504&510.515,1&2,Soft Drop Shadow 3''</pre> <p>Sets the text effect to Soft Drop Shadow 3 for the button with variable text range 500-504 and 510-515.</p>
^TOP Enables/disables touch output to Master	<p>If enabled, Press/Move/Release events are sent to the Master as string events.</p> <p>Syntax:</p> <pre>''^TOP-<state>''</pre> <p><state> is 0(disable) 1(presses/releases), 2(moves), 3(press/move/release).</p> <p>Note: Move should be used with caution. This setting can generate a significant amount of traffic to the master depending on user interaction.</p> <p>Example command: ""^TOP-1""</p> <p>Example Response: "String Event: Text: Press,320,480"</p> <p>Example Response: "String Event: Text: Release,320,480"</p>
^TXT	<p>Assign a text string to those buttons with a defined address range.</p> <p>Sets Non-Unicode text.</p> <p>Syntax:</p> <pre>''^TXT-<vt addr range>,<button states range>,<new text>''</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>new text = 1 - 50 ASCII characters.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, ''^TXT-500.504&510.515,1&2,Test Only''</pre> <p>Sets the On and Off state text for buttons with the variable text ranges of 500-504 & 510-515.</p>

" ^ " Button Commands (Cont.)	
^UNI	<p>Set Unicode text.</p> <p>For the ^UNI command (%UN and ^BMF command), the Unicode text is sent as ASCII-HEX nibbles.</p> <p>Syntax:</p> <pre>''^UNI-<vt addr range>,<button states range>,<unicode text>''</pre> <p>Variables:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>unicode text = Unicode HEX value.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, ''^UNI-500,1,0041''</pre> <p>Sets the button's unicode character to 'A'.</p> <p>Note: To send the variable text 'A' in unicode to all states of the variable text button 1, (for which the character code is 0041 Hex), send the following command:</p> <pre>SEND_COMMAND TP, ''^UNI-1,0,0041''</pre> <p>Note: Unicode is always represented in a HEX value. TPD4 generates (through the Text Enter Box dialog) unicode HEX values. Refer to the TPDesign4 Instruction Manual for more information.</p>

Text Effect Names

The following is a listing of text effects names. This list is associated with the ^TEF command on page 100.

Text Effects			
• Glow -S	• Soft Drop Shadow 1	• Medium Drop Shadow 1	• Hard Drop Shadow 1
• Glow -M	• Soft Drop Shadow 2	• Medium Drop Shadow 2	• Hard Drop Shadow 2
• Glow -L	• Soft Drop Shadow 3	• Medium Drop Shadow 3	• Hard Drop Shadow 3
• Glow -X	• Soft Drop Shadow 4	• Medium Drop Shadow 4	• Hard Drop Shadow 4
• Outline -S	• Soft Drop Shadow 5	• Medium Drop Shadow 5	• Hard Drop Shadow 5
• Outline -M	• Soft Drop Shadow 6	• Medium Drop Shadow 6	• Hard Drop Shadow 6
• Outline -L	• Soft Drop Shadow 7	• Medium Drop Shadow 7	• Hard Drop Shadow 7
• Outline -X	• Soft Drop Shadow 8	• Medium Drop Shadow 8	• Hard Drop Shadow 8
	• Soft Drop Shadow 1 with outline	• Medium Drop Shadow 1 with outline	
	• Soft Drop Shadow 2 with outline	• Medium Drop Shadow 2 with outline	
	• Soft Drop Shadow 3 with outline	• Medium Drop Shadow 3 with outline	
	• Soft Drop Shadow 4 with outline	• Medium Drop Shadow 4 with outline	
	• Soft Drop Shadow 5 with outline	• Medium Drop Shadow 5 with outline	
	• Soft Drop Shadow 6 with outline	• Medium Drop Shadow 6 with outline	
	• Soft Drop Shadow 7 with outline	• Medium Drop Shadow 7 with outline	
	• Soft Drop Shadow 8 with outline	• Medium Drop Shadow 8 with outline	

Button Query Commands

Button Query commands reply with a custom event.

- Each button/state combination has one custom event.
- Each query is assigned a unique custom event type.

The following example is for debug purposes only:

```
NetLinX Example: CUSTOM_EVENT[device, Address, Custom event type]
DEFINE_EVENT
CUSTOM_EVENT[TP,529,1001]      // Text
CUSTOM_EVENT[TP,529,1002]      // Bitmap
CUSTOM_EVENT[TP,529,1003]      // Icon
CUSTOM_EVENT[TP,529,1004]      // Text Justification
CUSTOM_EVENT[TP,529,1005]      // Bitmap Justification
CUSTOM_EVENT[TP,529,1006]      // Icon Justification
CUSTOM_EVENT[TP,529,1007]      // Font
CUSTOM_EVENT[TP,529,1008]      // Text Effect Name
CUSTOM_EVENT[TP,529,1009]      // Text Effect Color
CUSTOM_EVENT[TP,529,1010]      // Word Wrap
CUSTOM_EVENT[TP,529,1011]      // ON state Border Color
CUSTOM_EVENT[TP,529,1012]      // ON state Fill Color
CUSTOM_EVENT[TP,529,1013]      // ON state Text Color
CUSTOM_EVENT[TP,529,1014]      // Border Name
CUSTOM_EVENT[TP,529,1015]      // Opacity

{
    SEND_STRING 0,"'ButtonGet Id=',ITOA(CUSTOM.ID),' Type=',ITOA(CUSTOM.TYPE)"
    Send_String 0,"'Flag  =' ,ITOA(CUSTOM.FLAG)"
    Send_String 0,"'VALUE1 =' ,ITOA(CUSTOM.VALUE1)"
    Send_String 0,"'VALUE2 =' ,ITOA(CUSTOM.VALUE2)"
    Send_String 0,"'VALUE3 =' ,ITOA(CUSTOM.VALUE3)"
    Send_String 0,"'TEXT  =' ,CUSTOM.TEXT"
    Send_String 0,"'TEXT LENGTH =' ,ITOA(LENGTH_STRING(CUSTOM.TEXT))"
}
```

All custom events have the following 6 fields:

Custom Event Fields	
Field	Description
Uint Flag	0 means text is a standard string, 1 means Unicode encoded string
long value1	button state number
long value2	actual length of string (this is not encoded size)
long value3	index of first character (usually 1 or same as optional index)
string text	the text from the button
text length (string encode)	button text length

These fields are populated differently for each query command. The text length (*String Encode*) field is not used in any command.

Button Query Commands	
?BCB	<p>Get the current border color.</p> <p>Syntax:</p> <pre>"'?BCB-<vt addr range>,<button states range>'"</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>custom event type 1011:</p> <p>Flag - zero</p> <p>Value1 - Button state number</p> <p>Value2 - Actual length of string (should be 9)</p> <p>Value3 - Zero</p> <p>Text - Hex encoded color value (ex: #000000FF)</p> <p>Text length - Color name length (should be 9)</p> <p>Example:</p> <pre>SEND COMMAND Panel,"'?BCB-529,1'"</pre> <p>Gets the button 'OFF state' border color. information.</p> <p>The result sent to the Master would be:</p> <pre>ButtonGet Id = 529 Type = 1011 Flag = 0 VALUE1 = 1 VALUE2 = 9 VALUE3 = 0 TEXT = #222222FF TEXT LENGTH = 9</pre>
?BCF	<p>Get the current fill color.</p> <p>Syntax:</p> <pre>"'?BCF-<vt addr range>,<button states range>'"</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>custom event type 1012:</p> <p>Flag - Zero</p> <p>Value1 - Button state number</p> <p>Value2 - Actual length of string (should be 9)</p> <p>Value3 - Zero</p> <p>Text - Hex encoded color value (ex: #000000FF)</p> <p>Text length - Color name length (should be 9)</p> <p>Example:</p> <pre>SEND COMMAND Panel,"'?BCF-529,1'"</pre> <p>Gets the button 'OFF state' fill color information.</p> <p>The result sent to the Master would be:</p> <pre>ButtonGet Id = 529 Type = 1012 Flag = 0 VALUE1 = 1 VALUE2 = 9 VALUE3 = 0 TEXT = #FF8000FF TEXT LENGTH = 9</pre>

Button Query Commands (Cont.)	
?BCT	<p>Get the current text color.</p> <p>Syntax:</p> <pre>"'?BCT-<vt addr range>,<button states range>'"</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>custom event type 1013:</p> <p>Flag - Zero</p> <p>Value1 - Button state number</p> <p>Value2 - Actual length of string (should be 9)</p> <p>Value3 - Zero</p> <p>Text - Hex encoded color value (ex: #000000FF)</p> <p>Text length - Color name length (should be 9)</p> <p>Example:</p> <pre>SEND COMMAND Panel,"'?BCT-529,1'"</pre> <p>Gets the button 'OFF state' text color information.</p> <p>The result sent to Master would be:</p> <pre>ButtonGet Id = 529 Type = 1013 Flag = 0 VALUE1 = 1 VALUE2 = 9 VALUE3 = 0 TEXT = #FFFFFFEF TEXT LENGTH = 9</pre>
?BMP	<p>Get the current bitmap name.</p> <p>Syntax:</p> <pre>"'?BMP-<vt addr range>,<button states range>'"</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>custom event type 1002:</p> <p>Flag - Zero</p> <p>Value1 - Button state number</p> <p>Value2 - Actual length of string</p> <p>Value3 - Zero</p> <p>Text - String that represents the bitmap name</p> <p>Text length - Bitmap name text length (should be 9)</p> <p>Example:</p> <pre>SEND COMMAND Panel,"'?BMP-529,1'"</pre> <p>Gets the button 'OFF state' bitmap information.</p> <p>The result sent to the Master would be:</p> <pre>ButtonGet Id = 529 Type = 1002 Flag = 0 VALUE1 = 1 VALUE2 = 9 VALUE3 = 0 TEXT = Buggs.png TEXT LENGTH = 9</pre>

Button Query Commands (Cont.)	
?BOP	<p>Get the overall button opacity.</p> <p>Syntax: <code>''?BOP-<vt addr range>,<button states range>''</code></p> <p>Variable: variable text address range = 1 - 4000. button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). custom event type 1015: Flag - Zero Value1 - Button state number Value2 - Opacity Value3 - Zero Text - Blank Text length - Zero</p> <p>Example: <code>SEND COMMAND Panel, ''?BOP-529,1''</code></p> <p>Gets the button 'OFF state' opacity information. The result sent to the Master would be:</p> <pre> ButtonGet Id = 529 Type = 1015 Flag = 0 VALUE1 = 1 VALUE2 = 200 VALUE3 = 0 TEXT = TEXT LENGTH = 0 </pre>
?BRD	<p>Get the current border name.</p> <p>Syntax: <code>''?BRD-<vt addr range>,<button states range>''</code></p> <p>Variable: variable text address range = 1 - 4000. button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). custom event type 1014: Flag - Zero Value1 - Button state number Value2 - Actual length of string Value3 - Zero Text - String that represents border name Text length - Border name length</p> <p>Example: <code>SEND COMMAND Panel, ''?BRD-529,1''</code></p> <p>Gets the button 'OFF state' border information. The result sent to the Master would be:</p> <pre> ButtonGet Id = 529 Type = 1014 Flag = 0 VALUE1 = 1 VALUE2 = 22 VALUE3 = 0 TEXT = Double Bevel Raised -L TEXT LENGTH = 22 </pre>

Button Query Commands (Cont.)	
?BWW	<p>Get the current word wrap flag status.</p> <p>Syntax:</p> <pre>''?BWW-<vt addr range>,<button states range>''</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>custom event type 1010:</p> <p>Flag - Zero</p> <p>Value1 - Button state number</p> <p>Value2 - 0 = no word wrap, 1 = word wrap</p> <p>Value3 - Zero</p> <p>Text - Blank</p> <p>Text length - Zero</p> <p>Example:</p> <pre>SEND COMMAND Panel, ''?BWW-529,1''</pre> <p>Gets the button 'OFF state' word wrap flag status information.</p> <p>The result sent to the Master would be:</p> <pre>ButtonGet Id = 529 Type = 1010 Flag = 0 VALUE1 = 1 VALUE2 = 1 VALUE3 = 0 TEXT = TEXT LENGTH = 0</pre>
?FON	<p>Get the current font index.</p> <p>Syntax:</p> <pre>''?FON-<vt addr range>,<button states range>''</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>custom event type 1007:</p> <p>Flag - Zero</p> <p>Value1 - Button state number</p> <p>Value2 - Font index</p> <p>Value3 - Zero</p> <p>Text - Blank</p> <p>Text length - Zero</p> <p>Example:</p> <pre>SEND COMMAND Panel, ''?FON-529,1''</pre> <p>Gets the button 'OFF state' font type index information.</p> <p>The result sent to the Master would be:</p> <pre>ButtonGet Id = 529 Type = 1007 Flag = 0 VALUE1 = 1 VALUE2 = 72 VALUE3 = 0 TEXT = TEXT LENGTH = 0</pre>

Button Query Commands (Cont.)	
?ICO	<p>Get the current icon index.</p> <p>Syntax: <code>''?ICO-<vt addr range>,<button states range>''</code></p> <p>Variable: variable text address range = 1 - 4000. button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). custom event type 1003: Flag - Zero Value1 - Button state number Value2 - Icon Index Value3 - Zero Text - Blank Text length - Zero</p> <p>Example: <code>SEND COMMAND Panel, ''?ICO-529,1&2''</code> Gets the button 'OFF state' icon index information. The result sent to the Master would be: <pre> ButtonGet Id = 529 Type = 1003 Flag = 0 VALUE1 = 2 VALUE2 = 12 VALUE3 = 0 TEXT = TEXT LENGTH = 0 </pre></p>
?JSB	<p>Get the current bitmap justification.</p> <p>Syntax: <code>''?JSB-<vt addr range>,<button states range>''</code></p> <p>Variable: variable text address range = 1 - 4000. button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). custom event type 1005: Flag - Zero Value1 - Button state number Value2 - 1 - 9 justify Value3 - Zero Text - Blank Text length - Zero</p> <p>Example: <code>SEND COMMAND Panel, ''?JSB-529,1''</code> Gets the button 'OFF state' bitmap justification information. The result sent to the Master would be: <pre> ButtonGet Id = 529 Type = 1005 Flag = 0 VALUE1 = 1 VALUE2 = 5 VALUE3 = 0 TEXT = TEXT LENGTH = 0 </pre></p>

Button Query Commands (Cont.)	
?JSI	<p>Get the current icon justification.</p> <p>Syntax:</p> <pre>"'?JSI-<vt addr range>,<button states range>'"</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>custom event type 1006:</p> <p>Flag - Zero Value1 - Button state number Value2 - 1 - 9 justify Value3 - Zero Text - Blank Text length - Zero</p> <p>Example:</p> <pre>SEND COMMAND Panel,"'?JSI-529,1'"</pre> <p>Gets the button 'OFF state' icon justification information.</p> <p>The result sent to the Master would be:</p> <pre>ButtonGet Id = 529 Type = 1006 Flag = 0 VALUE1 = 1 VALUE2 = 6 VALUE3 = 0 TEXT = TEXT LENGTH = 0</pre>
?JST	<p>Get the current text justification.</p> <p>Syntax:</p> <pre>"'?JST-<vt addr range>,<button states range>'"</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>custom event type 1004:</p> <p>Flag - Zero Value1 - Button state number Value2 - 1 - 9 justify Value3 - Zero Text - Blank Text length - Zero</p> <p>Example:</p> <pre>SEND COMMAND Panel,"'?JST-529,1'"</pre> <p>Gets the button 'OFF state' text justification information.</p> <p>The result sent to the Master would be:</p> <pre>ButtonGet Id = 529 Type = 1004 Flag = 0 VALUE1 = 1 VALUE2 = 1 VALUE3 = 0 TEXT = TEXT LENGTH = 0</pre>

Button Query Commands (Cont.)	
?TEC	<p>Get the current text effect color.</p> <p>Syntax: <code>''?TEC-<vt addr range>,<button states range>''</code></p> <p>Variable: variable text address range = 1 - 4000. button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). custom event type 1009: Flag - Zero Value1 - Button state number Value2 - Actual length of string (should be 9) Value3 - Zero Text - Hex encoded color value (ex: #000000FF) Text length - Color name length (should be 9)</p> <p>Example: <code>SEND COMMAND Panel, ''?TEC-529,1''</code> Gets the button 'OFF state' text effect color information. The result sent to the Master would be: <pre> ButtonGet Id = 529 Type = 1009 Flag = 0 VALUE1 = 1 VALUE2 = 9 VALUE3 = 0 TEXT = #5088F2AE TEXT LENGTH = 9 </pre></p>
?TEF	<p>Get the current text effect name.</p> <p>Syntax: <code>''?TEF-<vt addr range>,<button states range>''</code></p> <p>Variable: variable text address range = 1 - 4000. button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). custom event type 1008: Flag - Zero Value1 - Button state number Value2 - Actual length of string Value3 - Zero Text - String that represents the text effect name Text length - Text effect name length</p> <p>Example: <code>SEND COMMAND Panel, ''?TEF-529,1''</code> Gets the button 'OFF state' text effect name information. The result sent to the Master would be: <pre> ButtonGet Id = 529 Type = 1008 Flag = 0 VALUE1 = 1 VALUE2 = 18 VALUE3 = 0 TEXT = Hard Drop Shadow 3 TEXT LENGTH = 18 </pre></p>

Button Query Commands (Cont.)	
?TXT	<p>Get the current text information.</p> <p>Syntax:</p> <pre>"'?TXT-<vt addr range>,<button states range>,<optional index>'"</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>optional index = This is used if a string was too long to get back in one command. The reply will start at this index.</p> <p>custom event type 1001:</p> <p>Flag - Zero Value1 - Button state number Value2 - Actual length of string Value3 - Index Text - Text from the button Text length - Button text length</p> <p>Example:</p> <pre>SEND COMMAND Panel,"'?TXT-529,1'"</pre> <p>Gets the button 'OFF state' text information.</p> <p>The result sent to the Master would be:</p> <pre>ButtonGet Id = 529 Type = 1001 Flag = 0 VALUE1 = 1 VALUE2 = 14 VALUE3 = 1 TEXT = This is a test TEXT LENGTH = 14</pre>

Panel Runtime Operations

Serial Commands are used in the AxxessX Terminal Emulator mode. These commands are case insensitive.

Panel Runtime Operation Commands	
ABEEP	<p>Output a single beep even if beep is Off.</p> <p>Syntax:</p> <pre>" 'ABEEP' "</pre> <p>Example:</p> <pre>SEND COMMAND Panel, " 'ABEEP' "</pre> <p>Outputs a beep of duration 1 beep even if beep is Off.</p>
ADBEEP	<p>Output a double beep even if beep is Off.</p> <p>Syntax:</p> <pre>" 'ADBEEP' "</pre> <p>Example:</p> <pre>SEND COMMAND Panel, " 'ADBEEP' "</pre> <p>Outputs a double beep even if beep is Off.</p>
@AKB	<p>Pop up the keyboard icon and initialize the text string to that specified.</p> <ul style="list-style-type: none"> Keyboard string is set to null on power up and is stored until power is lost. The Prompt Text is optional. <p>Syntax:</p> <pre>" '@AKB-<initial text>;<prompt text>' "</pre> <p>Variables:</p> <pre>initial text = 1 - 50 ASCII characters. prompt text = 1 - 50 ASCII characters.</pre> <p>Example:</p> <pre>SEND COMMAND Panel, " '@AKB-Texas;Enter State' "</pre> <p>Pops up the Keyboard and initializes the text string 'Texas' with prompt text 'Enter State'.</p>
AKEYB	<p>Pop up the keyboard icon and initialize the text string to that specified.</p> <ul style="list-style-type: none"> Keyboard string is set to null on power up and is stored until power is lost. <p>Syntax:</p> <pre>" 'AKEYB-<initial text>' "</pre> <p>Variables:</p> <pre>initial text = 1 - 50 ASCII characters.</pre> <p>Example:</p> <pre>SEND COMMAND Panel, " 'AKEYB-This is a Test' "</pre> <p>Pops up the Keyboard and initializes the text string 'This is a Test'.</p>
AKEYP	<p>Pop up the keypad icon and initialize the text string to that specified.</p> <ul style="list-style-type: none"> The keypad string is set to null on power up and is stored until power is lost. <p>Syntax:</p> <pre>" 'AKEYP-<number string>' "</pre> <p>Variables:</p> <pre>number string = 0 - 9999.</pre> <p>Example:</p> <pre>SEND COMMAND Panel, " 'AKEYP-12345' "</pre> <p>Pops up the Keypad and initializes the text string '12345'.</p>
AKEYR	<p>Remove keyboard or keypad that was displayed using 'AKEYB', 'AKEYP', 'PKEYP', '@AKB, @AKP, @PKP, @EKP, or @TKP commands.</p> <p>Syntax:</p> <pre>" 'AKEYR' "</pre> <p>Example:</p> <pre>SEND COMMAND Panel, " 'AKEYR' "</pre> <p>Removes the Keyboard/Keypad.</p>

Panel Runtime Operation Commands (Cont.)	
@AKP	<p>Pop up the keypad icon and initialize the text string to that specified.</p> <ul style="list-style-type: none"> Keypad string is set to null on power up and is stored until power is lost. The Prompt Text is optional. <p>Syntax:</p> <pre>"@AKP-<initial text>;<prompt text>"</pre> <p>Variables:</p> <pre>initial text = 1 - 50 ASCII characters. prompt text = 1 - 50 ASCII characters.</pre> <p>Example:</p> <pre>SEND COMMAND Panel,"@AKP-12345678;ENTER PASSWORD"</pre> <p>Pops up the Keypad and initializes the text string '12345678' with prompt text 'ENTER PASSWORD'.</p>
@AKR	<p>Remove keyboard or keypad that was displayed using 'AKEYB', 'AKEYP', 'PKEYP', @AKB, @AKP, @PKP, @EKP, or @TKP commands.</p> <p>Syntax:</p> <pre>"@AKR"</pre> <p>Example:</p> <pre>SEND COMMAND Panel,"@AKR"</pre> <p>Removes the Keyboard/Keypad.</p>
BEEP	<p>Output a beep.</p> <p>Syntax:</p> <pre>"BEEP"</pre> <p>Example:</p> <pre>SEND COMMAND Panel,"BEEP"</pre> <p>Outputs a beep.</p>
BRIT	<p>Set the panel brightness.</p> <p>Syntax:</p> <pre>"BRIT-<brightness level>"</pre> <p>Variable:</p> <pre>brightness level = 0 - 100.</pre> <p>Example:</p> <pre>SEND COMMAND Panel,"BRIT-50"</pre> <p>Sets the brightness level to 50.</p>
@BRT	<p>Set the panel brightness.</p> <p>Syntax:</p> <pre>"@BRT-<brightness level>"</pre> <p>Variable:</p> <pre>brightness level = 0 - 100.</pre> <p>Example:</p> <pre>SEND COMMAND Panel,"@BRT-70"</pre> <p>Sets the brightness level to 70.</p>
DBEEP	<p>Output a double beep.</p> <p>Syntax:</p> <pre>"DBEEP"</pre> <p>Example:</p> <pre>SEND COMMAND Panel,"DBEEP"</pre> <p>Outputs a double beep.</p>

Panel Runtime Operation Commands (Cont.)	
@EKP	<p>Extend the Keypad.</p> <ul style="list-style-type: none"> • Pops up the keypad icon and initializes the text string to that specified. • The Prompt Text is optional. <p>Syntax:</p> <pre>"@EKP-<initial text>;<prompt text>"</pre> <p>Variables:</p> <pre>initial text = 1 - 50 ASCII characters. prompt text = 1 - 50 ASCII characters.</pre> <p>Example:</p> <pre>SEND COMMAND Panel,"@EKP-33333333;Enter Password"</pre> <p>Pops up the Keypad and initializes the text string '33333333' with prompt text 'Enter Password'.</p>
PKEYP	<p>Present a private keypad.</p> <ul style="list-style-type: none"> • Pops up the keypad icon and initializes the text string to that specified. • Keypad displays a '*' instead of the numbers typed. The Prompt Text is optional. <p>Syntax:</p> <pre>"PKEYP-<initial text>"</pre> <p>Variables:</p> <pre>initial text = 1 - 50 ASCII characters.</pre> <p>Example:</p> <pre>SEND COMMAND Panel,"PKEYP-123456789"</pre> <p>Pops up the Keypad and initializes the text string '123456789' in '*'.</p>
@PKP	<p>Present a private keypad.</p> <ul style="list-style-type: none"> • Pops up the keypad icon and initializes the text string to that specified. • Keypad displays a '*' instead of the numbers typed. The Prompt Text is optional. <p>Syntax:</p> <pre>"@PKP-<initial text>;<prompt text>"</pre> <p>Variables:</p> <pre>initial text = 1 - 50 ASCII characters. prompt text = 1 - 50 ASCII characters.</pre> <p>Example:</p> <pre>SEND COMMAND Panel,"@PKP-1234567;ENTER PASSWORD"</pre> <p>Pops up the Keypad and initializes the text string 'ENTER PASSWORD' in '*'.</p>
SETUP	<p>Send panel to SETUP page.</p> <p>Syntax:</p> <pre>"SETUP"</pre> <p>Example:</p> <pre>SEND COMMAND Panel,"SETUP"</pre> <p>Sends the panel to the Setup Page.</p>
SLEEP	<p>Force the panel into screen saver mode.</p> <p>Syntax:</p> <pre>"SLEEP"</pre> <p>Example:</p> <pre>SEND COMMAND Panel,"SLEEP"</pre> <p>Forces the panel into screen saver mode.</p>

Panel Runtime Operation Commands (Cont.)	
@TKP	<p>Present a telephone keypad.</p> <ul style="list-style-type: none"> • Pops up the keypad icon and initializes the text string to that specified. • The Prompt Text is optional. <p>Syntax:</p> <pre>"@TKP-<initial text>;<prompt text>"</pre> <p>Variables:</p> <pre>initial text = 1 - 50 ASCII characters. prompt text = 1 - 50 ASCII characters.</pre> <p>Example:</p> <pre>SEND COMMAND Panel,"@TKP-999.222.1211;Enter Phone Number"</pre> <p>Pops-up the Keypad and initializes the text string '999.222.1211' with prompt text 'Enter Phone Number'.</p>
TPAGEON	<p>This command turns On page tracking, whereby when the page or popups change, a string is sent to the Master.</p> <p>This string may be captured with a CREATE_BUFFER command for one panel and sent directly to another panel.</p> <p>Syntax:</p> <pre>"TPAGEON"</pre> <p>Example:</p> <pre>SEND COMMAND Panel,"TPAGEON"</pre> <p>Turns On page tracking.</p>
TPAGEOFF	<p>Turn Off page tracking.</p> <p>Syntax:</p> <pre>"TPAGEOFF"</pre> <p>Example:</p> <pre>SEND COMMAND Panel,"TPAGEOFF"</pre> <p>Turns Off page tracking.</p>
@VKB	<p>Popup the virtual keyboard.</p> <p>Syntax:</p> <pre>"@VKB"</pre> <p>Example:</p> <pre>SEND COMMAND Panel,"@VKB"</pre> <p>Pops-up the virtual keyboard.</p>
WAKE	<p>Force the panel out of screen saver mode.</p> <p>Syntax:</p> <pre>"WAKE"</pre> <p>Example:</p> <pre>SEND COMMAND Panel,"WAKE"</pre> <p>Forces the panel out of the screen saver mode.</p>

Input Commands

These Send Commands are case insensitive.

Input Commands	
^CAL	<p>Put panel in calibration mode.</p> <p>Syntax:</p> <pre>" '^CAL' "</pre> <p>Example:</p> <pre>SEND COMMAND Panel, "'^CAL' "</pre> <p>Puts the panel in calibration mode.</p>
^KPS	<p>Set the keyboard passthru.</p> <p>Syntax:</p> <pre>" '^KPS-<pass data>' "</pre> <p>Variables:</p> <p>pass data:</p> <ul style="list-style-type: none"> <blank/empty> = Disables the keyboard. 0 = Pass data to G4 application (default). This can be used with VPC or text areas. 1 - 4 = Not used. 5 = Sends out data to the Master. <p>Example:</p> <pre>SEND COMMAND Panel, "'^KPS-5' "</pre> <p>Sets the keyboard passthru to the Master. Option 5 sends keystrokes directly to the Master via the Send Output String mechanism. This process sends a virtual keystroke command (^VKS) to the Master.</p> <p>Example 2:</p> <pre>SEND COMMAND Panel, "'^KPS-0' "</pre> <p>Disables the keyboard passthru to the Master.</p> <p>The following point defines how the parameters within this command work:</p> <ul style="list-style-type: none"> Accepts keystrokes from any of these sources: attached USB keyboard or Virtual keyboard.
^VKS	<p>Send one or more virtual key strokes to the G4 application.</p> <ul style="list-style-type: none"> Key presses and key releases are not distinguished except in the case of CTRL, ALT, and SHIFT. Refer to the Embedded Codes table on page 116 that define special characters which can be included with the string but may not be represented by the ASCII character set. <p>Syntax:</p> <pre>" '^VKS-<string>' "</pre> <p>Variable:</p> <p>string = Only 1 string per command/only one stroke per command.</p> <p>Example:</p> <pre>SEND COMMAND Panel, "'^VKS-'8' "</pre> <p>Sends out the keystroke 'backspace' to the G4 application.</p>

Embedded Codes

The following is a list of G4-compatible embedded codes:

Embedded Codes		
Decimal numbers	Hexidecimal values	Virtual keystroke
8	(\$08)	Backspace
13	(\$0D)	Enter
27	(\$1B)	ESC
128	(\$80)	CTRL key down
129	(\$81)	ALT key down
130	(\$82)	Shift key down
131	(\$83)	F1
132	(\$84)	F2
133	(\$85)	F3
134	(\$86)	F4
135	(\$87)	F5
136	(\$88)	F6
137	(\$89)	F7
138	(\$8A)	F8
139	(\$8B)	F9
140	(\$8C)	F10
141	(\$8D)	F11
142	(\$8E)	F12
143	(\$8F)	Num Lock
144	(\$90)	Caps Lock
145	(\$91)	Insert
146	(\$92)	Delete
147	(\$93)	Home
148	(\$94)	End
149	(\$95)	Page Up
150	(\$96)	Page Down
151	(\$97)	Scroll Lock
152	(\$98)	Pause
153	(\$99)	Break
154	(\$9A)	Print Screen
155	(\$9B)	YSRQ
156	(\$9C)	Tab
157	(\$9D)	Windows
158	(\$9E)	Menu
159	(\$9F)	Up Arrow
160	(\$A0)	Down Arrow
161	(\$A1)	Left Arrow
162	(\$A2)	Right Arrow
192	(\$C0)	CTRL key up
193	(\$C1)	ALT key up
194	(\$C2)	Shift key up

Panel Setup Commands

These commands are case insensitive.

Panel Setup Commands	
^MUT	<p>Set the panel mute state.</p> <p>Syntax:</p> <pre>''^MUT-<mute state>''</pre> <p>Variable:</p> <p>mute state= 0 = Mute Off and 1 = Mute On.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, ''^MUT-1''</pre> <p>Sets the panel's master volume to mute.</p>
@PWD	<p>Set the page flip password.</p> <ul style="list-style-type: none"> • Sets the level 1 password only. <p>Syntax:</p> <pre>''@PWD-<page flip password>''</pre> <p>Variables:</p> <p>page flip password = 1 - 50 ASCII characters.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, ''@PWD-Main''</pre> <p>Sets the page flip password to 'Main'.</p>
^PWD	<p>Set the page flip password.</p> <ul style="list-style-type: none"> • Password level is required and must be 1 - 4. <p>Syntax:</p> <pre>''^PWD-<password level>,<page flip password>''</pre> <p>Variables:</p> <p>password level = 1 - 4.</p> <p>page flip password = 1 - 50 ASCII characters.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, ''^PWD-1,Main''</pre> <p>Sets the page flip password on Password Level 1 to 'Main'.</p>
@RPP	<p>Reset the protected password.</p> <ul style="list-style-type: none"> • Resets the protected password to its default (1988). <p>Syntax:</p> <pre>''@RPP''</pre> <p>Example:</p> <pre>SEND_COMMAND Panel, ''@RPP''</pre> <p>Resets the protected Setup page password to '1988'.</p>
^VOL	<p>Set the panel volume.</p> <p>Syntax:</p> <pre>''^VOL-<volume level>''</pre> <p>Variable:</p> <p>volume level = 0 - 100. 100 is maximum volume setting.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, ''^VOL-50''</pre> <p>Set the panel volume to 50.</p>

Dynamic Image Commands

The following table describes Dynamic Image Commands.

Dynamic Image Commands	
^BBR	<p>Set the bitmap of a button to use a particular resource.</p> <p>Syntax:</p> <pre>"'^BBR-<vt addr range>,<button states range>,<resource name>' "</pre> <p>Variable:</p> <p>variable text address range = 1 - 4000.</p> <p>button states range = 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).</p> <p>resource name = 1 - 50 ASCII characters.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'^BBR-700,1,Sports_Image' "</pre> <p>Sets the resource name of the button to 'Sports_Image'.</p>
^RAF	<p>Adds any and all resource parameters by sending embedded codes and data.</p> <ul style="list-style-type: none"> Since the embedded codes are preceded by a '%' character, any '%' character contained in the URL must be escaped with a second '%' character (see example). The file name field (indicated by a %F embedded code) may contain special escape sequences as shown in the ^RAF, ^RMF - <i>Embedded Codes</i> table below. <p>Syntax:</p> <pre>"'^RAF-<resource name>,<data>' "</pre> <p>Variables:</p> <ul style="list-style-type: none"> resource name = 1 - 50 ASCII characters. data = Refers to the embedded codes, see the ^RAF, ^RMF - <i>Embedded Codes</i> section on page 119. <p>Example:</p> <pre>SEND_COMMAND Panel, "'^RAF-New Image,%P0%HAMX.COM%ALab/ Test%%5Ffile%Ftest.jpg' "</pre> <p>Adds a new resource.</p> <ul style="list-style-type: none"> The resource name is 'New Image' %P (protocol) is an HTTP %H (host name) is AMX.COM %A (file path) is Lab/Test_file %F (file name) is test.jpg. <p>Note that the %%5F in the file path is actually encoded as %5F.</p>
^RFR	<p>Force a refresh for a given resource.</p> <p>Syntax:</p> <pre>"'^RFR-<resource name>' "</pre> <p>Variable:</p> <p>resource name = 1 - 50 ASCII characters.</p> <p>Example:</p> <pre>SEND_COMMAND Panel, "'^RFR-Sports_Image' "</pre> <p>Forces a refresh on 'Sports_Image'.</p>

Dynamic Image Commands (Cont.)	
^RMF	<p>Modifies any and all resource parameters by sending embedded codes and data.</p> <ul style="list-style-type: none"> Since the embedded codes are preceded by a '%' character, any '%' character contained in the URL must be escaped with a second '%' character (see example). The file name field (indicated by a %F embedded code) may contain special escape sequences as shown in the <i>^RAF, ^RMF - Embedded Codes</i> section on page 119. <p>Syntax:</p> <pre>"'^RMF-<resource name>,<data>'"</pre> <p>Variables:</p> <ul style="list-style-type: none"> resource name = 1 - 50 ASCII characters data = Refers to the embedded codes, see the <i>^RAF, ^RMF - Embedded Codes</i> section on page 119. <p>Example:</p> <pre>SEND_COMMAND Panel,"'^RMF-Sports_Image,%ALab%%5FTest/ Images%Ftest.jpg'"</pre> <p>Changes the resource 'Sports_Image' file name to 'test.jpg' and the path to 'Lab_Test/Images'.</p> <p>Note that the %%5F in the file path is actually encoded as %5F.</p>
^RSR	<p>Change the refresh rate for a given resource.</p> <p>Syntax:</p> <pre>"'^RSR-<resource name>,<refresh rate>'"</pre> <p>Variable:</p> <p>resource name = 1 - 50 ASCII characters.</p> <p>refresh rate = Measured in seconds.</p> <p>Example:</p> <pre>SEND_COMMAND Panel,"'^RSR-Sports_Image,5'"</pre> <p>Sets the refresh rate to 5 seconds for the given resource ('Sports_Image').</p>

^RAF, ^RMF - Embedded Codes

The ^RAF and ^RMF commands add and modify any and all resource parameters by sending embedded codes and data:

```
"'^RAF-<resource name>,<data>'"
```

```
"'^RMF-<resource name>,<data>'"
```

The <data> variable uses the embedded codes described in the following table:

^RAF, ^RMF - Embedded Codes		
Parameter	Embedded Code	Description
protocol	'%P <0-1>'	Set protocol. HTTP (0) or FTP (1).
user	'%U <user>'	Set Username for authentication.
password	'%S <password>'	Set Password for authentication.
host	'%H <host>'	Set Host Name (fully qualified DNS or IP Address).
file	'%F <file>'	Full path to the location of the file or program that will return the resource. The path must be a valid HTTP URL minus the protocol and host. The only exception to this is the inclusion of special escape sequences and in the case of FTP protocol, regular expressions.
path	'%A <path>'	Set Directory path. The path must be a valid HTTP URL minus the protocol, host and filename. The only exception to this is the inclusion of special escape sequences and in the case of FTP protocol, regular expressions.

^RAF, ^RMF - Embedded Codes (Cont.)		
Parameter	Embedded Code	Description
refresh	'%R <refresh 1-65535>'	The number of seconds between refreshes in which the resource is downloaded again. Refreshing a resource causes the button displaying that resource to refresh also. The default value is 0 (only download the resource once).
newest	'%N <0-1>'	Set the newest file. A value of 1 means that only the most recent file matching the pattern is downloaded. Note: The 'newest file' option only applies to FTP Dynamic Images, and only those that have pattern matching as part of their filename. Neither 'newest file' nor pattern matching apply to HTTP Dynamic Images. When set, the panel will first pull a list of files matching the given pattern from the specified FTP server and path. The timestamps of the items in the list will be compared, with the newest one being displayed on the panel. This is useful for source devices that place a uniquely named still image in a folder at constant intervals, allowing the panel always to display the most recent one.
preserve	'%V <0-1>'	Set the value of the preserve flag. Default is 0. Currently preserve has no function.

Escape Sequences

The ^RAF and ^RMF commands support the replacement of any special escape sequences in the filename (specified by the %F embedded code) with the corresponding data obtained from the system as outlined in the table below:

Escape Sequences	
Sequence	Panel Information
\$DV	Device Number
\$SY	System Number
\$IP	IP Address
\$HN	Host Name
\$MC	Mac Address
\$ID	Neuron ID (<i>Only supported on panels that use ICSNet; ignored on all other panels</i>)
\$PX	X resolution of current panel mode/file
\$PY	Y resolution of current panel mode/file
\$ST	Current state
\$AC	Address code
\$AP	Address port
\$CC	Channel code
\$CP	Channel port
\$LC	Level code
\$LP	Level port
\$BX	X Resolution of Current button
\$BY	Y Resolution of Current button
\$BN	Name of Button

For instance, [http://www.amx.com/img.asp?device=\\$DV](http://www.amx.com/img.asp?device=$DV)
would become
<http://www.amx.com/img.asp?device=10001>.

Troubleshooting

This section describes the solutions to possible hardware/firmware issues that could arise during the common operation of a Modero touch panel.

Troubleshooting Information	
Symptom	Solution
My USB drivers has a yellow exclamation point and doesn't appear to be working.	<p>The USB driver was incorrectly installed and should be re-installed:</p> <ul style="list-style-type: none"> • Power up the panel without the USB cable connected to the panel. • Plug in the USB cable into the G4 panel. You should see a USB icon show up in the System Tray. • Double click on the icon to bring up the list of USB devices (you should see the "AMX USB LAN LINK" device in the list). • If the "Install Driver" dialog doesn't appear automatically, select the "Properties" button and then the "Update Driver" button. • When the Install Driver dialog does appear, click Next to accept all the default prompts. • The OS will state that the driver you are installing/updating does not have a digital signature. This is acceptable, so agree to continue the installation. • After installation is complete, the exclamation point should disappear.
When using G4 WebControl to communicate with a target panel, a VNC Server dialog appears on my screen.	<ul style="list-style-type: none"> • During a WebControl connection to a target panel, a G4 Authentication dialog will ask you to enter the assigned password for the panel before allowing access. • If prompted with a VNC Server dialog, enter the IP Address of the target panel. This can be found within the Setup > Protected Setup > System Connection page. This IP Address of the panel appears within the <i>IP Settings</i> section of this page • Enter the IP Address and click OK. When prompted with the G4 Authentication popup, enter the panel's WebControl password.
While attempting to communicate directly with the Virtual Master (on the PC) via a USB connection, I can't get my communication icon to turn Green.	<ul style="list-style-type: none"> • A Green communication icon indicates that a connection has been established to the target Master or target Virtual Master. • Launch NetLinx Studio and configure the Master Connection communication settings for a Virtual Master. • Navigate to the System connection page and toggle the <i>Type</i> field to USB. • Make sure the Type-A USB connector is securely connected to the PC. • Make sure the panel DOES NOT have the mini-USB connected and then TURN OFF the panel. • Once the panel has turned ON, THEN connect the mini-USB to the Program Port. The USB icon should appear in the system tray. If it doesn't, refer to the <i>Configuring and Using USB with a Virtual Master</i> section on page 25. • The panel may need a few minutes to detect the connection to the PC.
My Modero panel isn't appearing in my Workspace window.	<ul style="list-style-type: none"> • Verify that the System number is the same on both the NetLinx Workspace window and the System Connection page on the Modero panel. • Verify that you have entered the proper NetLinx Master IP and connection methods into the Master Connection section of the System Connection page.

Troubleshooting Information (Cont.)	
My Modero panel can't obtain a DHCP Address	<p>In requesting a DHCP Address, the DHCP Server can take up to a few minutes to provide the address.</p> <ul style="list-style-type: none"> • Verify that an active Ethernet connection is attached to the rear of the Modero before beginning these procedures. • Select Diagnostics > Network Address from the <i>Main</i> menu and verify the System number. • If the IP Address field is still empty, give the Modero a few minutes to negotiate a DHCP Address and try again.
My panel is not showing up in the Virtual Master's System list of connected devices.	<p>If a Virtual Master has already connected to the target panel, the G4 device retains the information of the previous Virtual Master System number.</p> <ul style="list-style-type: none"> • Reboot the panel without plugging the USB cable into the panel. • Configure NetLinx Studio for a Virtual Master connection. Note the System Number used in the <i>Edit Settings</i> window. • Stop communication on the Virtual Master by going to Settings > Stop Communications. • Click Yes to stop communication. • Select the System Number (from the Online Tree tab) and use a right mouse click to select Refresh System. This re-establishes communication with the Virtual Master. • Plug-in the mini-USB cable into the corresponding port on the panel. • Wait a few seconds and refresh the system. This re-establishes communication with the Virtual Master. The panel should now appear in the list of available devices.
My Connection Status button isn't blinking and it says the USB is connecting.	<p>"USB Connecting" is displayed when the panel tries to establish USB communication with the PC, either within the NetLinx Studio or TPDesign4 applications.</p> <ul style="list-style-type: none"> • Remove the USB connector from the panel and close any AMX applications. • Reboot the panel. • Launch the AMX application and attempt reconnect to the panel. • If using Studio for Virtual Master communication, establish a Virtual Master connection, verify the correct System number, stop communication with the Virtual Master, and then re-establish communication by refreshing the system. • After the panel powers-up, reconnect the USB connector to the panel. • Verify that you have a valid USB connection from within your System Tray.
My on-screen mouse cursor doesn't appear.	<ul style="list-style-type: none"> • The USB connections are not detected until after the particular USB connection plugged into the corresponding port on the panel and power is cycled to the panel.
Calibration is not working.	<ul style="list-style-type: none"> • After the Modero touch panel has been updated with a new firmware kit (downloaded to the panel through NetLinx Studio), the calibration could need to be reset. • Cycling power to the panel should provide a baseline calibration for the particular touch panel. Proceed to the Calibration page and reset the on-screen calibration.
Panel doesn't respond to my touches	<ul style="list-style-type: none"> • The protective cover makes calibration difficult because the user can't calibrate on specific crosshairs when the sheet is pressing on the whole LCD. • Verify that the protective laminate coating on the LCD has been removed before beginning any calibration process.

Troubleshooting Information (Cont.)	
The left border of the graphics has a crawling, dashed line.	<ul style="list-style-type: none"> On some units at some resolutions, wavy lines may appear across the entire screen. This has been seen on middle resolutions and is referred to as the "Mid Range Fallout" problem. This is due to the graphics controller settings in the firmware. Update to the latest v2.XX.XX firmware. Visit the www.amx.com > Tech Center > Downloadable Files > Firmware Files > Modero panels, and then download the KIT file to your computer.
NetLinx Studio only detects one of my connected Masters.	<p>Each Master is give a Device Address of 00000.</p> <ul style="list-style-type: none"> Only one Master can be assigned to a particular System number. When working with multiple Masters, open different instances of NetLinx Studio and assign each Master its own System value. Example: a site has an NXC-ME260/64 and an NI-4000. In order to work with both units. The ME260/64 can be assigned System #1 and the NI-4000 can then be assigned System #2 using two open sessions of NetLinx Studio 2.
I have more than one Modero panel connected to my System Master and only one shows up.	<p>Multiple NetLinx Compatible devices (such as Modero panels) can be associated for use with a single Master. Each Modero panel comes with a defaulted Device Number value of 10001. When using multiple panels, it can become very easy to overlook the need to assign different Device Number values to each panel.</p> <ul style="list-style-type: none"> Press and hold the grey Front Setup Access button for 3 seconds to open the Setup page. Press the Protected Setup button (located on the lower-left of the panel page), enter 1988 into the on-screen Keypad's password field, and press Done when finished. Enter a Device Number value for the panel into the Device Number Keypad. <i>The default is 10001 and the range is from 1 - 32000.</i>
After downloading a panel file or firmware to a G4 device, the panel behaves strangely.	<p>Symptoms include:</p> <ul style="list-style-type: none"> Having to repeat the download. Inability to make further downloads to the panel. May get "directory" errors, "graphics hierarchy" errors, etc.... indicating problems with the Flash memory. Panel will not boot, or gets stuck on "AMX" splash screen. Other problems also started after downloading to a new panel or a panel with a TPD4 file that takes up a considerable amount of the available Flash memory. <p>Cause:</p> <ul style="list-style-type: none"> If the G4 device already contains a large enough file, subsequent downloads will take up more space than is available and could often corrupt the Flash memory. The demo file that typically ships with G4 panels is one such file. <p>Solution:</p> <ul style="list-style-type: none"> DO NOT download TPD4 files (of large size) over the demo pages, or any other large TPD4 file. First download a small blank one page file to the G4 panel using the Normal Transfer option to send/download the page. Reboot the device, then do your regular file or firmware download.

Appendix A - Text Formatting

Text Formatting Codes for Bargraphs/Joysticks

Text formatting codes for bargraphs provide a mechanism to allow a portion of a bargraphs text to be provided dynamically generated information about the current status of the level (multistate and traditional). These codes would be entered into the text field along with any other text.

The following is a code list used for bargraphs:

Bargraph Text Code Inputs		
Code	Bargraph	Multi-State Bargraph
\$P	Display the current percentage of the bargraph (derived from the Adjusted Level Value as it falls between the Range Values)	Display the current percentage of the bargraph (derived from the Adjusted Level Value as it falls between the Range Values)
\$V	Raw Level Value	Raw Level Value
\$L	Range Low Value	Range Low Value
\$H	Range High Value	Range High Value
\$S	N/A	Current State
\$A	Adjusted Level Value (Range Low Value subtracted from the Raw Level Value)	Adjusted Level Value (Range Low Value subtracted from the Raw Level Value)
\$R	Low Range subtracted from the High Range	Low Range subtracted from the High Range
\$	Dollar sign	Dollar sign

The codes on a button may be modified by changing the text on a button via a VT command. When one of the Text Formatting Codes is encountered by the firmware, it is replaced with the correct value.

These values are derived from the following operations:

Formatting Code Operations	
Code	Operation
\$P	$(\text{Current Value} - \text{Range Low Value} / \text{Range High Value} - \text{Range Low Value}) \times 100$
\$V	Current Level Value
\$L	Range Low Value
\$H	Range High Value
\$S	Current State (if regular bargraph then resolves to nothing)
\$A	Current Value - Range Low Value
\$R	Range High Value - Range Low Value

Given a current raw level value of 532, a range low value of 500, and a high range value of 600, the following text formatting codes would yield the following strings as shown in the table below:

Example	
Format	Display
\$P%	32%
\$A out of \$R	32 out of 100
\$A of 0 - \$R	32 of 0 - 100
\$V of \$L - \$H	532 of 500 - 600

Text Area Input Masking

Text Area Input Masking can be used to limit the allowed/correct characters that are entered into a text area. For example, in working with a zip code, a user could limit the entry to a max length of only 5 characters but, with input masking, these could be limited to 5 mandatory numerical digits and 4 optional numerical digits.

A possible use for this feature is to enter information into form fields. The purpose of this feature is to:

- Force the use of correct type of characters (i.e. numbers vs. characters)
- Limit the number of characters in a text area
- Suggest proper format with fixed characters
- Right to Left
- Required or Optional
- Change/Force a Case
- Create multiple logical fields
- Specify range of characters/number for each field

With this feature, it is NOT necessary to:

- Limit a choice of selections
- Handle complex input tasks such as names, days of the weeks or months by name
- Perform complex validation such as Subnet Mask validation

Input Mask Character Types

These character types define what information is allowed to be entered in any specific instance. The following table lists what characters in an input mask will define what characters are allowed in any given position.

Character Types	
Character	Masking Rule
0	Digit (0 to 9, entry required, plus [+] and minus [-] signs not allowed)
9	Digit or space (entry not required, plus and minus signs not allowed)
#	Digit or space (entry not required; plus and minus signs allowed)
L	Letter (A to Z, entry required)
?	Letter (A to Z, entry optional)
A	Letter or digit (entry required)
a	Letter or digit (entry optional)
&	Any character or a space (entry required)
C	Any character or a space (entry optional)



NOTE

The number of the above characters used determines the length of the input masking box. Example: 0000 requires an entry, requires digits to be used, and allows only 4 characters to be entered/used.

Refer to the following Send Commands for more detailed information:

- **^BIM** - Sets the input mask for the specified addresses. (see the **^BIM** section on page 85).
- **^BMF** subcommand **%MK** - sets the input mask of a text area (see the **^BMF** section on page 87).

Input Mask Ranges

These ranges allow a user to specify the minimum and maximum numeric value for a field. **Only one range is allowed per field. Using a range implies a numeric entry ONLY.**

Input Mask Ranges	
Character	Meaning
[Start range
]	End range
	Range Separator

An example from the above table:

[0|255] This allows a user to enter a value from 0 to 255.

Input Mask Next Field Characters

These characters specify a list of characters that cause the keyboard to move the focus to the next field when pressed, instead of inserting the text into the text area.

Input Mask Next Field Char	
Character	Meaning
{	Start Next Field List
}	End Next Field List

An example from the above table:

{.} or {:} or {.:} Tells the system to proceed to the next text area input box after a user hits any of these keys.

Input Mask Operations

Input Mask Operators change the behavior of the field in the following way:

Input Mask Operators	
Character	Meaning
<	Forces all characters to be converted to lowercase
>	Forces all characters to be converted to uppercase
^	Sets the overflow flag for this field

Input Mask Literals

To define a literal character, enter any character, other than those shown in the above table (*including spaces, and symbols*). A back-slash ('\') causes the character that follows it to be displayed as the literal character. For example, **\A** is displayed just as the letter **A**. To define one of the following characters as a literal character, precede that character with a back-slash. Text entry operation using Input Masks.

A keyboard entry using normal text entry is straightforward. However, once an input mask is applied, the behavior of the keyboard needs to change to accommodate the input mask's requirement. When working with masks, any literal characters in the mask will be "skipped" by any cursor movement, including cursor keys, backspace, and delete.

When operating with a mask, the mask should be displayed with placeholders. The "-" character should display where to enter a character. The arrow keys will move between the "-" characters and allow them to be replaced. The text entry code operates as if it is in the overwrite mode. If the cursor is positioned on a character already entered and you type in a new (and valid) character, the new character replace the old character. Characters are not shifted.

When working with ranges specified by the [] mask, the keyboard allows entry of a number between the values listed in the ranges. If a user enters a value that is larger than the maximum, the maximum number of right-most characters is used to create a new, acceptable value.

- **Example 1:** If typing "125" into a field accepting 0-100, then the values displayed will be "1", "12", "25".
- **Example 2:** If the max for the field was 20, then the values displayed will be "1", "12", "5".

When data overflows from a numerical field, the overflow value is added to the previous field on the chain **if** the overflow character was specified. In the above example, if the overflow flag was set, the first example will place the "1" into the previous logical field and the second example will place "12" in the previous logical field. If the overflow field already contains a value, the new value will be inserted to the right of the current characters and the overflow field will be evaluated. Overflow continues to work until a field with no overflow value is set or no more fields remain (i.e. reached first field).

If a character is typed and that characters appear in the Next Field list, the keyboard should move the focus to the next field. For example, when entering time, a ":" is used as a next field character. When entering "1:2", the 1 is entered in the current field (hours) and then the focus is moved to the next field and 2 is entered in that field.

When entering time in a 12-hour format, entry of AM and PM is required. Instead of adding AM/PM to the input mask specification, the AM/PM should be handled within the NetLinx code. This allows a programmer to show/hide and provide discrete feedback for AM and PM.

Input mask output examples

The following are some common input masking examples:

Output Examples		
Common Name	Input Mask	Input
IP Address Quad	[0 255]{.}	Any value from 0 to 255
Hour	[1 12]{:}	Any value from 1 to 12
Minute/Second	[0 59]{:}	Any value from 0 to 59
Frames	[0 29]{:}	Any value from 0 to 29
Phone Numbers	(999) 000-0000	(555) 555-5555
Zip Code	00000-9999	75082-4567

URL Resources

A URL can be broken into several parts. For example, the URL *http://www.amx.com/company-info-home.asp* indicates that the protocol in use is **http** (HyperText Transport Protocol) and that the information resides on a host machine named **www.amx.com**. The image on that host machine is given an assignment name by the program of **company-info-home.asp** (*Active Server Page*).

The exact meaning of this name on the host machine is both protocol dependent and host dependent. The information normally resides in a file, but it could be generated dynamically. This component of the URL is called the file component, even though the information is not necessarily in a file.

A URL can optionally specify a port, which is the port number to which the TCP connection is made on the remote host machine. If the port is not specified, the default port for the protocol is used instead. For example, the default port for http is 80. An alternative port could be specified as: *http://www.amx.com:8080/company-info-home.asp*.



Any legal HTTP syntax can be used.

NOTE

Special Escape Sequences

The system has only a limited knowledge of URL formats in that it transparently passes the URL information onto the server for translation. A user can then pass any parameters to server side programs such as CGI scripts or active server pages. However, the system will parse the URL looking for special escape codes.

When it finds an escape code, it replaces that code with a particular piece of panel, button, or state information.

For example, "http://www.amx.com/img.asp?device=\$DV" would become

"http://www.amx.com/img.asp?device=10001".

Other used escape sequences include:

Escape Sequences	
Sequence	Panel Information
\$DV	Device Number
\$SY	System Number
\$IP	IP Address
\$HN	Host Name
\$MC	Mac Address
\$ID	Neuron ID
\$PX	X Resolution of current panel mode/file
\$PY	Y Resolution of current panel mode/file
\$BX	X Resolution of current button
\$BY	Y Resolution of current button
\$BN	Name of button
\$ST	Current state
\$AC	Address Code
\$AP	Address Port
\$CC	Channel Code
\$CP	Channel Port
\$LC	Level Code
\$LP	Level Port

Appendix B - Complex Script Support

Overview

In many cases, a user needs a touch panel user interface that utilizes a font applicable to the area for which its use is intended, and to accomplish this without needing to resort to images of properly formed text. This includes proper rendering of right-to-left languages such as, but not limited to, Arabic, Hebrew, Thai and Devangari (FIG. 71). The NXD-430, NXD-435, and TPDesign4 (v3.1 or higher) support complex script languages, to the extent that the True Type font currently selected for that state supports the language in question. TPDesign4 allows the user to type the desired text into a project, view it in G4Panel Preview, and download it to the panel.



Most languages can be entered into the state property field in TPDesign4 via the Windows language bar.



FIG. 71 Warning page in Arabic

In some cases, the user may need correct rendering of mixed left-to-right and right-to-left text, and may display both of these together in the same page (FIG. 72). Text edit boxes only operate left-to-right.

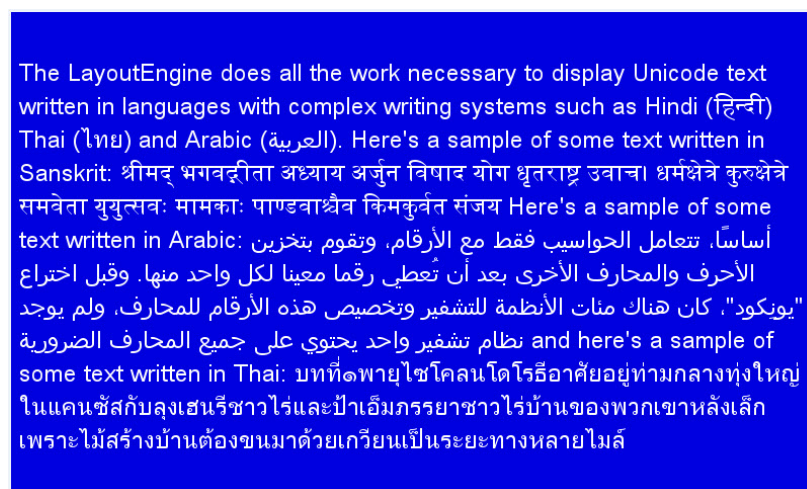


FIG. 72 Mixed left-to-right and right-to-left text

Some languages, notably Hindi and Tamil, are not supported by coded pages. These languages will display “???” for characters entered via the language bar, even if the selected font supports the language. Text in these languages can still be pasted via the clipboard or via the *Alt-`<Scan Code>`* method.



*For more information on TPDesign4 and its complex script support, please refer to the TPDesign4 (v3.0 or higher) Operation Reference Guide, available at **www.amx.com**.*



It's Your World - Take Control™